


Service Manual

Property of Liebherr-Werk Telfs GmbH

Crawler Tractors SERIES **4** Litronic

Table of Contents

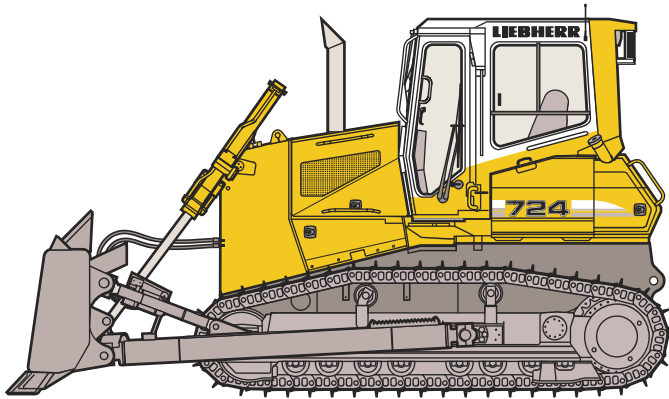

Book No.: -----

Name of Manual Owner:

1	General Information
2	Special Tools, Application Guidelines
3	Technical Data - Maintenance Guidelines
4	Engine
5	Coupling and Splitter Box
6	Travel Hydraulic
7	Working Hydraulic
8	Hydraulic Components
9	Electrical System - Plans and Components
10	Electrical System - Descriptions
11	Final Drive
12	Track Components
13	Attachments - front
14	Attachments - rear
15	Main Frame - Add On Components
16	Tank Arrangement
17	Operator`s Platform, Heater, Air Conditioner
18	Special Equipment
19	Additional Documentation

Section	Pages from→to	Title	Date of issue
0.1.00	1→8	Index	02.2010
1.0.00	1→2	Sub group index "General Information"	03.2007
1.1.00	1→2	Foreword and explanations	03.2007
1.2.00	1→14	Safety guidelines	01.2007
1.3.01	1→10	Service items	03.2006
1.3.02	1→2	Service items	01.2009
1.4.01	1→4	Tightening torques	05.2008
1.4.03	1→2	Conversion chart	01.2009
1.4.04	1→2	Tapping holes	01.2004
1.5.00	1→6	Storage guidelines	02.2010
1.6.00	1→2	Weights of Material	03.2009
2.0.00	1→2	Sub group index "Special Tools, Application Guidelines"	02.2008
2.1.00	1→20	Special tools	01.2010
2.2.00	1→6	Repair welding	02.2007
2.3.00	1→6	Installation instructions – slip ring seals	02.2010
3.0.00	1→2	Sub group index "Technical data - maintenance guidelines"	03.2007
3.1.20	1→2	Technical data	03.2006
3.1.21	1→2	Technical data	01.2007
3.1.22	1→4	Technical data	03.2009
3.1.23	1→4	Technical data	03.2009
3.1.30	1→2	Technical data	03.2006
3.1.31	1→4	Technical data	01.2009
3.1.40	1→2	Technical data	01.2008
3.1.50	1→2	Technical data	02.2008
3.1.60	1→2	Technical data	01.2009
3.1.61	1→2	Technical data	02.2009
3.2.20	1→2	Maintenance and inspection schedule	01.2009
3.2.21	1→4	Maintenance and inspection schedule	02.2010
3.2.60	1→4	Maintenance and inspection schedule	02.2010
3.3.20	1→8	Maintenance and inspection guidelines	03.2007
3.3.21	1→10	Maintenance and inspection guidelines	01.2010
3.4.00	1→6	Quick reference for machine adjustment	02.2009
3.5.20	1→4	Adjustment check list	01.2009
3.5.21	1→6	Adjustment check list	01.2009
3.5.30	1→6	Adjustment check list	01.2009
3.5.40	1→6	Adjustment check list	01.2009
3.5.50	1→6	Adjustment check list	01.2009
3.5.60	1→6	Adjustment check list	01.2009
3.5.61	1→6	Adjustment check list	01.2009

4.0.00	1→2	Sub group index "Engine"	03.2007
4.1.00	1→6	Data page	03.2007
4.2.00	1→4	Fan and cylinder configuration	03.2007
4.3.00	1→10	Installation kit Liebherr – Diesel particle filter	01.2009
4.4.00	1→4	Installation and check list for Diesel particle filter	05.2008
5.0.00	1→2	Sub group index "Coupling and splitterbox"	03.2007
5.1.00	1→2	Data page	02.2009
5.2.20	1→2	Coupling	01.2006
5.2.40	1→2	Coupling	02.2006
5.3.20	1→4	Splitterbox	01.2007
5.3.30	1→4	Splitterbox	01.2006
5.3.40	1→4	Splitterbox	02.2006
5.4.00	1→4	Couplings pump output	04.2008
6.0.00	1→2	Sub group index "Travel hydraulic"	03.2007
6.1.20	1→2	Data page	01.2009
6.1.30	1→2	Data page	01.2009
6.1.40	1→2	Data page	01.2008
6.2.20	1→6	Description	01.2006
6.2.21	1→6	Description	04.2008
6.2.22	1→6	Description	04.2008
6.2.30	1→6	Description	04.2008
6.2.40	1→8	Description	01.2009
6.2.50	1→8	Description	04.2008
6.2.60	1→8	Description	01.2009
6.2.61	1→8	Description	01.2009
6.3.20	1→8	Function	01.2008
6.3.21	1→8	Function	01.2009
6.3.22	1→8	Function	01.2009
6.3.30	1→8	Function	01.2008
6.3.31	1→8	Function	01.2008
6.3.32	1→8	Function	01.2009
6.3.40	1→10	Function	01.2009
6.3.50	1→10	Function	01.2009
6.3.60	1→10	Function	01.2009
6.4.20	1→12	Test and adjustment	05.2008
6.4.21	1→18	Test and adjustment	01.2009
6.4.60	1→18	Test and adjustment	05.2008
6.5.20	1→2	Component location	01.2006
6.5.21	1→2	Component location	01.2007
6.5.22	1→2	Component location	01.2007
6.5.30	1→2	Component location	03.2008

6.5.40	1→2	Component location	02.2006
6.5.50	1→2	Component location	02.2006
6.5.60	1→2	Component location	01.2009
6.5.61	1→2	Component location	01.2009
7.0.00	1→2	Sub group index "Working hydraulic"	03.2007
7.1.20	1→2	Data page	03.2009
7.1.30	1→2	Data page	03.2009
7.1.40	1→2	Data page	03.2009
7.2.20	1→4	Description	01.2007
7.2.21	1→4	Description	03.2009
7.2.30	1→4	Description	02.2008
7.2.40	1→4	Description	02.2008
7.2.50	1→4	Description	02.2008
7.2.60	1→4	Description	03.2006
7.2.61	1→4	Description	03.2007
7.3.20	1→10	Function	01.2008
7.3.21	1→10	Function	01.2008
7.3.22	1→10	Function	01.2008
7.3.30	1→10	Function	01.2008
7.3.31	1→10	Function	01.2008
7.3.40	1→12	Function	01.2008
7.3.50	1→10	Function	01.2008
7.3.60	1→10	Function	01.2008
7.3.61	1→10	Function	01.2009
7.4.20	1→8	Test and adjustment	05.2008
7.4.30	1→8	Test and adjustment	05.2008
7.4.40	1→10	Test and adjustment	05.2008
7.5.20	1→2	Component location	01.2006
7.5.21	1→2	Component location	01.2007
7.5.22	1→2	Component location	03.2009
7.5.23	1→2	Component location	03.2009
7.5.30	1→2	Component location	01.2006
7.5.40	1→2	Component location	02.2006
7.5.50	1→2	Component location	02.2006
7.5.60	1→2	Component location	03.2006
7.5.61	1→2	Component location	03.2006
8.0.00	1→2	Sub group index "Hydraulic components"	03.2007
8.1.20	1→8	Variable pump	03.2006
8.1.40	1→6	Variable pump	01.2009
8.2.20	1→4	Variable motor	01.2005
8.2.21	1→6	Variable motor	02.2008
8.2.22	1→6	Variable motor	02.2008
8.2.30	1→4	Variable motor	01.2006

Table of contents

8.2.31	1→6	Variable motor	03.2009
8.2.40	1→6	Variable motor	03.2007
8.2.50	1→6	Variable motor	02.2008
8.2.51	1→6	Variable motor	02.2008
8.3.20	1→8	Regulating pump	03.2009
8.3.21	1→6	Regulating pump	03.2009
8.3.30	1→6	Regulating pump	03.2006
8.3.31	1→10	Regulating pump	02.2009
8.3.60	1→6	Regulating pump	03.2006
8.4.20	1→4	Double gear pump– fan drive	03.2006
8.4.25	1→4	Gear motor – fan drive	03.2008
8.4.26	1→4	Gear motor – fan drive	03.2008
8.4.40	1→4	Double gear pump – Replenishing	02.2006
8.4.45	1→4	Axial piston fixed displacement motor – fan drive	02.2006
8.4.50	1→4	Double gear pump – Replenishing	02.2006
8.4.55	1→4	Gear motor – fan drive external oil cooler	02.2006
8.5.20	1→8	Pilot control valve	01.2008
8.5.21	1→8	Pilot control valve	01.2008
8.6.20	1→6	Control valve block	02.2006
8.6.21	1→6	Control valve block	01.2007
8.6.22	1→6	Control valve block	01.2007
8.6.40	1→6	Control valve block	03.2006
8.6.41	1→6	Control valve block	03.2006
8.7.00	1→12	Valves	02.2009
8.8.00	1→12	Hydraulic cylinder	01.2010
9.0.00	1→2	Sub group index "Electrical system – Plans and components"	03.2007
9.1.20	1→6	Code letter explanations	02.2010
9.1.30	1→8	Code letter explanations	02.2010
9.1.60	1→6	Code letter explanations	02.2009
9.2.20	1→2	Function list	02.2007
9.2.30	1→2	Function list	02.2007
9.2.40	1→2	Function list	03.2008
9.2.60	1→2	Function list	02.2009
9.3.20	1→2	Fuses, cross points, notes	02.2007
9.3.30	1→2	Fuses, cross points, notes	03.2007
9.3.40	1→2	Fuses, cross points, notes	03.2008
9.3.60	1→2	Fuses, cross points, notes	02.2007
9.4.20	1→16	Current flow diagram	02.2007
9.4.20	1/02	Current flow diagram Addendum	02.2007
9.4.20	2/02	Current flow diagram Addendum	02.2007
9.4.20	3/02	Current flow diagram Addendum	02.2007
9.4.20	15/02	Current flow diagram Addendum	02.2007
9.4.21	1→62	Current flow diagram	03.2008
9.4.22	1→76	Current flow diagram	03.2009

9.4.23	1→76	Current flow diagram	03.2009
9.4.30	1→22	Current flow diagram	02.2007
9.4.31	1→62	Current flow diagram	03.2008
9.4.40	1→18	Current flow diagram	03.2008
9.4.50	1→80	Current flow diagram	02.2010
9.4.51	1→80	Current flow diagram	02.2010
9.4.60	1→18	Current flow diagram	03.2006
9.4.61	1→80	Current flow diagram	02.2009
9.5.20	1→2	Instrument panel	01.2007
9.5.21	1→2	Instrument panel	03.2007
9.6.20	1→16	Component arrangement	05.2008
9.6.21	1→16	Component arrangement	05.2008
9.6.22	1→18	Component arrangement	02.2010
9.6.30	1→18	Component arrangement	02.2010
9.6.40	1→14	Component arrangement	02.2010
9.6.41	1→16	Component arrangement	02.2010
9.6.50	1→14	Component arrangement	02.2010
9.6.60	1→16	Component arrangement	05.2008
9.6.61	1→18	Component arrangement	02.2010
9.7.00	1→4	Travel joystick	02.2010
9.7.25	1→4	Inching - brake pedal	03.2007
9.7.26	1→4	Inching - brake pedal	04.2008
10.0.00	1→2	Sub group index "Electrical system descriptions"	01.2008
10.1.00	1→70	Application Software – travel drive	01.2010
10.2.00	1→20	Software PDL – Diesel particle filter	01.2010
11.0.00	1→2	Sub group index "Final drive"	03.2007
11.1.20	1→2	Data page	01.2010
11.1.30	1→2	Data page	01.2007
11.1.40	1→2	Data page	02.2008
11.1.50	1→2	Data page	01.2008
11.2.20	1→4	Design and function	03.2006
11.2.21	1→4	Design and function	01.2007
11.2.22	1→6	Design and function	02.2008
11.2.40	1→4	Design and function	03.2007
11.2.41	1→4	Design and function	03.2007
11.2.50	1→4	Design and function	04.2008
11.2.51	1→4	Design and function	05.2008
11.2.60	1→6	Design and function	03.2006
11.2.61	1→6	Design and function	02.2008
11.3.20	1→4	Sectional view	01.2006
11.3.21	1→4	Sectional view	03.2007
11.3.40	1→4	Sectional view	01.2009
11.3.41	1→4	Sectional view	01.2009

Table of contents

11.3.42	1→4	Sectional view	01.2009
11.3.50	1→4	Sectional view	01.2009
11.3.51	1→4	Sectional view	01.2009
11.3.60	1→4	Sectional view	01.2009
11.3.61	1→4	Sectional view	01.2009
12.0.00	1→2	Sub group index "Track components"	03.2007
12.1.00	1→2	Data page	02.2010
12.2.00	1→26	Description, function, wear and evaluation	03.2008
12.3.00	1→4	Inspection checklist	01.2010
12.3.01	1→6	Wear chart	01.2009
12.4.20	1→8	Track roller frame and idler unit	03.2009
12.4.50	1→8	Track roller frame and idler unit	02.2010
12.5.00	1→2	Track roller	01.2006
12.6.00	1→2	Carrier roller	02.2007
12.8.50	1→6	Tension unit	02.2007
12.8.60	1→6	Tension unit	03.2007
13.0.00	1→2	Sub group index "Working Attachments - front"	03.2007
13.1.00	1→6	Straight blade	02.2007
13.2.20	1→6	6 way blade	01.2008
13.4.40	1→6	Hydraulic cutting angle adjustment	01.2008
13.4.50	1→8	Hydraulic cutting angle adjustment	02.2008
13.4.60	1→6	Hydraulic cutting angle adjustment	01.2008
14.0.00	1→2	Sub group index "Attachments - rear"	03.2007
14.1.20	1→4	Ripper	01.2006
14.1.21	1→8	Ripper	02.2007
14.1.40	1→14	Ripper	01.2008
14.1.60	1→12	Ripper	01.2008
15.0.00	1→2	Sub group index "Main frame components"	03.2007
15.1.20	1→2	Cooler arrangement	01.2006
15.1.21	1→2	Cooler arrangement	01.2007
15.1.22	1→2	Cooler arrangement	01.2007
15.1.30	1→2	Cooler arrangement	03.2008
15.1.40	1→2	Cooler arrangement	02.2006
15.1.50	1→2	Cooler arrangement	03.2006
15.1.60	1→2	Cooler arrangement	01.2009
15.1.61	1→2	Cooler arrangement	01.2009
15.2.00	1→2	Hoist cylinder suspension	02.2006
15.3.20	1→2	Equalizer bar	01.2006
15.3.40	1→2	Equalizer bar	01.2006
15.3.50	1→2	Equalizer bar	02.2006
15.3.60	1→2	Equalizer bar	01.2010
15.4.20	1→2	Engine mount	01.2007

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**