


## Service Manual

Property of Liebherr-Werk Telfs GmbH

### Pipe Layers SERIES 4<sub>Litronic</sub>

#### Table of Contents

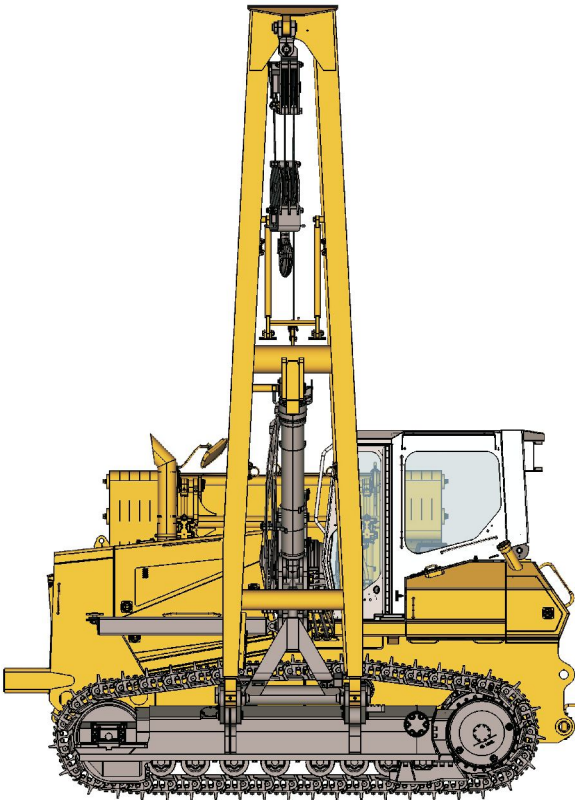

Book Nr.: -----

Name of Manual Owner:

-----

1	General
2	Tools and work instructions
3	Technical data and maintenance guidelines
4	Engine
5	Coupling and splitterbox
6	Travel hydraulic
7	Working hydraulic
8	Hydraulic components
9	Electrical system - Diagrams and components
10	Electrical system - descriptions
11	Final drive
12	Track components
13	Working attachment - front side
14	Working attachment
15	Main frame - Components
16	Tank arrangements
17	Operator's platform, heater air conditioning system
18	Special equipment
19	Additional documentation

## 0.1.00 Index

Section	Title	Date of issue
0.1.00	Index	03.2010
<b>1.0.00</b>	<b>Sub group index "General"</b>	<b>01.2008</b>
1.1.00	Foreword and explanation	01.2008
1.2.00	Safety regulations	05.2008
	Charts	
1.3.01	Tightening torques	05.2008
1.3.02	Conversion tables	01.2009
1.3.03	Tapping holes	01.2008
1.4.00	Conservation guidelines	02.2010
1.5.00	Material weights	03.2009
<b>2.0.00</b>	<b>Sub group index "Tools and work instructions"</b>	<b>01.2008</b>
2.1.00	Special tools	03.2010
2.2.00	Repair welding	03.2010
2.3.00	Installation instructions	03.2010
<b>3.0.00</b>	<b>Sub group index "Technical data and maintenance guidelines"</b>	<b>01.2008</b>
3.1.40	Technical data	06.2008
3.1.60	Technical data	06.2008
3.2.00	Maintenance and inspection schedule	03.2010
3.3.00	Maintenance and inspection instructions	03.2009
3.4.40	Adjustment checklist	03.2010
3.4.60	Adjustment checklist	03.2010
3.5.00	Test and adjustment tasks	03.2010
<b>4.0.00</b>	<b>Sub group index "Engine"</b>	<b>01.2008</b>
4.1.40	Data page	01.2008
4.1.60	Data page	05.2008
4.2.00	Fan and cylinder arrangement	05.2008
<b>5.0.00</b>	<b>Sub group index "Coupling and splitterbox"</b>	<b>01.2008</b>
5.1.00	Data page	05.2008
5.2.40	Coupling	05.2008
5.2.60	Coupling	05.2008
5.3.40	Pump distributor gear	01.2008
5.3.60	Pump distributor gear	05.2008
5.4.40	Coupling Pump output	05.2008
5.4.60	Coupling Pump output	06.2008
<b>6.0.00</b>	<b>Sub group index "Travel hydraulic"</b>	<b>01.2008</b>
6.1.00	Data page	05.2008
6.2.40	Design	06.2008
6.2.60	Design	06.2008
6.3.40	Function	01.2009
6.3.60	Function	01.2009
6.4.00	Repair work and troubleshooting	05.2008
6.5.40	Component arrangement	01.2008
6.5.60	Component arrangement	05.2008

<b>Section</b>	<b>Title</b>	<b>Date of issue</b>
<b>7.0.00</b>	<b>Sub group index "Working hydraulic"</b>	<b>01.2008</b>
7.1.00	Data page	05.2008
7.2.00	Design	05.2008
7.3.00	Function	02.2010
7.4.00	Repair work and troubleshooting	05.2008
7.5.40	Component arrangement	01.2008
7.5.60	Component arrangement	05.2008
<b>8.0.00</b>	<b>Sub group index "Hydraulic components"</b>	<b>01.2008</b>
8.1.40	Var. displacement pump	01.2008
8.1.60	Var. displacement pump	01.2009
8.2.40	Var. displacement motor	01.2008
8.2.60	Var. displacement motor	05.2008
8.3.00	Regulating pump – Working hydraulic	05.2008
8.4.40	Double gear pump – replenishing / fan drive	05.2008
8.4.60	Double gear pump – replenishing	05.2008
8.5.40	Gear motor – fan drive	05.2008
8.5.60	Gear motor – fan drive	05.2008
8.6.00	Pilot control – working hydraulic	01.2008
8.7.00	Control valve block	05.2008
8.8.00	Valves	02.2009
8.9.00	Hydraulic cylinder	05.2008
8.10.00	Control motor hoist gear – winch	05.2008
<b>9.0.00</b>	<b>Sub group index "Electrical system – Diagrams and components"</b>	<b>05.2008</b>
9.1.40	Wiring diagram, component description, function list	01.2010
9.1.41	Wiring diagram, component description, function list	01.2010
9.1.60	Wiring diagram, component description, function list	01.2010
9.1.61	Wiring diagram, component description, function list	01.2010
9.2.00	Instrument panel	05.2008
9.3.40	Component arrangement	02.2010
9.3.60	Component arrangement	02.2010
9.4.00	Joystick	02.2010
9.5.00	Inching- / brake pedal	02.2009
<b>10.0.00</b>	<b>Sub group index "Electrical system - descriptions"</b>	<b>01.2009</b>
10.1.00	Diagnostics software LinDiag	01.2010
10.2.00	Software PDL – Diesel particle filter	01.2010
<b>11.0.00</b>	<b>Sub group index "Final drive"</b>	<b>01.2008</b>
11.1.40	Data page	05.2008
11.1.60	Data page	05.2008
11.2.40	Design and Function	01.2008
11.2.60	Design and Function	05.2008
11.3.40	Sectional view - final drive	01.2008
11.3.60	Sectional view - final drive	01.2009

<b>Section</b>	<b>Title</b>	<b>Date of issue</b>
<b>12.0.00</b>	<b>Sub group index "Track components"</b>	<b>01.2008</b>
12.1.00	Data page	05.2008
12.2.00	Design, function, wear and evaluation	01.2008
12.3.00	Test report	01.2010
12.3.01	Wear chart	01.2009
12.4.40	Track roller frame and idler unit	05.2008
12.4.60	Track roller frame and idler unit	03.2010
12.5.00	Track roller	01.2008
12.6.00	Carrier roller	01.2008
12.7.40	Tension unit	06.2008
12.7.60	Tension unit	06.2008
<b>13.0.00</b>	<b>Sub group index "Working attachment – front side"</b>	<b>01.2008</b>
<b>14.0.00</b>	<b>Sub group index "Working attachment"</b>	<b>01.2008</b>
14.1.00	Hoist gear	05.2008
14.2.00	Rope winch	02.2009
<b>15.0.00</b>	<b>Sub group index "Main frame – Components"</b>	<b>01.2008</b>
15.1.40	Cooler arrangement	01.2008
15.1.60	Cooler arrangement	05.2008
15.2.40	Equalizer bar	01.2008
15.2.60	Equalizer bar	05.2008
15.3.40	Engine mounting	01.2008
15.3.60	Engine mounting	05.2008
<b>16.0.00</b>	<b>Sub group index "Tank arrangements"</b>	<b>01.2008</b>
16.1.40	Hydraulic tank	05.2008
16.1.60	Hydraulic tank	05.2008
16.2.40	Fuel tank	01.2008
16.2.60	Fuel tank	05.2008
16.3.40	Battery compartment	01.2008
16.3.60	Battery compartment	02.2009
<b>17.0.00</b>	<b>Sub group index "Operator's platform, heater, air conditioning system"</b>	<b>01.2008</b>
17.1.00	Operator's platform	01.2008
17.2.00	Heater with blower	01.2008
17.3.00	Air conditioning system	01.2008
17.4.00	Operator's seat – air cushioned	01.2008
17.5.00	Throttle control	05.2008
<b>18.0.00</b>	<b>Sub group index "Special equipment"</b>	<b>01.2009</b>
18.1.00	Refueling pump	03.2009
18.3.00	Add-on installations – Pipe chamfering device and welding generator	01.2009

<b>Section</b>	<b>Title</b>	<b>Date of issue</b>
<b>19.0.00</b>	<b>Sub group index "Additional documentation"</b>	<b>01.2008</b>
6.3.40	Schematic – Travel hydraulic	05.2008
6.3.60	Schematics – Travel hydraulic	05.2008
7.3.40	Schematic – Working hydraulic	02.2010
7.3.60	Schematic – Working hydraulic	02.2010
9.1.40	Wiring diagram, component description, function list	01.2010
9.1.41	Wiring diagram, component description, function list	01.2010
9.1.60	Wiring diagram, component description, function list	01.2010
9.1.61	Wiring diagram, component description, function list	01.2010

# 1 General

## 1.0.00 Sub group index - General

<b>Foreword and explanations .....</b>	<b>1.1</b>
<b>Safety regulations .....</b>	<b>1.2</b>
<b>Charts .....</b>	<b>1.3</b>
Tightening torques .....	1.3.01
Conversion tables .....	1.3.02
Tapping holes .....	1.3.03
<b>Conservation guidelines .....</b>	<b>1.4</b>
<b>Material weights.....</b>	<b>1.5</b>

**BUY NOW**

**Then Instant Download  
the Complete Manual  
Thank you very much!**