

---

# W110/W110TC

## WHEEL LOADER

# Workshop Manual

Print N° 604.13.487.00 English  
II - 2005



THIS ALERT SYMBOL SIGNALS IMPORTANT MESSAGES INVOLVING YOUR SAFETY.

Read and heed carefully the safety instructions listed and follow the precautions recommended to avoid potential risks and to safeguard your health and your safety.

You will find this symbol in the text of this Manual referred to the following key words:



### WARNING

Cautions directed to avoid improper repair interventions involving potential consequences for the operator's safety.



### DANGER

These warnings qualify specifically potential dangers for the safety of the operator or other persons directly or indirectly involved.

### IMPORTANT NOTICE

All maintenance and repair interventions explained in this Manual **must be performed exclusively by the Service Organization of the Manufacturer**, observing strictly the instructions explained using, whenever necessary, the recommended specific tools.

Whoever performs the operations reported without following exactly the precautions is responsible on his own, for the damages that may result.

Neither the Factory nor any Organizations in its Distribution Network, including but not limited to national, regional or local distributors, are responsible for any liability arising from any damage resulting from defects caused by parts and/or components not approved by the Factory for use in maintaining and/or repairing products manufactured or merchandized by the Factory.

In any case, no warranty of any kind is made or shall be imposed with respect to products manufactured or merchandized by the Factory, when failures are caused by the use of parts and/or components not approved by the Factory.

---

---

## AVOID ACCIDENTS

Most accidents and injuries occurring in industry, on the farm, at home or on the road, are caused by the failure of some individual to follow simple and fundamental safety rules or precautions. For this reason, **MOST ACCIDENTS CAN BE PREVENTED** by recognizing the real cause and taking the necessary precautions, before the accident occurs.

Regardless of the care used in design and construction of any type of equipment, there may be conditions that cannot be completely safeguarded against without interfering with reasonable accessibility and efficient operation.

A careful operator is the best insurance against accidents. The complete observance of one simple rule would prevent many thousands serious injuries each year.

This rule is: Never attempt to clean, lubricate or adjust a machine while it is in motion.



### **WARNING**

**On machines having hydraulically, mechanically and/or cable controlled equipment (such as showels, loaders, dozers, scrapers etc.) be certain the equipment is lowered to the ground before servicing, adjusting and/or repairing.**

**If it is necessary to have the equipment partially or fully raised to gain access to certain items, be sure the equipment is suitably supported by means other than the hydraulic lift cylinders, cable and/or mechanical device used for controlling the equipment.**

---

## **SUMMARY**

<b>GENERALITIES .....</b>	<b>Section 0</b>
<b>ENGINE .....</b>	<b>Section 1</b>
<b>TRANSMISSION .....</b>	<b>Section 2</b>
<b>BRAKE SYSTEM.....</b>	<b>Section 3</b>
<b>STEERING SYSTEM .....</b>	<b>Section 4</b>
<b>BUCKET BOOMS AND FRAME .....</b>	<b>Section 5</b>
<b>EQUIPMENT HYDRAULIC SYSTEM .....</b>	<b>Section 6</b>
<b>ELECTRICAL SYSTEM .....</b>	<b>Section 7</b>
<b>CAB .....</b>	<b>Section 8</b>

**SECTION 0**  
**GENERALITIES**

**INDEX**

SUBJECT	PAGE
SAFETY RULES .....	0-1
SPECIFICATIONS .....	0-8
DIMENSIONS AND WEIGHT .....	0-19
TABLE OF FLUID CAPACITIES .....	0-20
UNITS OF MEASURE .....	0-21
STANDARD TORQUE SPECIFICATION .....	0-23
LOCTITE PRODUCT CHART .....	0-27

## SAFETY RULES

### GENERALITIES

Read this Manual carefully before starting, operating, maintaining, fuelling or servicing the machine.

Read and comply with all safety precautions before any intervention.

Do not allow unauthorised personnel to operate or service this machine.

Do not wear rings, wrist watches, jewellery, loose or hanging garments, such as ties, torn clothing, scarves, unbuttoned or unzipped jackets that can get caught in moving parts. Wear certified safety clothes such as: hard hat, non-slip footwear, heavy gloves, ear protection, safety glasses, reflector vests, respirators. Ask your employer about specific safety equipment requirements.

Keep the operator's compartment, step plates, grab-rails and handles clean and clear of foreign objects, oil, grease, mud or snow to minimize the danger of slipping or stumbling. Remove mud or grease from your shoes before attempting to mount or operate the machine.

Do not jump on or off the machine. Always keep both hands and one foot, or both feet and one hand in contact with steps and grab rails.

Do not use controls or hoses as hand holds when climbing on or off the machine. Hoses and controls are movable parts and do not provide solid support. Besides, controls may be inadvertently moved and cause unexpected movement of the machine or its attachments.

Never operate the machine or its attachments from any position other than sitting in the driver's seat.

Keep head, body, limbs, hands and feet inside the operator's compartment at all times to reduce exposure to external hazards .

Be careful of possible slippery conditions of the steps and hand rails as well as of the ground around the machine.

Do not leave the machine until it has come to a complete stop.

Check the seat safety belt at least twice per year and replace it if it shows signs of wear, fraying or other weakness that could lead to failure.

### STARTING

**NEVER START OR OPERATE A FAILED MACHINE.** Before operating the machine, always ensure that any unsafe condition has been satisfactorily corrected.

Check brakes, steering and attachment controls before moving off. Report any malfunctioning part or system to the maintenance managers for proper action.

Ensure all protective guards and panels as well as all safety devices provided are in place and in good operating condition.

Ensure that nobody is in the machine operating range before moving off or operating the attachment. **WALK COMPLETELY AROUND** the machine before mounting. Sound the horn.

Before starting machine, check, adjust and lock the driver's seat for maximum comfort and control of the machine.

Fasten your seat belts(when fitted).

Obey all flag signals and signs.

Due to the presence of flammable fluids on the machine, never check or fill fuel tanks or accumulator batteries near fires, open flames, or sparks.

**REMEMBER THAT SPECIAL STARTING FLUIDS ARE FLAMMABLE.** Scrupulously follow recommendations printed on the containers and in this Manual.

**DO NOT PUNCTURE OR BURN CONTAINERS.**

Containers must be stored in fresh, well ventilated places and out of the reach of unauthorised persons. Strictly follow the instructions provided by the Manufacturer.

Never use these products near fires, open flames, or sparks.

### OPERATING

Check wheel and rim retainers before each working shift. If necessary, tighten to the torque specified.

Do not run the engine of this machine in closed buildings without proper ventilation capable to remove harmful exhaust gases.

Roll Over Protective Structures (ROPS) are required on wheel or crawler loaders, dozers, or graders. **NEVER OPERATE** the machine if such protective structure is removed.

Keep the operator's compartment free of foreign objects, especially if not firmly secured. Never use the machine to transport objects, unless proper securing points are provided.

**DO NOT CARRY RIDERS ON THE MACHINE**

Study and familiarize with escape routes alternate to normal exit routes.

According to law provisions, seat belts must be fitted with Roll Over Protection Structures or cabs. Keep safety belts fastened during operation.

For your personal safety, do not climb on or off the machine while it is in motion.

Make sure that bystanders are clear of the machine operating range before starting the engine and operating the attachment. Sound the horn. Obey all indications provided by flags, signs and signals.

**DO NOT COAST OR FREEWHEEL** down hills. Engage the most suitable gear speed to keep the machine under control.

## SAFETY RULES

Do not operate the machine if you are extremely tired or feel ill. Be especially careful towards the end of the working shift.

Do not operate a machine with misadjusted brakes.

Operate the machine at low speed which can ensure complete control at all times.

Travel slowly over very rough terrain, slopes or near drop-offs, in congested areas or on frozen or slippery surfaces.

When backing, always look to where the machine is to be moved. Be alert of the position of bystanders. Should someone enter the work area, STOP THE MACHINE.

Maintain a safe distance from other machines or obstacles to ensure required visibility conditions. Give way to loaded machines.

Maintain a clear vision of the surroundings of the travel or work area at all times. Keep cab windows clean and repaired.

When machines are operating in tandem, the pusher (rear) must be equipped with the appropriate deflectors to protect the front unit driver against the air stream coming from the blower fan.

When pulling or towing through a cable or chain, do not start suddenly at full throttle. Take-up slack carefully.

Carefully inspect the towing items for flaws or problems before proceeding.

Avoid kinking or twisting chains or cables. Do not pull through a kinked chain or cable as the high stresses existing in this condition may induce failures. Always wear heavy gloves when handling chains or cables.

Chains and cables should be securely anchored. Anchor points should be strong enough to withstand the expected load. Keep anyone clear of anchor points and cables or chains.

**DO NOT PULL UNLESS THE OPERATOR'S COMPARTMENTS OF THE MACHINES INVOLVED ARE PROPERLY PROTECTED AGAINST POSSIBLE BACKLASH IN CASE OF CABLE OR CHAIN FAILURE OR DETACHMENT.**

Be alert of soft ground conditions close to newly constructed walls. The fill material and machine weight may cause the wall to collapse.

In darkness, check area of operation carefully before moving in with the machine. Use all lights provided. Do not move into low visibility areas.

If the engine tends to stall for whatever reason under load or at idle, immediately report this problem to the maintenance managers for proper action. Do not operate the machine until this condition has been corrected.

On machines fitted with suction radiator fans, regularly check the engine exhaust system for leaks, as exhaust fumes expelled towards the operator are toxic.

Operators must know thoroughly the performances of the machine they are driving.

When working on slopes or near sudden level drops in the terrain, avoid areas where ground is loose or soft since overturn or loss of machine control could result.

If noise level is high and continuously exceeds 90 dBA over 8 hours at the operator's ear, wear approved ear protection in compliance with local regulations.

Where counterweights are provided, do not operate the machine if they have been removed.

When transporting a loaded bucket, keep it as rolled-back and low as possible for maximum visibility, stability and safety of the machine. Ground speed should be adequate to the load and ground conditions.

The load must always be properly arranged in the bucket; move with extreme care when transporting oversized loads.

Use only the type of bucket recommended for the machine and the materials to be handled. Follow the recommendations concerning loading capacity, arrangement of the materials, characteristics of the ground and job to be performed.

Do not lift and move loads overhead where persons are standing or working, nor downhill when working crosswise on slopes. In this case, the bucket should be unloaded on the uphill side, whenever possible.

Start and stop the machine carefully when the bucket is full. Do not move off without first reducing engine speed.

Overtaking manoeuvres should be performed only when absolutely necessary and unavoidable. Beware possible uneven terrains, poor visibility, presence of other machinery or persons out of sight.

Operate the machine at a speed adequate to the working site conditions and in any case slow enough to ensure complete control at all times.

Check instruments at start-up and frequently during operation. Stop the machine immediately should any malfunction be signalled.

Never use the bucket as a man lift or to carry riders.

Never use the machine as a work platform or scaffolding, nor for other improper use (such as pushing railway cars, trucks or other machines).

Pay attention to people within the machine operating range. Load trucks from the driver's side whenever possible.

Prior to operating the machine, check which obstacles and/or difficulties you will encounter, such as narrow streets, overhead doors, cables, piping, as well as ground, bridges, paving and ramps bearing load limitations.

In case of road transfers, find out beforehand what conditions are likely to be encountered, such as size restrictions, heavy traffic, paving type, etc.. Beware fog, smoke or dust that obscure visibility.

When crossing gullies or ditches, move at an angle with reduced speed after ensuring ground conditions will permit a safe traverse.

## SAFETY RULES

Always inspect the working area to identify potential risks such as: inclines, overhangs, trees, demolition rubble, fires, ravines, steep slopes, rough terrain, ditches, crowns, ridge trenches, heavy traffic, crowded parking and service areas, closed ambients. In such conditions, proceed with extreme care.

Whenever possible, avoid going over obstacles such as very rough terrain, rocks, logs, steps, ditches, railroad tracks. When obstructions must be crossed, do so with extreme care and at an angle, if possible. Slow down and select a lower gear. Ease up to the break-over point, pass the balance point slowly and ease down the other side.

In steep down-hill operation, do not allow the engine to over-speed. Select the proper gear before starting down grade.

Avoid crosswise hill travel, whenever possible. Drive up and down the slope. Should the machine start slipping sideways when going uphill, steer and turn machine front immediately downhill.

The gradient you may attempt to overcome is limited by factors such as ground conditions, load being handled, machine type and speed, and visibility.

There is no substitute for good judgement and experience when working on slopes.

Avoid operating the attachment too close to an overhang or high wall, either above or below the machine. Beware of caving edges, falling objects and landslips. Remember that such hazards are likely to be concealed by bushes, undergrowth and such.

When pushing-over trees, the machine must be equipped with proper overhead guards. Never drive a machine up the roots, particularly while the tree is being felled. Use extreme care when pushing over any tree with dead branches.

Avoid faggots, bushes, logs and rocks.

NEVER DRIVE OVER THEM, nor over any other surface irregularities that discontinue adherence or traction with the ground, especially near slopes or drop-offs.

Be alert to avoid changes in traction conditions that could cause loss of control. AVOID driving on ice or frozen ground when working on steep slopes or near drop-offs.

Working in virgin rough terrains is characterized by the presence of all the perils and risks listed above. In these conditions, it is emphasised the danger represented by large tree limbs (possibly falling on the machine), large roots (which may act as a leverage under the machine when up-rooted and cause the unit to overturn), etc.

### STOPPING

When the machine is to be stopped for whatever reason, do so following the instructions given in chapters “**Stopping the machine**” and “**Shutting off the engine**” in the Operation and Maintenance Instruction Manual.

Always remember to move the gearshift lever to the neutral position and engage the control lever lock for safety purposes.

Apply the parking brake (if fitted).

NEVER LEAVE THE MACHINE UNATTENDED with the engine running.

Prior to leaving the operator’s seat, and after making sure that all people are clear of the machine, always slowly lower the attachment until resting it safely to the ground

Park the machine in a non-operating and no-traffic area. Park on firm level ground. If this is not possible, position the machine at a right angle to the slope, making sure there is no danger of uncontrolled sliding. Apply the parking brake.

If parking in traffic lanes cannot be avoided, provide appropriate flags, barriers, flares and signals as required to adequately warn the oncoming drivers.

Keep head, body, limbs, hands and feet clear of the dozer, arms, bucket or ripper when raised.

Always switch off the battery isolator switch before servicing the machine in whatever manner (i.e., cleaning, repairing, maintaining, etc.). Do the same when the machine is to remain parked for prolonged periods of time to avoid accidental or unauthorized starting.

Never lower the attachments other than sitting in the operator’s seat. Sound the horn. Make sure that nobody is within the machine operating range. Lower the attachment slowly. DO NOT USE FLOAT POSITION in case of hydraulic controls.

Securely block the machine and lock it every time you leave it unattended. Return keys to authorized security. Perform all necessary operations as detailed in the Operation and Maintenance Instruction Manual. Apply the parking brake (if fitted) every time you leave the machine.

## MAINTENANCE

### GENERALITIES

Before operating or performing any intervention on the machine:

- carefully read all the norms contained in this Manual;
- read and observe all safety plates and instructions located on the machine.

Do not allow unauthorized personnel to service the machine. Do not carry out any maintenance work without prior authorization. Follow all recommended maintenance and service procedures.

Keep the operator’s compartment free of loose objects that are not properly secured.

Do not wear rings, wrist watches, jewellery, loose or hanging garments, such as ties, torn clothing, scarves, unbuttoned or unzipped jackets that can get caught in moving parts.



## SAFETY RULES

Wear certified safety clothes such as: hard hat, no-slip footwear, heavy gloves, ear protection, safety glasses, reflector vests, respirators. Ask your employer about specific safety equipment requirements.

Never service the machine with someone sitting in the driver's seat, unless this person is an authorized operator assisting in the maintenance being carried out.

Keep the operator's compartment, step plates, grab rails and handles clear of foreign objects, oil, grease, mud or snow to minimize the danger of slipping or stumbling.

Clean mud or grease from your shoes before climbing on the machine or driving it.

Never attempt to operate the machine or its attachments from any position other than sitting in the operator's seat.

Never stand under the boom.

Should it be necessary to move the attachment through the hydraulic controls for maintenance purposes, remember that this should be done while sitting in the operator's seat. Before starting the machine or moving its attachment, apply the brakes, sound the horn and call that you are about to manoeuvre. Raise the attachment slowly.

Always lock machine arms or any other parts that must be lifted for maintenance purposes using adequate external means. Do not allow anyone to pass near or even below a raised yet unlocked attachment. If you are not absolutely sure about your safety, do not stay under a raised attachment, even if it is locked.

Do not place body, limbs, or fingers near articulated cutting edges of uncontrolled machine parts or deprived of the necessary guards, unless they are suitably and safely locked.

Never perform any work on the machine with the engine running, except when this is specifically required. Do not wear loose clothing, jewellery or such near moving parts.

When service or maintenance require access to areas that cannot be reached from the ground, use a ladder or step platform conforming to regulations in force. If such means are not available, use machine grab rails and steps. Always perform all service or maintenance work with the greatest care and attention.

Shop and/or field service platforms or ladders should be manufactured in accordance with safety regulations in force.

Disconnect batteries and label all controls to warn that service work is in progress. Block the machine and all attachments to be raised.

Do not check or fill fuel tanks, batteries and accumulators, nor use the starting liquid if you are smoking or near open flames. These fluids are flammable!

**BRAKES ARE INOPERATIVE** when manually released for servicing. Provisions must be made to maintain control of the machine using suitable blocks or other means.

The fuel filler pipe nozzle must be constantly kept in contact with the filler neck. Keep this contact from the beginning to the end of the fuelling operation to avoid possible generation of sparks due to static electricity.

Tow the machine only from the attaching points provided. Use care in making connections and ensure pins and/or bolt are firmly secured before pulling. Stay clear of drawbars, cables or chains under load.

To move a failed machine, use a trailer or a low platform truck, if available. In case towing is needed, use all necessary signals required by local regulations, and follow directions provided in this Manual.

Load/unload the machine from transporter on firm level ground providing safe support to the wheels of the truck or trailer. Use strong access ramps, with adequate height and angle. Keep the loading platform free of mud, oil or slippery materials.

Tie the machine securely to the platform of the truck or trailer and opportunely wedge machine wheels or tracks as required.

Never align holes or slots using your fingers; always use appropriate aligning tools.

Remove all sharp edges and burrs from re-worked parts.

Use only approved and effectively grounded auxiliary power sources for heaters, battery chargers, pumps and similar equipment to reduce electrical shock hazard.

Lift and handle heavy components using hoisting devices of appropriate capacity. Ensure the sling has been correctly applied. Use lifting eyes if provided. Pay attention to bystanders.

Never pour gasoline or diesel fuel into open, wide and low containers. Never use gasoline, solvents or other flammable fluids to clean parts. Use proprietary certified non-flammable, non-toxic solvents only.

When using compressed air to clean parts, wear safety glasses with side shields. Limit pressure to max 2 bars, in accordance with local safety regulations in force.

Do not run the engine in closed buildings without proper ventilation capable to remove lethal fumes.

Do not smoke, use open flames or produce sparks nearby while refuelling the unit or handling highly flammable materials.

Do not use any flame as a light source during maintenance work or to look for leaks anywhere on the machine.

Make sure that all tools provided are in good condition at all times. **NEVER USE** tools with mushroomed or damaged heads. Always wear eye protections.

Move with extreme care when working under the machine, its attachments, and even on or near them. Always wear protective safety equipment as required, such as hard hat, goggles, safety shoes, and ear plugs.



## SAFETY RULES

In case tests during which the engine should be kept running, a qualified operator must sit in the driver's seat with the mechanic in sight at all times. Place the transmission in neutral, apply and lock the brakes. **KEEP HANDS OFF MOVING PARTS.**

In case of field service, move machine to level ground, if possible, and block it. If work on an incline cannot be advised, block the machine and its attachments securely. Move damaged to level ground as soon as possible.

Do not trust worn and/or kinked chains and cables. Never use them for lifting or pulling. Always wear heavy gloves to handle chains or cables.

Be sure chains and cables are firmly fastened and that anchor points are strong enough to withstand the expected load. Nobody should stay near the anchor points, cables or chains. **DO NOT PULL OR TOW UNLESS THE OPERATOR'S COMPARTMENTS OF THE MACHINES INVOLVED ARE FITTED WITH THE PROPER GUARDS AGAINST BACKLASH IN CASE OF CABLE OR CHAIN FAILURE OR DETACHMENT.**

Keep the area where maintenance is carried out **CLEAN** and **DRY** at all times. Clean immediately all water and oil spillages.

Do not pile up oily or greasy rags as they represent a major fire hazard. Always store them in closed metal containers.

Before starting the machine or its attachment, check, adjust and lock the operator's seat. Also ensure that nobody is within the machine operating range. Sound the horn.

Rust inhibitors are volatile and flammable. Use them only in well ventilated areas. Keep open flames away - **DO NOT SMOKE** - Store containers in a cool well ventilated place where they could not be reached by unauthorised people.

Do not carry loose objects in your pockets that might fall unnoticed into open compartments.

Wear safety glasses with side shields, hard hat, safety shoes, heavy gloves when metal particles or similar may be ejected and hit you.

Wear appropriate protective equipment such as dark safety glasses, hard hat, protective clothing, special gloves and footwear while welding. Nearby persons should also wear dark safety glasses even if they are not welding. **DO NOT LOOK THE WELDING ARC WITHOUT PROPER EYE PROTECTION.**

Become acquainted with all your jacking equipment and its capacity. Remember that the jacking point on the machine should be appropriate for the load applied. Also, be sure the support area of the jack at the machine and on the ground is appropriate and stable.

Any load supported by a jack represents a possible hazard. Always transfer the load onto appropriate support means according to local or national safety requirements before proceeding with service or maintenance work.

Metal cables get frayed after prolonged use. Always wear appropriate protections (heavy gloves, goggles, etc.) while handling them.

Handle all parts carefully. Keep hands and fingers away from gaps, gears, and similar. Always use and wear the appropriate protections.

Water can build up in pneumatic systems from condensate moisture due to changes in atmospheric conditions. If necessary, drain such deposits following instructions.

Before carrying out any maintenance work or service, lock the machine articulated frame modules using the appropriate safety device. Remember to remove and store it properly at the end of work.

If the machine is equipped with hydraulic brakes, make sure that the reservoir is always filled up to the correct level.

Always block all wheels, front and rear, before bleeding the braking system or disconnecting control hoses and/or cylinders.

### STARTING

Do not run the engine in closed buildings without proper ventilation capable to remove lethal exhaust fumes.

Do not place head, body, limbs, feet, hands or fingers near rotating fans or belts.

Be especially careful near blower fans.

**REMEMBER THAT THE STARTING FLUID IS HIGHLY FLAMMABLE.** Follow recommendations provided in this Manual and printed on the containers. Containers must be stored in a cool, well ventilated place out of the reach of unauthorised persons.

**DO NOT PUNCTURE OR BURN CONTAINERS.**

### ENGINE

Loosen the radiator cap very slowly to relieve system pressure before removing it. Always top-up coolant level with the engine off.

Avoid that flammable materials could touch exhaust parts. If not possible, provide necessary protections.

Do not refuel with the engine running, especially if hot, as this increases fire hazard.

Never attempt to check or adjust fan belt tensions when the engine is running.

Do not adjust the fuel pump when the machine is motion.

Do not lubricate the machine with the engine running.

Do not run the engine with air intakes, door or guards open.

## SAFETY RULES

### ELECTRICAL SYSTEM

Always disconnect the batteries prior to any intervention on the machine or its electrical system (cleaning, repair, maintenance).

Should booster batteries be used, remember to connect ends of the booster cables in the proper manner: (+) to (+) and (-) to (-). Do not short-circuit terminals. Thoroughly follow instructions given in this Manual.

Before any intervention, make sure that the battery isolator switch is off.

**BATTERY GAS IS HIGHLY FLAMMABLE.** Leave the battery compartment open during recharging to improve ventilation. Never check battery charge by placing metal objects across the posts. Keep sparks or open flames away from batteries. Do not smoke near the battery to prevent explosion hazard.

Before any intervention, make sure that there are no fuel or electrolyte leakages. If any, correct prior to proceeding with further work. Do not recharge batteries in confined spaces. Ensure proper ventilation is provided to avoid accidental explosions due to build-up of gas released during charging.

### HYDRAULIC SYSTEM

Pressure fluid escaping from a very small hole can be almost invisible and still have sufficient force to penetrate the skin. Always check any suspected pressure leaks using a piece of cardboard or wood. **DO NOT USE HANDS.** If injured by escaping fluid, obtain medical attention immediately or serious infection or reaction may develop.

Stop the engine and relieve all system pressure before removing panels, housings, caps, plugs or covers.

Always use gauges of adequate capacity (end-of-scale reading) and follow recommended procedures.

### TOOLS

Always keep head, body, limbs, feet, or hands away from bucket, blade, or ripper when in the raised position. Prior to any intervention, install all safety devices according to current regulations. In case the attachment is to be operated through the machine hydraulic system for maintenance purposes, remember to do so only while sitting in the driver's seat. Make sure that nobody is within the machine operating range. Before operating the attachment, alert people by sounding the horn and by voice. Raise the attachment slowly.

Do not use the machine to transport loose objects, unless proper devices to this purpose are provided.

Clutches and brakes of this machine as well as auxiliary devices and attachments (such as drive cylinder or winch control valves) should always be properly adjusted in accordance with the instructions provided by the Manufacturer. Never perform adjustments with the engine running, except when this is specifically required by the relevant procedures.

### TYRES AND WHEELS

Make sure that the tyre inflation pressure corresponds to specifications issued by the Manufacturer. Regularly check inflation pressure.

Should pressure be changed, do this while staying on the tyre side and at a safe distance.

Pressure checks should always be carried out with the machine unloaded and cold tyres.

Never use reconditioned tyre rims, since possible weldings, incorrect heat-treatments or repairs can weaken the wheels and cause damages or failures.

Do not cut, nor weld rims with inflated tyres installed.

The spare tyre should be inflated only enough to keep the rim components assembled. Remember that when not installed on the disc, a tyre inflated to maximum pressure can **explode**.

Therefore, maximum care must be taken when handling a fully inflated tyre.

Before servicing tyres, block all wheels, front and rear. After jacking up the machine, block it in the raised position using suitable stands conforming to current safety regulations.

Deflate the tyre before removing objects from the tyre tread.

Never inflate tyres with flammable gas: explosions and severe bodily injuries may result.

When starting your work shift, check for loose wheel or rim bolts and brackets and retighten to correct torque as necessary.

## SAFETY RULES

### DECOMMISSIONING THE MACHINE

For the decommissioning of the machine, the availability of particular tooling (hoists, hydraulic presses, containers for liquids etc.) is required as well as specific tools listed in the Repair Manuals, available from **FIAT KOBELCO** Dealers.

This has the purpose of avoiding that during disassembly operations, dangerous situations may arise both for the personnel involved and the environment.

In the machine are present:

- Fluids under pressure (hydraulic system, cooling system etc.)
- Gases (air conditioning system and accumulator, if installed)
- Mechanical devices mounted under pressure (track tensioner etc.)
- Heavy machine components (frames, blades, buckets etc.)



### WARNING

- **The decommissioning of the machine must be performed exclusively by personnel trained, qualified and authorised to perform such operation.**
- **Start the disassembly of hydraulic components only after the same, the hydraulic oil and lubricants have fully cooled-off and after all residual pressures have been released, as described by the Repair Instruction Manual.**
- **Prior to proceeding with disassembly operations, comply with the *GENERAL SAFETY RULES* and drain each components of the machine filled with fluids, both in the reservoirs and the relevant systems.**



### WARNING

**Ensure that the attachment is safely resting on to the ground before repairing, adjusting, or servicing machines fitted with hydraulically, mechanically or cable controlled attachments (such as excavators, loaders, dozers, scrapers, etc.). Should it be necessary to partially or fully raise the hydraulically, mechanically, or cable controlled attachment to gain access to certain items, make sure the attachment is adequately retained in the raised position by means other than the hydraulic lift cylinders, cable and/or mechanical devices used for controlling it.**

## SPECIFICATIONS

### ENGINE - EMISSION

Model	F4GE0484E
Fuel	#2 Diesel (#1 & 2 Mixture Permitted For Cold Temperature)
Number of Cylinders	4
Bore and Stroke	4.29" (104 mm) x 5.20" (132 mm)
Displacement	275 cu. in. (4.5 Liters)
Electrical System	24 Volts
Batteries	(2) 12 Volts
Alternator	70 Amp
Compression Ratio	17.5 to 1
Fuel Pump	
Air Cleaner	Dry Type Elements With Warning Restriction Indicator
Oil Filter Full Flow	Replaceable Cartridge
Lubrication	Positive Pressure
Cooling System	Mid-mount Air/Water
Power	
- Gross (per SAE J1995)	119 hp (89 kW) Maximum
- Net (per SAE J1349)	110 hp (82 kW) Maximum
Torque, Max.	
- Gross (per SAE J1195)	355 lb-ft (481 Nm) @ 1400 RPM
- Net (per SAE J1349)	336 lb-ft (455 Nm) @ 1400 RPM
Valve clearance (Engine cold)	
- Intake valves	0.267 mm (0.011 inch)
- Exhaust valves	0.572 mm (0.023 inch)

### Governor

Complies with 1996 US EPA and CARB Heavy Duty Non-Road Emissions for 100-750 hp (75-560 kW) engines.

**POWER TRAIN****TRANSMISSION**

Make	ZF			
Model	4WG130			
Ratio	1 <sup>st</sup>	2 <sup>nd</sup>	3 <sup>rd</sup>	4 <sup>th</sup>
Forward	4.012	2.024	1.088	0.619
Reverse	3.804	1.919	1.031	-

**TORQUE CONVERTER**

Make	ZF
Model	06.004.08
Stall Ratio	2.549:1

**SPEEDS:** mph (km/h)

	1 <sup>st</sup>	2 <sup>nd</sup>	3 <sup>rd</sup>	4 <sup>th</sup>
(15.5 x 25 L2/L3 Tires)				
- Forward	4.1 (6.5)	7.9 (12.7)	13.9 (22.4)	22.4 (36.1)
- Reverse	4.3 (6.9)	8.3 (13.4)	14.6 (23.4)	
(17.5 x 25 L2/L3 Tires)				
- Forward	4.3 (6.9)	8.3 (13.3)	14.5 (23.4)	23.4 (37.6)
- Reverse	4.5 (7.2)	8.7 (14.0)	15.2 (24.5)	

**AXLES**

	Front	Rear
- Differential Ratio	2.917	2.917
- Planetary Ratio	6.400	6.400
- Final Axle Ratio	18.67	18.67

Make	ZF
Model	Front MTL3065 Rear MTL3065

**BRAKES**

Hydraulic, wet four-wheel disc. One brake pedal, pedal applies brakes and electrically neutralizes power flow to wheels with transmission disconnect switch activated. The brake pedal applies brakes only when transmission disconnect switch is not activated. Hydraulic brake valve for front and rear split system. Spring applied/hydraulic released disc parking brake on transmission output shaft neutralizes power flow to wheels when it is engaged.

Brake Area of Service Brakes	184 in <sup>2</sup> (0.119 m <sup>2</sup> )/Hub
Brake Area of Parking Brake	9.0 in <sup>2</sup> (58 cm <sup>2</sup> )
Brake Pressure (@ 30 sec. Setting method)	Front: 899 psi (6200 kPa) Rear : 856 psi (5900 kPa)

**ACCUMULATOR DATA**

Cut In	2275 psi (15686 kPa)
Cut Out	2800 psi (19305 kPa)
Low Pressure Warning	1500 psi (10342 kPa)
Transmission Declutch	350 psi (2413 kPa)
Charge Pressure (N <sub>2</sub> )	800 psi (5516 kPa) Rear : 856 psi (5900 kPa)

**TIRES**

17.5 R 25 XTLA TL★	50 psi Front (345 kPa)	40 psi Rear (275 kPa)
17.5 R 25 XHA TL★	50 psi Front (345 kPa)	40 psi Rear (275 kPa)
17.5 R 25 GP-2B ★	50 psi Front (345 kPa)	40 psi Rear (275 kPa)

## HYDRAULICS AND STEERING

- Reservoir:** Filtered vent with relief on hydraulic reservoir maintains 3-5 psi (20-34 kPa) on reservoir. Full time 10 micron return filters furnish only clean oil to all components of the system.
- Valves:** Closed-center, load sensing circuit, positive low pressure regeneration for bucket dump. Remote control hydraulic power assist with electromagnet detents.
- Inlet section gives steering priority with maximum pressure of 3500 psi (24132 kPa). Bucket section gives bucket priority. Relief valve provides maximum loader pressure of 3625 psi (25,000 kPa).
- Loader control valve section contains float circuitry.
- Senses steering demand to control oil flow to loader valve or steering valve as required by steering demand.
- System:** A variable displacement piston pump is used to supply oil to the integrated loader and steering hydraulic system.
- Pump displacement 4.33 in<sup>3</sup>/rev (71 cc/rev).  
35.4 GPM @ 2000 RPM @ 2750 psi  
(134 l/min @ 2000 RPM @ 18961 kPa)
- Pump uses full displacement at pressures up to 1800 psi. At pressures above 1800 psi the pump destrokes (reduces its displacement) to prevent increasing the hydraulic torque load. This allows more power for the drivetrain in critical or severe applications without sacrificing hydraulic force.
- Steering Section*  
Center pivot articulated steering - front and rear wheels always track. Two hydraulic cylinders controlled by a hydrostatic steering gear and a priority valve.
- The steering Orbitrol provider 3.9 turns lock-to-lock. Lock-to-lock time at high idle is 1.75 sec.



**Hydraulic Cylinder:****Dump:**

(Z-Bar, XR) 4.50 dia x 20.84 stroke x 2.50 rod  
(114.3 mm dia x 529.2 mm stroke x 63.5 mm rod)

(TC) 3.75 dia x 36.32 stroke x 2.25 rod  
(95.2 mm dia x 922.4 mm stroke x 57.2 mm rod)

**Lift:** 4.00 dia x 30.82 stroke x 2.25 rod  
(101.6 mm dia x 783.0 mm stroke x 57.2 mm rod)

**Steer:** 2.50 dia x 18.21 stroke x 1.375 rod  
(63.5 mm dia x 462.5 mm stroke x 35 mm rod)

**Diameter of Hydraulic Inlet and Outlet Ports:**

One Inlet 2.0" Split Flange (50.8 mm)

One Outlet 1.0" Split Flange (25.4 mm)

**Maximum Oil Velocity at Hydraulic Pump @ 2000 RPM:**

Outlets 14.4 ft/sec (4.40 m/sec)

**CAPACITIES****Cooling System:**

5.8 US/gal (22 liters) to fill system

Gallons Ethylene Glycol (Prestone) required:

2.1 US/gal (7.8 liters) for 0 °F

2.5 US/gal (9.5 liters) for -20 °F

3.1 US/gal (11.7 liters) for -40 °F

**Fuel Tank:**

50.0 US/gal (189 liters) Usable Fuel

**Engine:**Crankcase Only

12 quarts (11.4 liters)

Crankcase and Filter

13 quarts (12.3 liters)

**Transmission:**

6.78 US/gal (26 liters) initial capacity

5.0 US/gal (18.9 liters) service (w/filter)

**Axles:****Front/Rear**

Total/Axle

23.2 quarts (22 liters)

**Hydraulic Reservoir:**Reservoir, oil only

15.0 US/gal (56.8 liters)

Reservoir, oil plus air

23.8 US/gal (90.1 liters)

Total System

30.0 US/gal (113.6 liters)

**SOUND LEVEL DATA****Emission Engine****Sound Level (Arithmetic Average) dBA**

	<u>Cab Closed</u>	<u>Cab Open</u>	<u>Canopy</u>
--	-------------------	-----------------	---------------

Exterior Sound Level @ 15 meters  
per SAE J88 SEP80

Stationary - Rated Speed	-	-	-
Stationary - High Idle	-	-	-
Moving	-	-	-
IMI	-	-	-
Component Cycling	-	-	-

Operator's Station Sound Level  
per SAE J919 JUN86

Stationary - Rated Speed	-	-	-
Stationary - High Idle	-	-	-
Moving	-	-	-
IMI	-	-	-
Component Cycling	-	-	-

**Time Weighted Average Sound Level (Leq) dBA**

	<u>Cab Closed</u>	<u>Cab Open</u>	<u>Canopy</u>
--	-------------------	-----------------	---------------

Operator's Station Work Cycle  
per SAE J1166 MAR85  
(no blowers)

	-	-	-
--	---	---	---

**Emission Engine****Sound Level (Arithmetic Average) dBA**

	<u>Cab Closed</u>	<u>Cab Open</u>	<u>Canopy</u>
Exterior Sound Level @ 15 meters per SAE J88 SEP80			
Stationary - Rated Speed	-	-	-
Stationary - High Idle	-	-	-
Moving	-	-	-
IMI	-	-	-
Component Cycling	-	-	-

Operator's Station Sound Level  
per SAE J919 JUN86

Stationary - Rated Speed	-	-	-
Stationary - High Idle	-	-	-
Moving	-	-	-
IMI	-	-	-
Component Cycling	-	-	-

**Time Weighted Average Sound Level (Leq) dBA**

	<u>Cab Closed</u>	<u>Cab Open</u>	<u>Canopy</u>
Operator's Station Work Cycle per SAE J1166 MAR85 (no blowers)	-	-	-
Sound levels per (in dBA) 2000/14/EC 98/37/EC (ISO 6395, 6396, 3744)			
	<u>Interior LpA</u>	<u>Exterior LwA</u>	
Combined Dynamic (Test Average)	70.7	103.8	
Decal Value	71	105	

**Note** – Rated speed of engine is 2000 rpm and High - Idle is 2160 2220 rpm.

The option **w Enhanced Sound Package** will be developed at the begin of March.  
The standard machine will be w/o Enhanced Sound Package.

**COMPONENT SPECIFICATIONS**

<b>ITEM</b>	<b>MODEL</b>	<b>SIZE</b>
Injector Pump	VE6/12F1000	
Primary Fuel Filter	43.061.000.53	
Engine oil filter	LF16015 JD	
Air filter assembly	G100376	10 in. Diameter
Starter	EV	24 volt 4 kw
Alternator	NCB1	24 v, 70 amp
Hydraulic Pump	A10V085	5.19 cu. In./rev (85 cc/rev)
Hydraulic Oil Filter Assembly	HM K013582, HM K0531 170 w/ride control	
Head Assy.	P178778	
Element	P165823	
Hyd. control 2 Lever	P/N C0640-10014	
Hyd. control Joystick Hyd. control 3 Lever	4TH6F P/N 08-350-759 C0640-10013	
Hyd. control Joystick + 1 Lever	4TH6F+2TH6 P/N 08-350-759 + P/N 08-350-766	
Loader Control Valve - 2 Spool ZB	M6-1044-00/2M6-15	
Loader Control Valve - 2 Spool TC	M6-1047-00/2M6-15	
Loader Control Valve - 3 Spool ZB	M6-1045-00/3M6-15	
Loader Control Valve - 3 Spool TC	M6-1048-00/2M6-15	

**BUY NOW**

**Then Instant Download  
the Complete Manual  
Thank you very much!**