


STIHL 031, 032

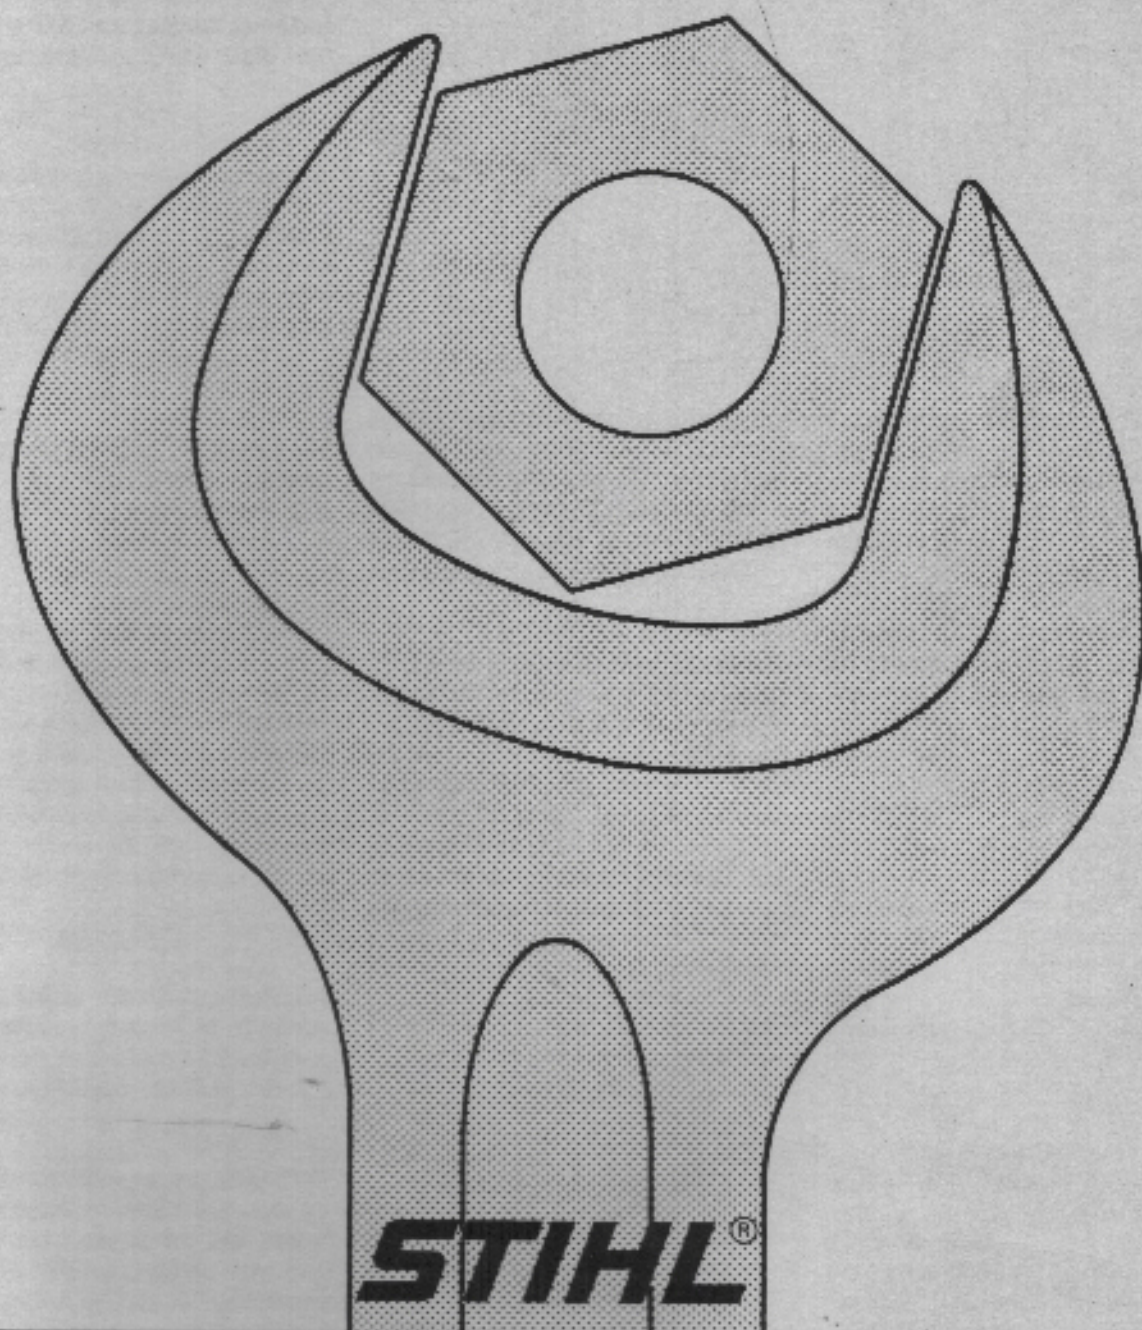

SERVICE MANUAL 032 AV (031 AV, 030 AV)

SPECIAL TOOL MANUAL

FOREWORD

This service manual covers model 032 chain saws from machine No. 532 9921 onward (start of production) and can thus be used as a basis for professional overhauls and repairs.

The previous service manual for models 030 AV and 031 AV has been discontinued. As the models are substantially identical in their engineering design, the repair procedures in this manual can also be used for models 031/030.


Differences in construction have been dealt with separately and identified by the supplement "031 (030)".

In the event of faults it is quite possible that a single condition may have several causes. It is therefore advisable to consult the "Troubleshooting Charts" in all chapters when tracing faults. We also recommend you make use of the exploded views in the illustrated parts lists when carrying out repairs.

Our technical information bulletins give details of engineering changes which have been introduced since publication of this service manual.

This service manual and all technical information bulletins are intended exclusively for the use of STIHL servicing dealers and staff and must not be passed on to third parties.

Assembly stand

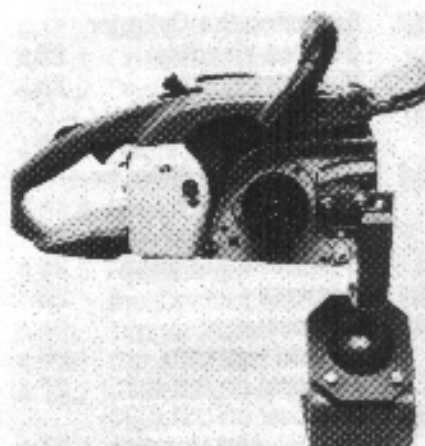

Repair work is made considerably easier if the chain saw is mounted on assembly stand 5910 850 3100. The saw is quickly attached to the stand by means of the two bar mounting studs and collar nuts.

While on the assembly stand the saw can be swivelled into any required position to suit the repair in question. This not only has the advantage of keeping the component in the best position for the repair but also leaves both hands free for the work and thus effects a considerable time saving.

Special tool manual



Our special tool manual illustrates and lists the part numbers of all available machine-related tools as well as general purpose tools for all machines.

The special tool manual is available in various languages and can be ordered by quoting the appropriate part number listed hereunder.

German	0455 901 0023
English	0455 901 0123
French	0455 901 0223
Spanish	0455 901 0323
Yugoslav	0455 901 0423
Swedish	0455 901 0523
Italian	0455 901 0723
Portuguese	0455 901 1223

STIHL®

Andreas Stihl
Postfach 1760
D-7050 Waiblingen
West Germany

CONTENTS

1.	Specifications - 032	5	3.3.1	Exposing the Cylinder (Heated Handles)	23	3.8.2	Vacuum Test	38
1.1	Specifications - 031 (030)	8	3.4	Visual Inspection	23	3.8.3	Leakage Testing the Crankcase - 031 (030)	38
			3.5	Exposing the Cylinder - 031 (030)	23	3.8.4	Replacing the Oil Seals	39
			3.5.1	Exposing the Cylinder - 031 (030)				
2.	Clutch, Chain Drive and Chain Brake	9		Heated Handles	25	4.	Ignition System	
2.1	Clutch and Chain Sprocket	9	3.6	Cylinder and Piston	26	4.1	Construction	40
2.1.1	Construction and Operation	9	3.6.1	Removal	26	4.2	Description of Operation	40
2.1.2	Troubleshooting Chart	10	3.6.1.1	Removal, Heated Handles	26	4.2.1	General	40
2.1.3	Disassembly and Repair	11	3.6.2	Removal on 031 (030)	27	4.2.2	Breaker-Controlled Magneto Ignition	40
2.1.3.1	Standard Clutch with 3 Springs	11	3.6.2.1	Removal on 031 (030) with Heated Handles	27	4.2.3	Transistor-Controlled Magneto Ignition	42
2.1.3.2	Standard Clutch with Ring Spring	12	3.6.3	Visual Inspection	27	4.3	Troubleshooting Chart	43
2.1.3.3	Quickstop Clutch (with Isolating Clutch)	12	3.6.4	Installation	27	4.3.1	Breaker-Controlled Ignition	43
2.1.4	Installation	13	3.6.4.1	Installation with Heated Handles	30	4.3.2	Electronic Ignition	44
2.1.4.1	Standard Clutch	13	3.6.5	Installation on 031 (030)	30	4.4	Spark Plug	45
2.1.4.2	Quickstop Clutch (with Isolating Clutch)	13	3.6.5.1	Installation on 031 (030) with Heated Handles	30	4.4.1	Description of Operation	45
2.2	Chain Brake	14	3.7	Crankcase, Crankshaft	31	4.4.2	Troubleshooting Chart	45
2.2.1	Construction and Operation	14	3.7.1	Removal of Crankshaft	31	4.4.3	Checking and Cleaning Spark Plug	45
2.2.1.1	Band Brake	14	3.7.1.1	Removal of Crankshaft (Heated Handles)	33	4.4.4	Installation of Spark Plug	46
2.2.1.2	Shoe Brake	15	3.7.2	Removal of Crankshaft - 031 (030)	34	4.5	Ignition Lead	46
2.2.2	Troubleshooting Chart	15	3.7.2.1	Removal of Crankshaft on 031 (030) with Heated Handles	34	4.5.1	Description of Operation	46
2.2.3	Disassembly and Repair	16	3.7.3	Visual Inspection	34	4.5.2	Removal of Ignition Lead on 032 with Heated Handles	46
2.2.3.1	Band Brake	16	3.7.4	Installation of Crankshaft	34	4.5.3	Removal of Ignition Lead 031 (030)	47
2.2.3.2	Shoe Brake	17	3.7.4.1	Installation of Crankshaft (Heated Handles)	35	4.5.4	Visual Inspection	47
2.2.4	Installation	18	3.7.5	Installation of Crankshaft - 031 (030)	36	4.5.5	Installation of Ignition Lead (Heated Handles)	47
2.2.4.1	Band Brake	18	3.7.5.1	Installation of Crankshaft on 031 (030) with Heated Handles	36	4.5.6	Installation of Ignition Lead - 031 (030)	47
2.2.4.2	Shoe Brake	19				4.6	Ground Lead	48
3.	Engine	20	3.8	Leakage Testing the Crankcase	36	4.6.1	Description of Operation	48
3.1	Construction	20	3.8.1	Pressure Test	37	4.6.2	Checking the Ground Lead	48
3.2	Troubleshooting Chart	20						
3.3	Exposing the Cylinder	21						

4.6.3	Exposing the Ground Lead	48	4.11	Contact Set	56	5.3	Removal of Rope Rotor	67
4.6.4	Exposing the Ground Lead - 031 (030)	48	4.11.1	Construction	56	5.3.1	Visual Inspection	67
4.7	Stop Switch	48	4.11.2	Description of Operation	56	5.3.2	Replacing the Starter Rope	67
4.7.1	Description of Operation	48	4.11.3	Replacing the Contact Set	56	5.3.3	Replacing the Rewind Spring	68
4.7.2	Checking the Stop Switch	48	4.11.4	Replacing the Contact Set - 031	57	5.3.3.1	Tensioning the Rewind Spring	68
4.7.3	Removal of Stop Switch	48	4.11.5	Replacing the Contact Set - 030	58	5.3.4	Starter Rope Guide Bush	69
4.7.4	Installation of Stop Switch	48	4.12	Trigger Plate	58	5.3.4.1	Replacing the Rope Guide Bush	69
4.8	Flywheel	49	4.12.1	Construction	58	5.4	Rewind Starter - 031 (030)	70
4.8.1	Description of Operation	49	4.12.2	Checking the Trigger Plate	58	5.4.1	Construction and Operation	70
4.8.2	Removal of Flywheel	49	4.12.3	Replacing the Trigger Plate	58	5.4.2	Troubleshooting Chart	70
4.8.3	Installation of Flywheel	50	4.12.4	Replacing the Trigger Plate - 031	59	5.4.3	Removal of Rope Rotor	71
4.8.4	Removal of Flywheel - 031 (030)	50	4.13	Ignition Timing	59	5.4.4	Visual Inspection	71
4.8.5	Installation of Flywheel - 031 (030)	50	4.13.1	Checking Breaker - Controlled Ignition	59	5.4.5	Replacing the Starter Rope	71
4.9	Ignition Armature	51	4.13.2	Adjusting Breaker - Controlled Ignition	60	5.4.6	Replacing the Rewind Spring	71
4.9.1	Construction	51	4.13.3	Checking Breaker - Controlled Ignition - 031	61	5.4.6.1	Tensioning the Rewind Spring	72
4.9.2	Resistance Test on Primary Winding	51	4.13.4	Adjusting Breaker - Controlled Ignition - 031	61	5.4.7	Replacing the Starter Rope Guide Bush	72
4.9.3	Resistance Test on Secondary Winding	51	4.13.5	Adjusting Breaker - Controlled Ignition - 031	62	5.5	Routine Maintenance	72
4.9.4	Testing with Ignition Coll Tester	52	4.13.6	Checking Electronic Ignition	63	5.6	Replacing the Pawls and Springs	72
4.9.5	Removal of Ignition Armature	52	4.13.7	Correcting Electronic Ignition	64			
4.9.6	Installation of Ignition Armature	53	4.14	Magneto Edge Gap	65	6.	AV Handle System	73
4.9.7	Removal of Ignition Armature - 031 (030)	54	4.14.1	Magneto Edge Gap - 031 (030)	65	6.1	Construction and Operation	73
4.9.8	Installation of Ignition Armature - 031 (030)	54				6.2	Replacing the Vibration Dampers	73
4.10	Condenser	54				6.2.1	Rear Handle	73
4.10.1	Description of Operation	54	5.	Rewind Starter	66	6.2.2	Handlebar	73
4.10.2	Checking the Condenser	54	5.1	Construction and Operation	66	6.2.3	Handle Frame	73
4.10.3	Replacing the Condenser	55	5.2	Troubleshooting Chart	66	6.3	AV Handle System - 031 (030)	73
4.10.4	Replacing the Condenser - 031 (030)	55				6.3.1	Replacing the Vibration Dampers	73

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**