



HR 1.5

SERVICE-MANUAL

List of Contents

- 1 General**
- 2 Technical Data**
- 3 Diesel Engine**
- 4 Hydraulic System**
- 5 Setting Instructions**
- 6 Functioning Description**
- 7 Electrical System
- 8 Maintenance
- 9 Operation
- 10 Options
- 11 Repair Instructions
- 12 Service-Bulletins

Description

- 1 Direction indicator - signal horn - low / high beam switch
(steering column switch)
- 2 Double brake inching pedal
- 3 Steering wheel - tilt adjustment
- 4 Accelerator pedal
- 5 Parking brake
- 6 Actuating lever for loading equipment
- 7 Travel direction selector switch (without function when working hydraulics
are switched off)
- 8 Actuation - additional control circuit
- 9 Actuation of impulse mode - floating position
- 10 not assigned *
- 11 not assigned *
- 12 not assigned *
- 13 Fan switch
- 14 Cut-off switch for actuation of additional control circuit (pos. 8)
- 15 Selection switch floating position - OFF/impulse/continuous operation mode
- 16 Slider control - heating
- 17 Pre-heat/ starter switch
- 18 Fuse and relay box
- 19 Shift lever for fan - fresh air / circulating air
- 20 Radio
- 21 Washer tank
- 22 4th control circuit
- 23 Actuating rod for mechanical quick-mount hitch

*e.g. for accessories such as ride control system, bucket re-positioning, etc.

Description

- 26 Battery charge indicator
- 27 Engine oil pressure indicator
- 28 Air filter clogging indicator
- 29 Parking brake indicator lamp
- 30 Travel, forward
- 31 Indicator lamp for transmission (only high-speed version)



*When the **transmission indicator lamp** lights up, the transmission is in an intermediate position. **The machine is not ready for start!** This can be remedied by brief steering movements so that the transmission engages.*

- 32 Upper beam
- 33 Direction indicator
- 34 not assigned *
- 35 Pre-heat indicator
- 36 Travel, in reverse
- 37 not assigned *
- 38 Travel speed switch, fast/ slow
- 39 Change-over switch for high speed



Only press when machine is at standstill!


- 40 Multi-function switch with lock for work equipment cut-off and change-over of the direction-of-travel pre-selection switch from pos. 07 to pos. 46



Only press when machine is at standstill!

- 41 Hazard warning switch
- 42 Operating hour meter
- 43 Fuel gauge
- 44 Coolant temperature indicator
- 45 Switch for windshield wiper, front, wash/ wipe function
- 46 Switch for windshield wiper, rear, wash/ wipe function
- 47 not assigned *
- 48 not assigned *
- 49 not assigned *
- 50 not assigned *
- 51 Pre-selection of travel direction - Function only active when working hydraulics are switched off
- 52 Light switch
- 53 Socket
- 54 Speedometer (only high-speed version)

* e.g. for accessories such as rotating beacon, water pump for sweeper, additional floodlights, etc.

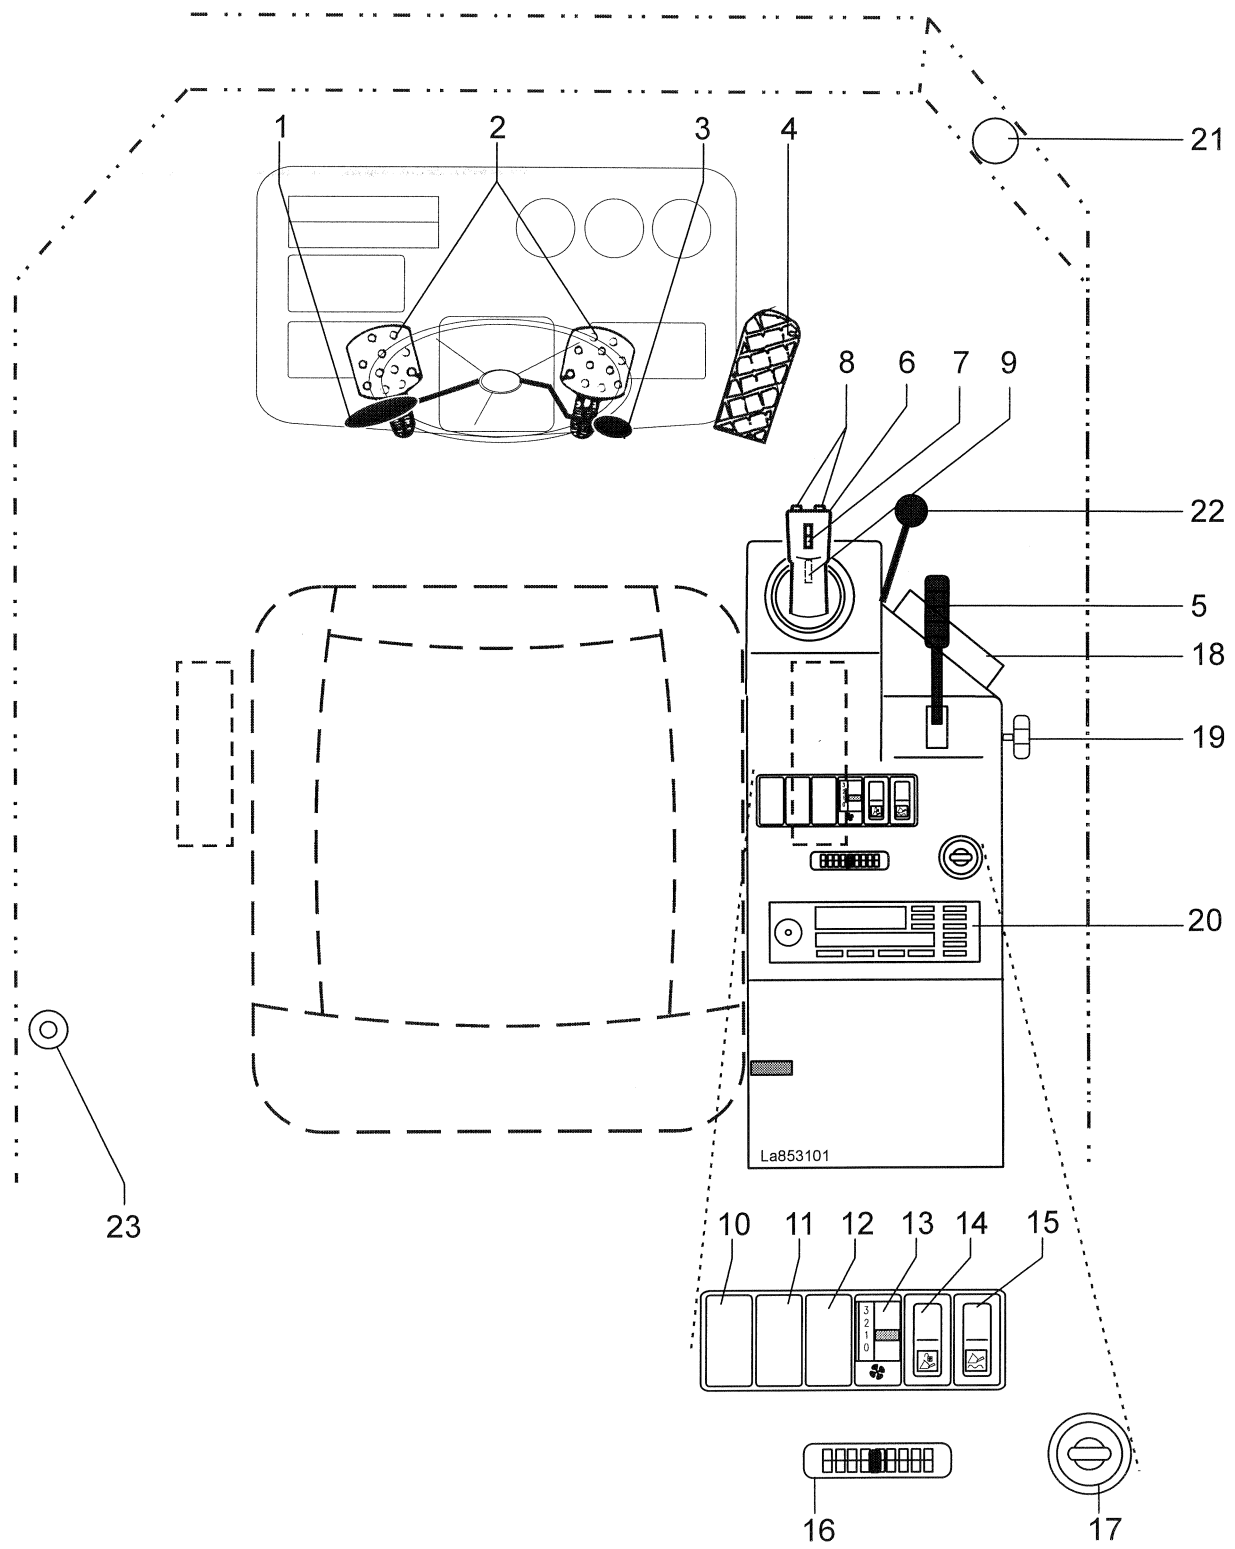

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**