

List of Contents

- 1 General**
- 2 Technical Data**
- 3 Diesel Engine**
- 4 Hydraulic System**
- 5 Setting Instructions**
- 6 Functioning Description**
- 7 Electrical System
- 8 Maintenance
- 9 Operation
- 10 Options
- 11 Repair Instructions
- 12 Service-Bulletins

Description

- 1 Direction indicator - signal horn - low/high beam switch (steering column switch)
- 2 Double brake inching pedal
- 3 Steering wheel - tilt adjustment
- 4 Accelerator pedal
- 5 Parking brake
- 6 Operating lever - loading equipment
- 7 Travel direction selector switch - without function when working hydraulics are switched off
- 8 Actuation - additional control circuit
- 9 Actuation of impulse mode - floating position
- 10 Fan switch
- 11 not assigned*
- 12 not assigned*
- 13 not assigned*
- 14 Cut-off switch for actuation - additional control circuit (pos. 8)
- 15 Selection switch floating position - OFF/impulse-/continuous operation mode
- 16 Slider control - heating
- 17 Preheat/ starter switch
- 18 Fuse and relay box
- 19 Shift lever for fan - fresh air/ circulating air
- 20 Radio

*e.g. for equipment such as ride control system, bucket re-positioning, etc.

Description

- 21 Charge control
- 22 Engine oil pressure indicator
- 23 Air filter clogging indicator
- 24 Parking brake indicator lamp
- 25 Travel, forward
- 26 not assigned *
- 27 Upper beam
- 28 Direction indicator
- 29 not assigned *
- 30 Pre-heat indicator
- 31 Travel, in reverse
- 32 not assigned *
- 33 Gear range switch - fast / slow
- 34 not assigned *
- 35 Multi-function switch with lock for work equipment cut-off and change-over of direction-of-travel pre-selectors (from pos. 07 to pos. 46)



Only press when machine is at standstill!

- 36 Hazard warning switch
- 37 Operating hour meter
- 38 Fuel gauge
- 39 Coolant temperature indicator
- 40 Switch for windshield wiper, front, wash/ wipe function
- 41 Switch for windshield wiper, rear, wash/ wipe function
- 42 not assigned *
- 43 not assigned *
- 44 not assigned *
- 45 not assigned *
- 46 Pre-selection of direction-of-travel - (Function only activated when work equipment switched off)
- 47 Light switch
- 48 Socket

* e.g. for accessories such as rotating beacon, water pump for sweeper, additional floodlight(s), etc.

Thank you very much for reading.

This is part of the demo page.

GET MORE:

**Diesel Engine, Hydraulic
System, Setting
Instructions, Functional
Description, Electrical
System And more.....**

Click Here BUY NOW

**Then Instant Download
the Complete Manual.**