

 


TEREX®

 
TL 260 SERVICE - MANUAL


List of Contents

- 1 General**
- 2 Technical Data**
- 3 Diesel Engine**
- 4 Hydraulic System**
- 5 Setting Instructions**
- 6 Functional Description**
- 7 Electrical System**
- 8 Maintenance**
- 9 Operation**
- 10 Options**
- 11 Repair Instructions**
- 12 BDE/Special tooling**

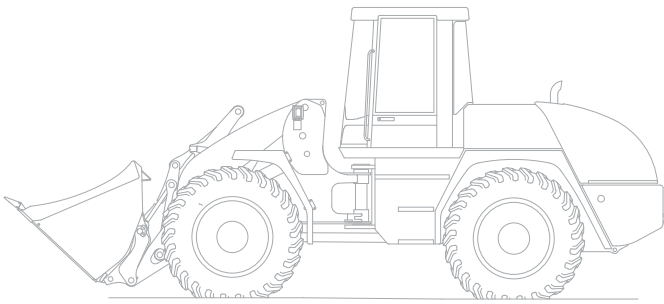

 
Operator controls and display elements

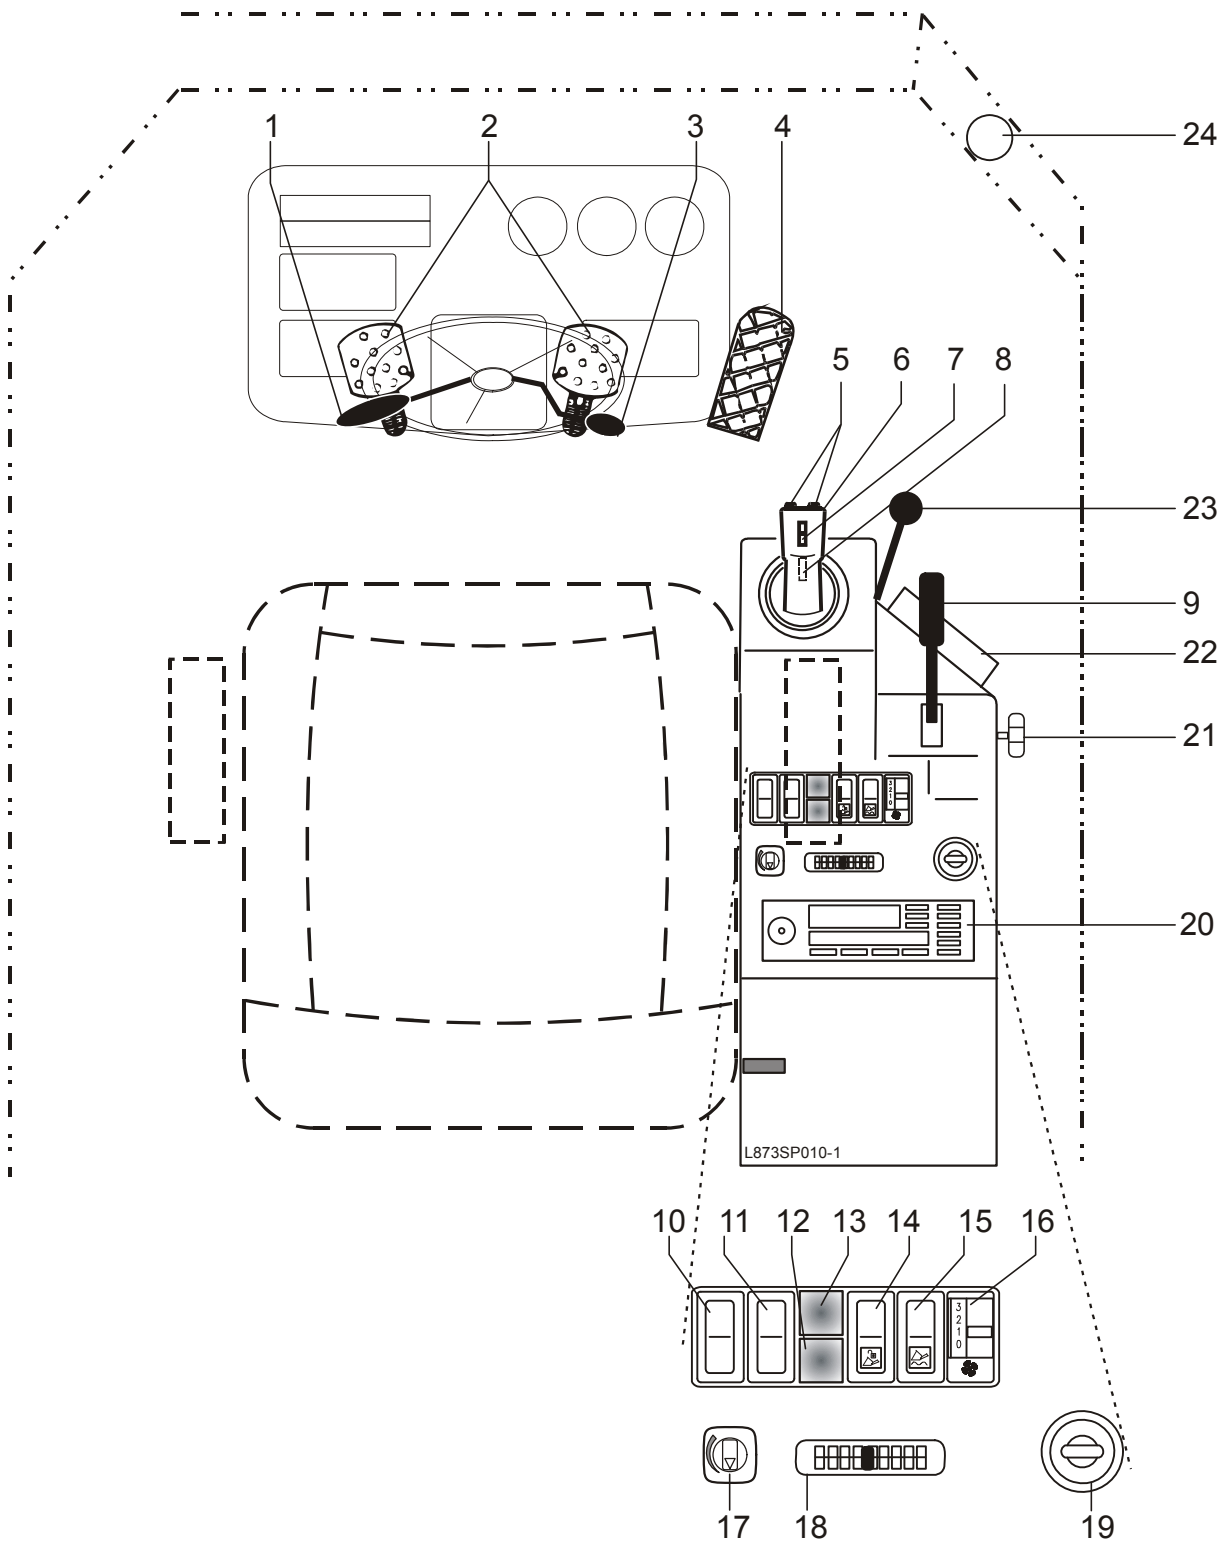





	Typ/Model/Type SKL 200 (SKL 873)	Datum/Edition/Date 01.2007
	Benennung/Description/Dénomination Operation	Blatt/Page/Feuille 9.13.05

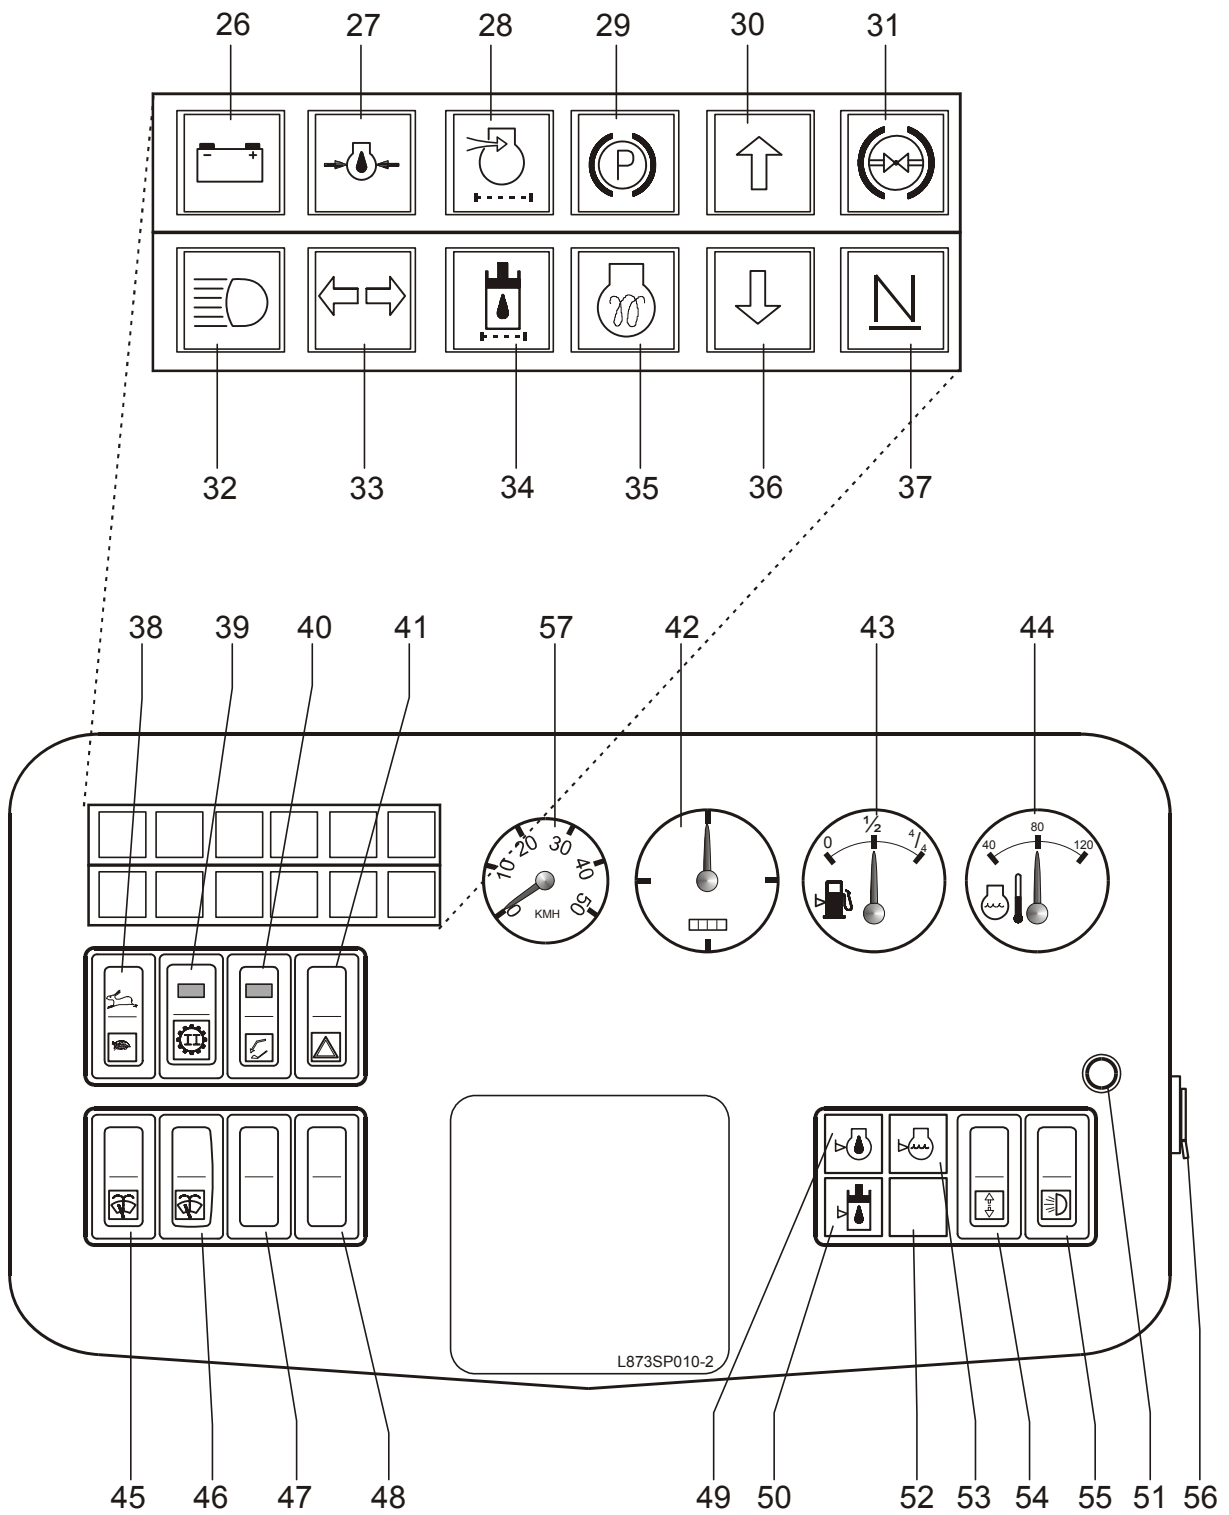- 1 Direction indicator — horn — low/high beam (steering column mounted switch)
- 2 Dual brake inching pedal
- 3 Tilt adjustment of steering wheel
- 4 Accelerator pedal
- 5 Actuation of additional control circuit
- 6 Joystick (control lever) — loader installation
- 7 Direction-of-travel pre-selection (without function if working hydraulics are switched off)
- 8 Impulse mode — float position
- 9 Parking brake
- 10 not assigned *
- 11 not assigned *
- 12 Red — Engine monitoring indicator lamp
- 13 Yellow — Engine monitoring indicator lamp
- 14 OFF switch for actuation of additional control circuit (Pos. 8)
- 15 Pre-selection switch for float position - OFF/Impulse-/Continuous operation
- 16 Fan switch
- 17 Option — Air conditioning
- 18 Heater control
- 19 Glow plug and starter switch
- 20 Option — Radio
- 21 Fan: fresh air/ re-circulating air
- 22 Fuse and relay holder
- 23 Option — 4th control circuit
- 24 Washer fluid storage tank

* for functions such as bucket return, load vibration-damping, etc.

 



	Typ/Model/Type SKL 200 (SKL 873)	Datum/Edition/Date 01.2007
	Benennung/Description/Dénomination Operation	Blatt/Page/Feuille 9.13.06

- 26 Red — Battery charge indicator
 - 27 Red — Engine oil pressure indicator lamp
 - 28 Red — Air filter clogging indicator
 - 29 Red — Parking brake indicator lamp
 - 30 Green — Travel, forward
 - 31 Red — Brake accumulator pressure indicator lamp
 - 32 Blue — High beam
 - 33 Green — Direction indicator
 - 34 Red — Hydraulic oil return filter clogging indicator
 - 35 Yellow — Pre-heat indicator
 - 36 Green — Travel in reverse
 - 37 Red — Manual transmission indicator lamp
 -  *If the **manual transmission indicator lamp** lights up, it is in an intermediate position. **The machine is not ready for operation!** This can be remedied by brief steering movements to be performed until the transmission engages.*
 - 38 Travel speed switch FAST/SLOW
 - 39 Change-over switch with stop - mechanical driving position
 -  Only press the button when machine is at standstill!
 - 40 Multi-function switch with lock for work equipment cut-off and change-over of direction-of-travel pre-selection switches from Pos. 07 to Pos. 46
 -  *Only press the button when machine is at standstill!*
 - 41 Hazard warning switch
 - 42 Operating hour meter
 - 43 Fuel gauge
 - 44 Coolant temperature indicator
 - 45 Switch for windshield wiper, front, Wash-wipe function
 - 46 Switch for windshield wiper, rear, Wash-wipe function
 - 47 not assigned *
 - 48 not assigned *
 - 49 Red — Filling level indicator for engine oil
 - 50 Red — Filling level indicator for hydraulic oil
 - 51 Check button
 - 52 not assigned
 - 53 Red — Coolant level indicator
 - 54 Direction-of-travel pre-selection — Function only activated when working hydraulics are switched off
 - 55 Light switch
 - 56 Socket
 - 57 Speedometer (only high-speed version)
- * e.g. for accessories such as rotating beacon, additional floodlight(s), etc.

 
 
Operator controls and display elements

The following list includes non-standard equipment !

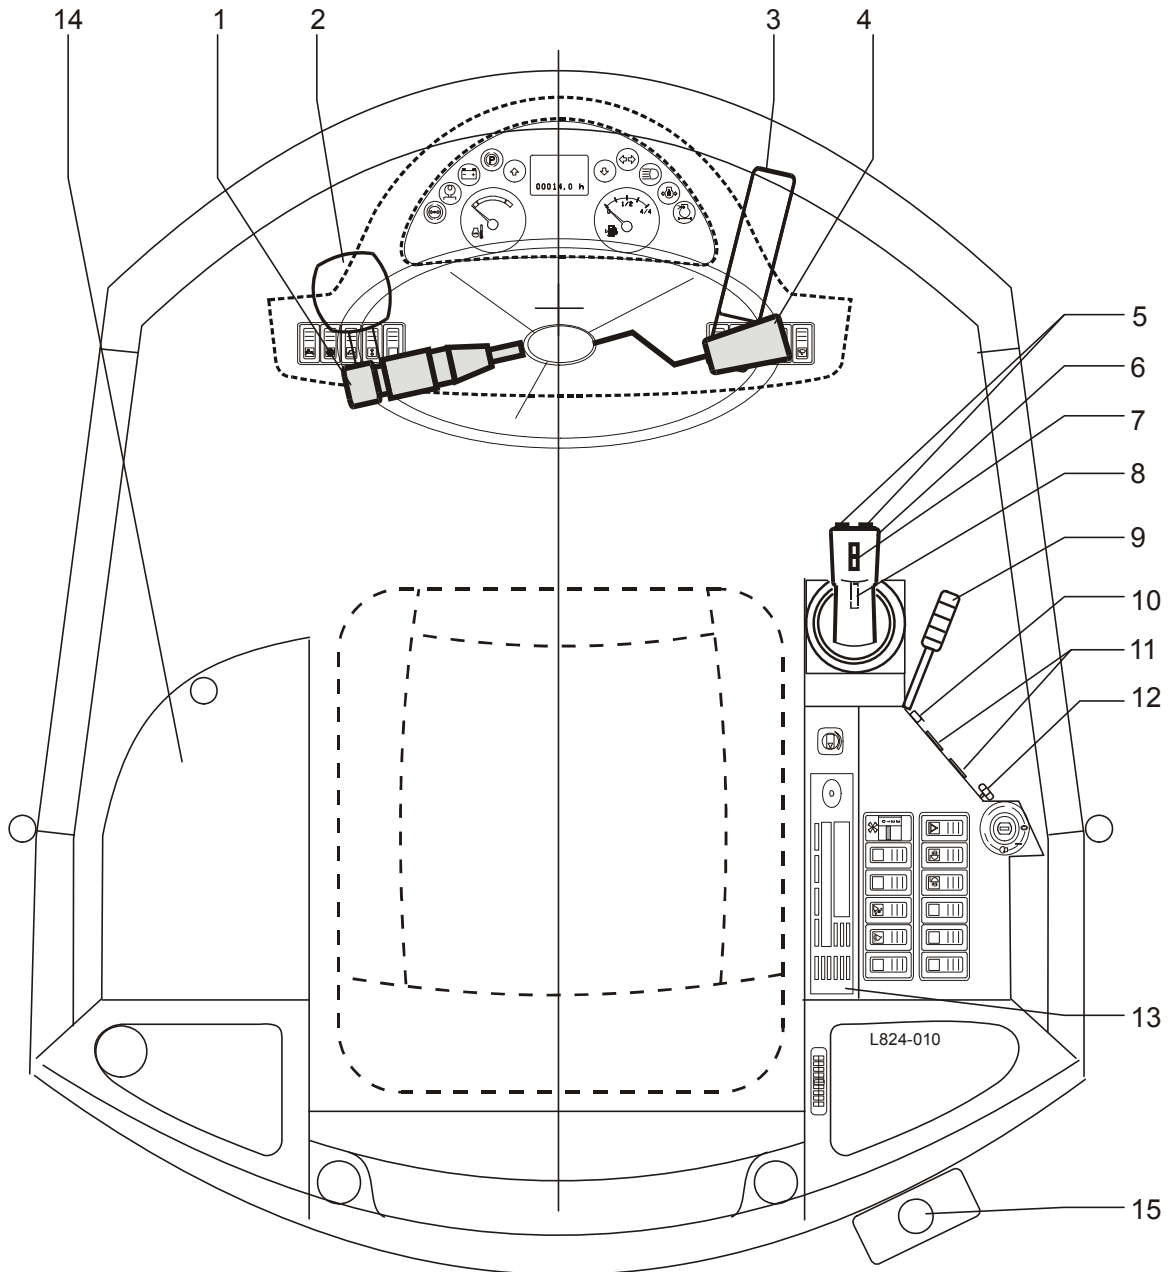 


	Typ/Model/Type TL 65 (SKL 824)	Datum/Edition/Date 01.2007
	Benennung/Description/Dénomination Operation	Blatt/Page/Feuille 9.22.01

 
 
 
- 1 Direction indicator — horn — low/high beam (steering column mounted switch)
- 2 Brake inching pedal
- 3 Accelerator pedal
- 4 Tilt adjustment of steering wheel (option: height adjustment)
- 5 Actuation of additional control circuit
- 6 Control lever — loader installation
- 7 Direction-of-travel pre-selection (without function if working hydraulics are disabled)
- 8 Impulse mode — float position
- 9 Parking brake
- 10 Socket
- 11 Fuse carrier
- 12 Fan: fresh air/ re-circulating air
- 13 Radio
- 14 Control rod for mechanical quick-attach system
- 15 Washer tank

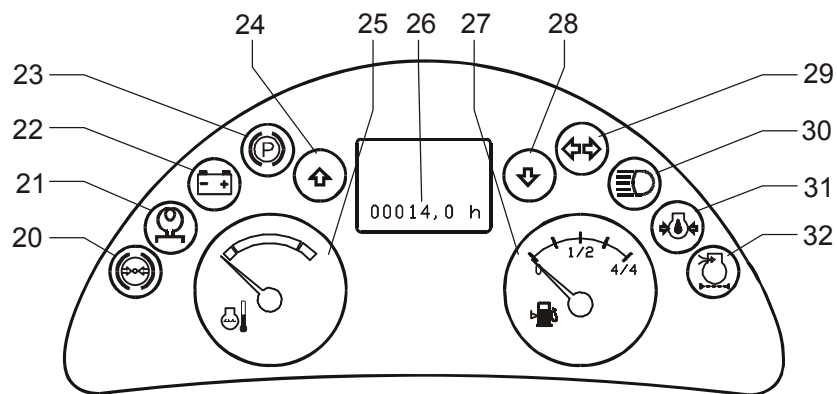




33 34 35 36 37

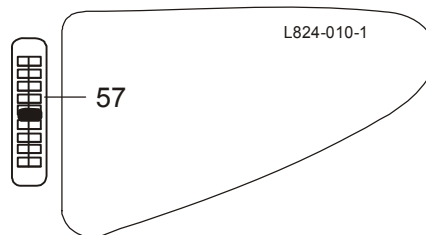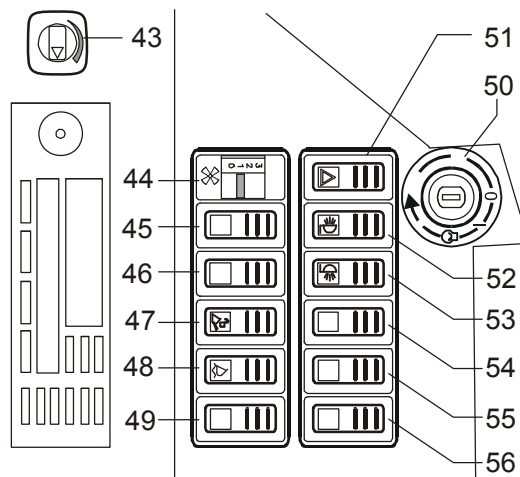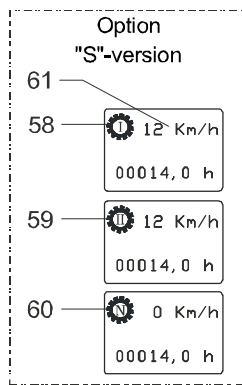

38 39 40 41 42



	Typ/Model/Type TL 65 (SKL 824)	Datum/Edition/Date 01.2007
	Benennung/Description/Dénomination Operation	Blatt/Page/Feuille 9.22.02

- | | | | |
|----|--|----|--|
| 20 | not assigned * | 40 | Windshield wash function front/rear |
| 21 | YELLOW — pre-heating monitor | 41 | Windshield wiper, front |
| 22 | RED — battery charge indicator | 42 | Windshield wiper, rear |
| 23 | RED — parking brake | 43 | Switch for air conditioning and temperature control |
| 24 | GREEN — travel direction, forward | 44 | Fan switch – heater |
| 25 | Coolant temperature | 45 | not assigned * |
| 26 | Operating hour meter | 46 | not assigned * |
| 27 | Fuel gauge | 47 | Pre-selection switch for actuation of additional control circuit (Pos. 5) |
| 28 | GREEN — travel direction, reverse | 48 | Pre-selection switch for float position — OFF/Impulse/Continuous mode |
| 29 | GREEN — direction indicator | 49 | not assigned * |
| 30 | BLUE — high beam | 50 | Pre-heat/starter switch |
| 31 | RED — engine oil pressure | 51 | Hazard warning switch |
| 32 | YELLOW — air filter indicator | 52 | Working floodlight, front |
| 33 | Travel speed — fast/slow | 53 | Working floodlight, rear |
| 34 | Change-over switch for high gear | 54 | not assigned * |
| |  <i>Only press when machine is at standstill!</i> | 55 | not assigned * |
| 35 | Multi-function switch with lock for work equipment cut-off and change-over of the direction-of-travel pre-selection switches from pos. 07 to pos. 36 | 56 | not assigned * |
| |  <i>Only press when machine is at standstill!</i> | 57 | Heater control |
| 36 | Pre-selection of travel direction — Function <u>only</u> active if working hydraulics are disabled | 58 | Monitor — transmission indicator range I |
| 37 | not assigned * | 59 | Monitor — transmission indicator range II |
| 38 | not assigned * | 60 | Monitor — transmission indicator range — disabled |
| 39 | not assigned * | |  <i>If this symbol comes up, the transmission is in an intermediate position. The machine is not ready to start! This can be remedied by performing brief steering movements until the transmission engages.</i> |
| | | 61 | Speed indicator |

Thank you very much for reading.

This is part of the demo page.

GET MORE:

**Diesel Engine, Hydraulic
System, Setting
Instructions, Functional
Description, Electrical
System And more.....**

Click Here BUY NOW

**Then Instant Download
the Complete Manual.**