



# CROWN



**Service Manual**  
Wartungshandbuch  
Manuel de maintenance

**RT3010 Series**

---

# **CROWN**

## ***TABLE OF CONTENT***

---

---

Page intentionally left blank  
Seite absichtlich freigelassen  
Page intentionnellement laissée blanche

## Table of Content

<b>MA – SAFETY</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
Safety Symbols used in the Manual .....	M/P-MA-0000-001		
General Maintenance and Repair Safety Notes .....	M/P-MA-0000-001		
- Maintenance and Repair .....	M/P-MA-0000-002		
- Before Leaving the Truck .....	M/P-MA-0000-002		
- Before Carrying out Work on the Truck .....	M/P-MA-0000-002		
- Before Operating the Truck .....	M/P-MA-0000-002		
Warnings and Labels on the Truck .....	M/P-MA-0000-002		
<b>ITD – INTRODUCTION</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
General .....	M/P-ITD-2800-001		
- Operating instruction .....	M/P-ITD-2800-001		
- Service training .....	M/P-ITD-2800-001		
- Replacement parts orders .....	M/P-ITD-2800-001		
- Structure of the Manual .....	M/P-ITD-2800-001		
- Page Numbers .....	M/P-ITD-2800-002		
Truck Data Numbering Sheet .....	M/P-ITD-2800-004		
<b>M1 – LUBRICATION AND ADJUSTMENT</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
Jacking up the Truck .....	M-1.0-2800-001		
Raising the Truck with a Crane .....	M-1.0-2800-002		
Towing the Truck .....	M-1.0-2800-002		
Component Access .....	M-1.0-2800-003		
Removing the Floorboard .....	M-1.0-2800-005		
Removing the Side Panel .....	M-1.0-2800-005		
Access to Drive Unit, Hydraulic System and Electrical Components .....	M-1.0-2800-005		
Maintenance .....	M-1.1-2800-001		
- Driver Participation .....	M-1.1-2800-001		
- Daily Maintenance Log .....	M-1.1-2800-001		
- Recommended Lubricants and Oils .....	M-1.1-2800-001		
- Lubricants .....	M-1.1-2800-002		
Grease items and grease intervals .....	M-1.2-2800-001		
- Inspection and Maintenance Schedule .....	M-1.2-2800-002		
- Daily or every 8 service hours .....	M-1.2-2800-003		
- Monthly or every 100 service hours .....	M-1.2-2800-005		
- Every three months or 250 service hours .....	M-1.2-2800-007		
- Every six months or 500 service hours .....	M-1.2-2800-009		
- Annually or every 1.000 service hours .....	M-1.2-2800-011		
- Every 2 years or 2.000 service hours .....	M-1.2-2800-011		
Caster .....	M-1.5-2800-001		
Torques .....	M-1.9-2800-002		
<b>M2 – HYDRAULICS</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
Hydraulic System .....	M/P-M2.1-2800-001		
Operation .....	M/P-M2.1-2800-001		
Removing the Hydraulic Unit .....	M-2.2-2800-001		
Replacing the Hydraulic Pump .....	M-2.3-2800-001		
- Disassembly .....	M-2.3-2800-001		
- Assembly .....	M-2.3-2800-001		
- Start-up .....	M-2.3-2800-001		
Replacing the Hydraulic Filter .....	M-2.3-2800-001		
- Replacing the Suction Filter .....	M-2.3-2800-001		
- Oil Change .....	M-2.3-2800-002		

Valve Setting Control .....	M-2.3-2800-004
Non-return valve control .....	M-2.3-2800-004
Safety Valve Control .....	M-2.3-2800-004
Safety Valve Setting .....	M-2.3-2800-004

<b>M3 – DRIVE UNIT</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
<b>Gear Unit</b> .....	<b>M-3.1-2800-001</b>		
Preparation .....	M-3.1-2800-001		
Maintenance .....	M-3.1-2800-002		
- General .....	M-3.1-2800-002		
Drive Unit Disassembly .....	M-3.1-2800-003		
Assembly .....	M-3.1-2800-003		
Adjusting the Bevel Wheel Set .....	M-3.1-2800-004		
Final Assembly .....	M-3.1-2800-004		
Drive Unit Re-Installation .....	M-3.1-2800-005		
Live Ring Bearing Replacement .....	M-3.1-2800-005		
Forcing out the Live Ring Bearing .....	M-3.1-2800-005		
Pressing in the Live Ring Bearing .....	M-3.1-2800-005		
Installation of the Live Ring Bearing in the Drive Unit ...	M-3.1-2800-005		

<b>M4 – ELECTRICS</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
<b>Electrical Components</b> .....	<b>M-4.2-2800-001</b>		
Transmitter (MMI, MMA, PT) .....	M-4.2-2800-001		
Fast / Slow Switch (HES) .....	M-4.2-2800-001		
Safety Pedal (PCT) .....	M-4.2-2800-001		
Lift / Lower Switch (PCS, PCD) .....	M-4.2-2800-001		
Lift Limit Switch (MFF) .....	M-4.2-2800-001		
Pressure Switch (PS) .....	M-4.2-2800-001		
Horn Switch (PCX) .....	M-4.2-2800-001		
Horn (CX) .....	M-4.2-2800-001		
Key Switch (QC) .....	M-4.2-2800-001		
Seat Height Adjustment Switch (PSDS) .....	M-4.2-2800-001		
Steering Angle-Dependent Speed Reduction Microswitch ..	M-4.2-2800-001		
Seat Height Adjustment Limit Switch (MF) .....	M-4.2-2800-002		
Fans (VNT) .....	M-4.2-2800-002		
Brake (FE) .....	M-4.2-2800-002		
Emergency Disconnect Switch (PE) .....	M-4.2-2800-002		
Fuses (F1, F2, FA) .....	M-4.2-2800-002		
Traction Motor (M1) .....	M-4.2-2800-002		
Pump Motor (M2) .....	M-4.2-2800-002		
Pump Contactor (K3) .....	M-4.2-2800-002		
Main Contactor (K4) .....	M-4.2-2800-002		
<sup>OPTION</sup> Steering Motor (M3) .....	M-4.2-2800-002		
<sup>OPTION</sup> Encoder (MS) .....	M-4.2-2800-002		
<sup>OPTION</sup> Limit Switch (MF) .....	M-4.2-2800-002		
<sup>OPTION</sup> Steering-Contactor (K6) .....	M-4.2-2800-002		
<sup>OPTION</sup> Fuses (F3, FA3) .....	M-4.2-2800-002		
<b>ES1 Traction Controller</b> .....	<b>M-4.3-2800-001</b>		
General .....	M-4.3-2800-001		
- Precautionary Measures .....	M-4.3-2800-001		
Operational Features .....	M-4.3-2800-001		
- Speed Control .....	M-4.3-2800-001		
- Reduced Speed Range .....	M-4.3-2800-001		
- Downhill Speed Control .....	M-4.3-2800-001		
- Regenerative Braking .....	M-4.3-2800-001		
- Anti-Roll-Down-Function .....	M-4.3-2800-001		

- Hourmeter .....	M-4.3-2800-002
Self Test .....	M-4.3-2800-002
- Monitored Circuits .....	M-4.3-2800-002
Protective Devices .....	M-4.3-2800-003
- Polarity Protection .....	M-4.3-2800-003
- Wiring Errors .....	M-4.3-2800-003
- Temperature .....	M-4.3-2800-003
- Start Sequence .....	M-4.3-2800-003
- Safety Class .....	M-4.3-2800-003
Maintenance .....	M-4.3-2800-003
ES1 Traction Controller Connections .....	M-4.3-2800-004
<b>Programmer .....</b>	<b>M-4.4-2800-001</b>
General .....	M-4.4-2800-001
Operating Menu ES1 Controller .....	M-4.4-2800-002
- General .....	M-4.4-2800-002
- Menu Functions .....	M-4.4-2800-002
- Operating Menu - Overview .....	M-4.4-2800-003
Adjustment .....	M-4.5-2800-001
- Menu PARAMETER CHANGE .....	M-4.5-2800-001
- Max. Speed Setting .....	M-4.5-2800-002
- TESTER Menu .....	M-4.5-2800-004
- Error Code Display in SAM Hourmeter .....	M-4.5-2800-006
- ALARMS Menu .....	M-4.5-2800-006
- PROGRAM VACC Menu .....	M-4.5-2800-009
CONFIG Menu .....	M-4.5-2800-010
SAM Hourmeter .....	M-4.5-2800-01
Traction Controller Replacement and Transfer of Service Hours into the new Controller: .....	M-4.5-2800-011
<b>Traction Controller Safety Test .....</b>	<b>M-4.20-2800-001</b>
<b>Battery .....</b>	<b>M-4.25-2800-001</b>
General .....	M-4.25-2800-001
Operation .....	M-4.25-2800-001
Battery Replacement .....	M-4.25-2800-001
Battery Removal .....	M-4.25-2800-001
- Replacing the Battery with a Crane .....	M-4.25-2800-002
- Replacing the Battery with a Trolley .....	M-4.25-2800-003
Charging the Battery .....	M-4.25-2800-004
<b>Electric Motors .....</b>	<b>M-4.35-2800-001</b>
General Maintenance Instructions .....	M-4.35-2800-001
Preparation .....	M-4.35-2800-001
Important Maintenance Instructions .....	M-4.35-2800-001
<b>Traction Motor Maintenance .....</b>	<b>M-4.35-2800-002</b>
Access to the Brushes .....	M-4.35-2800-002
Maintenance .....	M-4.35-2800-002
- Armature .....	M-4.35-2800-002
- Bearings .....	M-4.35-2800-002
<b>Pump Motor Maintenance .....</b>	<b>M-4.35-2800-003</b>
Access to the Brushes .....	M-4.35-2800-003
Maintenance .....	M-4.35-2800-003
<b><small>(OPTION)</small> Steering Motor Maintenance .....</b>	<b>M-4.35-2800-004</b>
Access to the Brushes .....	M-4.35-2800-004
Maintenance .....	M-4.35-2800-004
<b>Seat Variable Displacement Motor Adjustment .....</b>	<b>M-4.35-2800-004</b>

<b>M-5 – BRAKE</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
Brake .....	M-5.0-2800-001		
- Function .....	M-5.0-2800-001		
- Removal .....	M-5.0-2800-001		
- Assembly .....	M-5.0-2800-002		
- Air Gap Setting .....	M-5.0-2800-002		
- Brake Moment Setting .....	M-5.0-2800-002		
- Brake Test .....	M-5.0-2800-003		
<b>M6 – STEERING</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
Steering .....	M-6.1-2800-001		
Operation .....	M-6.1-2800-001		
Adjusting the Upper Steering Chains .....	M-6.1-2800-002		
Adjusting the Lower Steering Chain .....	M-6.1-2800-002		
Checking the Sliding Clutch .....	M-6.1-2800-003		
Replacing the Sliding Clutch .....	M-6.1-2800-003		
<sup>OPTION</sup> Steering Sensor Removal / Installation .....	M-6.1-2800-004		
<sup>OPTION</sup> Steering Motor Removal / Installation .....	M-6.1-2800-004		
<sup>OPTION</sup> Limit Switch Removal / Installation .....	M-6.1-2800-005		
<b>M7 – LIFTING MECHANISM</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
Lifting Mechanism .....	M-7.0-2800-001		
Test .....	M-7.0-2800-001		
Adjusting the Stop .....	M-7.0-2800-001		
<b>M8 – CYLINDERS</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
Cylinders .....	M-8.0-0000-001		
General .....	M-8.0-0000-001		
Plunger Cylinders (single-acting) .....	M-8.0-0000-001		
Piston Cylinder (Double-Acting Cylinder) .....	M-8.0-0000-002		
Maintenance .....	M-8.0-0000-004		
Inspection .....	M-8.0-0000-001		
Seal Installation .....	M-8.6-2800-001		
General .....	M-8.6-2800-001		
Lift Cylinder .....	M-8.6-2800-001		
Removal Preparation .....	M-8.6-2800-001		
Removal .....	M-8.6-2800-001		
Repairing the Lift Cylinder .....	M-8.6-2800-002		
- Disassembly .....	M-8.6-2800-002		
- Inspection .....	M-8.6-2800-002		
- Assembly .....	M-8.6-2800-002		
Assembly .....	M-8.6-2800-002		
Gas Pressure Spring Removal and Assembly .....	M-8.6-2800-003		
- Removal Preparation .....	M-8.6-2800-003		
- Removal .....	M-8.6-2800-003		
- Assembly .....	M-8.6-2800-003		
<b>DIA – ELECTRICAL DIAGRAMS</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
Standard Version .....	M/P-DIA-2800-001		
<sup>OPTION</sup> With electrical steering .....	M/P-DIA-2800-002		
<b>HYD – HYDRAULIC SCHEMATIC</b>	<b>PAGE</b>	<b>SER-NR. CUT</b>	<b>REV.</b>
Hydraulic Schematic .....	M-HYD-2800-001		

---

**CROWN**

***SAFETY***

---



---

Page intentionally left blank  
Seite absichtlich freigelassen  
Page intentionnellement laissée blanche

## Safety Symbols used in the Manual

To help guide you through the manual and to highlight particular danger areas, we have used graphic illustrations:

**DANGER**



*This symbol indicates life-threatening risks*

- Failure to comply with this notice may result in severe or fatal injuries to yourself or other people.

**WARNING**



*This symbol indicates the risk of serious injury and/or serious material damage.*

- Failure to comply with this notice may result in severe injuries to yourself or other people and/or serious material damage.

**CAUTION**



*This symbol indicates the risk of minor injury and/or minor material damage.*

- Failure to comply with this notice may result in minor injuries to yourself or other people and/or minor material damage.

**INFORMATION**



*Contains additional information with supplementary notes and hints.*

**OPTION**



*These items relate to optional features not supplied with the standard version.*

## General Maintenance and Repair Safety Notes

**DANGER**



*Read the safety notices in the truck Maintenance and Operator's Manuals.*

- Failure to do so could result in severe or fatal injuries to maintenance personnel and/or other persons.

Motorised vehicles can be dangerous if maintenance and service are neglected. For this reason maintenance and inspections must be carried out at regular short intervals by trained personnel working to approved company guidelines.

**DANGER**



*Follow all national/local safety regulations applicable for maintenance work, e.g. for work on higher levels.*

- Failure to do so could result in severe or fatal injuries to maintenance personnel and/or other persons.

## Maintenance and Repair

1. Maintenance work must only be carried out in accordance with the test and maintenance program contained in the present Maintenance Manual and any applicable service notices.
2. Only qualified and authorised personnel may carry out work on the truck.
3. Always keep fire extinguishers in good working condition. Do not approach fluid levels or leaks with a naked flame.
4. To clean, use a non flammable, non combustible cleaning solution which is groundwater-neutral. Only carry out cleaning with an oil separator. Protect the electrical system from dampness.
5. Keep the service area clean, dry and well-ventilated.
6. Do not allow oil to penetrate the ground or enter the draining system. Used oil must be recycled. Oil filters and desiccants must be treated as special waste products. Relevant applicable regulations must be followed.
7. Neutralise and thoroughly rinse any spilled battery fluid immediately.

8. Keep the truck clean. This will facilitate the location of loose or faulty components.
9. Make sure that capacity and data plates, warnings and labels are legible at all times.
10. Alterations or modifications by the owner or operator are not permitted without the express written authorisation from Crown.
11. Only use original Crown spare parts to ensure the reliability, safety and suitability of the Crown truck.

## Warnings and Labels on the Truck

During regular maintenance check that the warnings and labels on the truck are complete and legible.

- Clean any illegible labels.
- Replace any faulty or missing labels.

The order and meaning of the warnings and labels on the truck are described in section 10.9 of the parts manual.

## Before Leaving the Truck

- Stop the truck.
- Lower the fork carriage fully.
- Apply the parking brake.
- Turn off the travel switch and remove the key.
- Block all wheels when parking on an uneven surface.

## Before Carrying out Work on the Truck

- Raise the truck to free the drive wheel. Press the emergency Stop button and disconnect the battery.
- Prevent the truck from rolling away.
- Before carrying out work on the hoist frame, the lift mast or on the fork carriage: Block these parts according to maintenance instructions in order to prevent them from dropping.
- Only carry out operational testing when there is sufficient room to manoeuvre, to avoid the risk of injury to yourself and others.

## Before Operating the Truck

- Check the safety devices.
- Get into the driver's seat.
- Check the operation of the lifting device, travel direction switch, speed control, steering, warning devices and brakes.

---

**CROWN**

***INTRODUCTION***

---

---

Page intentionally left blank  
Seite absichtlich freigelassen  
Page intentionnellement laissée blanche

## General

The present manual is designed for Customer Service engineers who wish to familiarise themselves with the maintenance work required for the various truck components.

It also contains troubleshooting sections which can be used to identify and remedy truck faults.

### **INFORMATION**



*This book is not an operating manual. It is designed solely for specialist personnel who have been trained and authorised to carry out the work described in the manual.*

This manual therefore contains fewer and less detailed warnings than the Operator's Manual, as the latter is aimed at persons who have very little or no prior experience at all.

## Operating Instructions

This manual contains no operating instructions. An operating instructions manual is supplied with the vehicle. Additional copies can be ordered as required.

With the help of this manual you and your personnel will be able to ensure the long service life, operational safety and error free functioning of your CROWN vehicle.

## Service Training

CROWN offers the appropriate vehicle related training for service personnel. Details on this training can be obtained from CROWN on request.

## Ordering Spare Parts

The maintenance manual does not cover spare parts. These are listed in a separate manual.

Spare parts can be ordered by quoting:

- The truck specification number
- The truck model number
- The truck serial number

This information can be found on the truck's data plate. Only if this information is provided can the order be processed quickly, correctly and reliably.

Please refer to the Technical Specifications Sheet for the utilisable loads, technical data and dimensions for this

series. Brochures can be obtained from your CROWN dealer or from the following address:

**CROWN Gabelstapler GmbH**  
**Moosacher Str. 52**  
**80809 Munich**  
**GERMANY**  
**Tel.: +49 (0)89 / 93 002 -0**  
**Fax: +49 (0)89 / 93 002 -175 oder 133**

## Using the Manual

The Maintenance Manual is written in three independent language blocks: *English, German and French.*

Each language block in turn is divided into chapters and sections.

The table on the following page shows how the manual is structured.

Sections Maintenance	
Section	Description
IDX	Table of Content
MA	Safety
ITD	Introduction
M1	Lubrication and Adjustment
M2	Hydraulics
M3	Drive Unit
M4	Electrical
M5	Brake
M6	Steering
M7	Mast / Lifting Mechanism
M8	Cylinder
DIA	Electrical Diagrams
HYD	Hydraulic Schematic

A01M-gb

## Page Numbering in the Manual

The page numbers are on the left and right-hand sides of the page footer.

If a page has been modified since the last edition, a revision number will be found in the middle of the footer:

02 REV. 2/99 means the second amendment to this page in February 1999.


The page numbers are not necessarily consecutive!

The back page of the manual contains a print number in the following form:


MS-ESR4000-GB-D-F 02/00

In this example, 02/00 is the edition date.


A page beginning with M/P- is *identical* in both the maintenance and spare parts manuals:

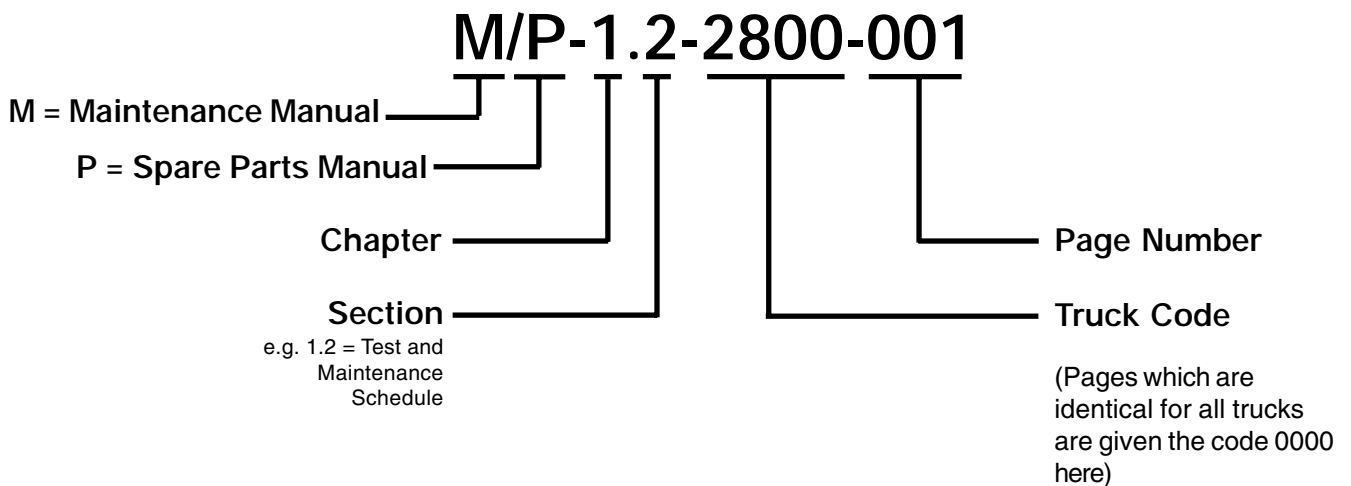

A page beginning with M- is *only* contained in the maintenance manual:

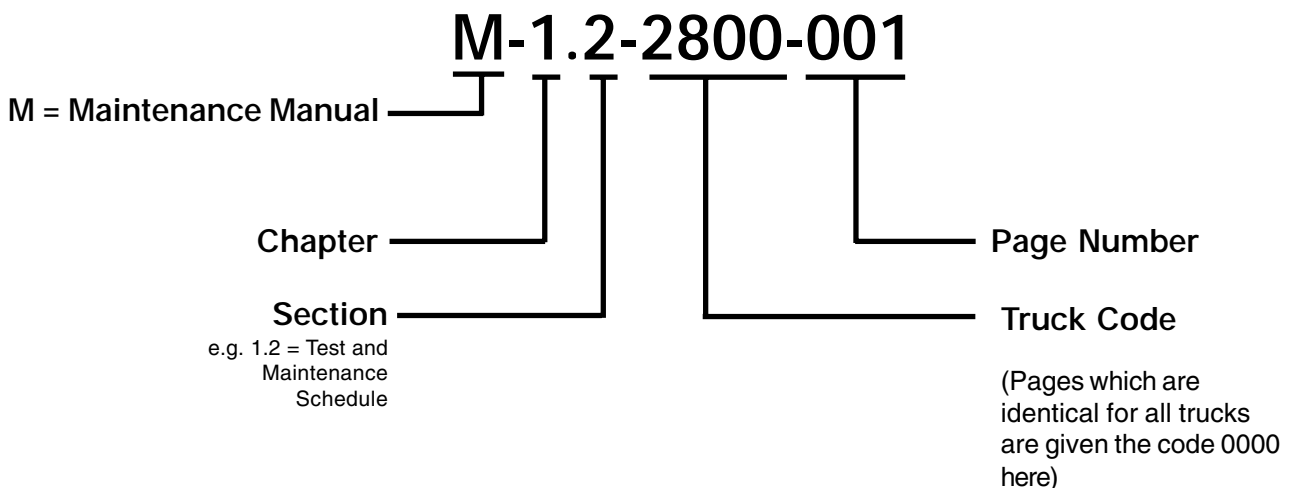

A page beginning with P- is *only* contained in the spare parts manual:

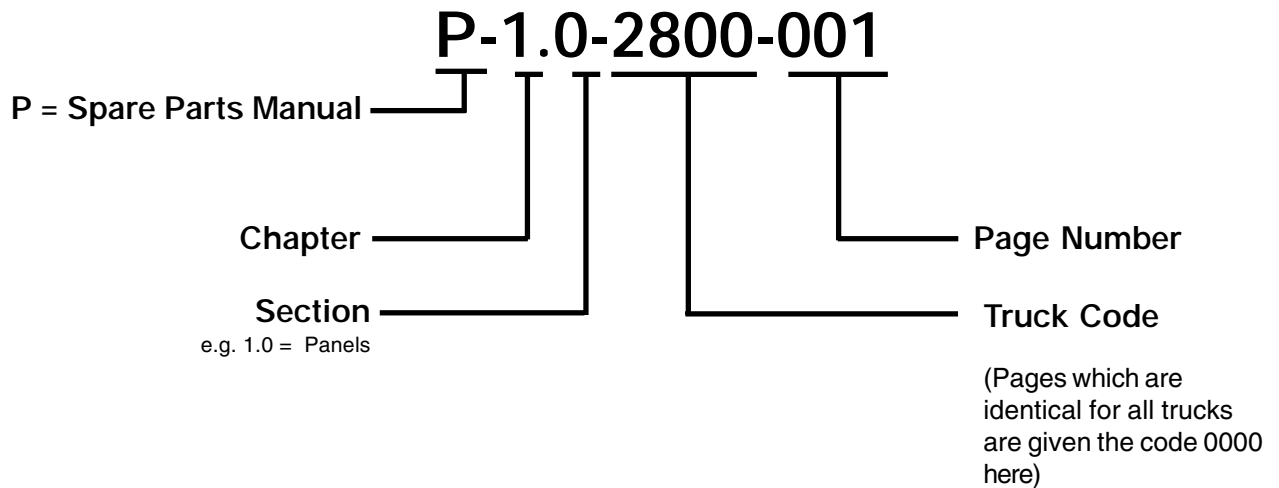

## Model-Number

RT3010

Modeldescription

Rider Pallet Truck with 2.000 kg capacity

RT3020

Modeldescription

Rider Pallet Truck with 2.200 kg capacity

RT3030

Modeldescription

Rider Pallet Truck with 3.300 kg capacity



Page intentionally left blank  
Seite absichtlich freigelassen  
Page intentionnellement laissée blanche

---

**CROWN**

***LUBRICATION AND ADJUSTMENT***

---

**BUY NOW**

**Then Instant Download  
the Complete Manual  
Thank you very much!**