

**SECTION AND GROUP
CONTENTS**

WORKSHOP MANUAL

SECTION 1 GENERAL INFORMATION

Group 1 Precautions for disassembling and Assembling	
Group 2 Tightening Torque	

SECTION 2 UPPERSTRUCTURE

Group 1 Cab	
Group 2 Counterweight	
Group 3 Main Frame	
Group 4 Pump Device	
Group 5 Control Valve	
Group 6 Swing Device	
Group 7 Pilot Valve	
Group 8 DQR Valve	
Group 9 Pilot Shut-Off Valve	
Group 10 Shuttle Valve	
Group 11 Solenoid Valve	
Group 12 Oil Cooler Fan Motor	
Group 13 Fuel Cooler Fan Motor	
Group 14 Compressor Drive Motor	
Group 15 Air Conditioner	
Group 16 Lift Cylinder	

SECTION 3 UNDERCARRIAGE

Group 1 Swing Bearing	
Group 2 Travel Device	
Group 3 Travel Brake Valve	
Group 4 Drive Tumbler	
Group 5 Center Joint	
Group 6 Adjuster Cylinder	
Group 7 Front Idler	
Group 8 Upper and Lower Roller	
Group 9 Track Shoes	
Group 10 Accumulator	
Group 11 Welding Repair Procedure	

SECTION 4 FRONT ATTACHMENT

Group 1 Front Attachment	
Group 2 Cylinder	
Group 3 Bushing and Point	

TECHNICAL MANUAL (Operational Principle)

SECTION 1 GENERAL

- Group 1 Specifications
- Group 2 Component Layout

SECTION 2 SYSTEM

- Group 1 Control System
- Group 2 Hydraulic System
- Group 3 Electrical System

SECTION 3 COMPONENT OPERATION

- Group 1 Pump Device
 - Group 2 Swing Device
 - Group 3 Control Valve
 - Group 4 Pilot Valve
 - Group 5 Travel Device
 - Group 6 Others(Upperstructure)
 - Group 7 Others(Undercarriage)
-

TECHNICAL MANUAL (Troubleshooting)

SECTION 4 OPERATIONAL PERFORMANCE TEST

- Group 1 Introduction
- Group 2 Standard
- Group 3 Engine Test
- Group 4 Excavator Test
- Group 5 Component Test

SECTION 5 TROUBLESHOOTING

- Group 1 General
 - Group 2 Component Layout
 - Group 3 Troubleshooting A
 - Group 4 Troubleshooting B
 - Group 5 Troubleshooting C
 - Group 6 Electrical System Inspection
-

SECTION 1 GENERAL INFORMATION



CONTENTS

Group 1 Precautions for Disassembling and Assembling

Precautions for Disassembling and
Assembling..... W1-1-1

Group 2 Tightening Torque

Tightening Torque Specification..... W1-2-1
Torque Chart W1-2-3
Piping Joint W1-2-6
Periodic Replacement of Parts W1-2-10

GENERAL / Precautions for Disassembling and Assembling

PRECAUTIONS FOR DISASSEMBLING AND ASSEMBLING

Precautions for Disassembling and Assembling

- Clean the Machine

Thoroughly wash the machine before bringing it into the shop. Bringing a dirty machine into the shop may cause machine components to be contaminated during disassembling/assembling, resulting in damage to machine components, as well as decreased efficiency in service work.

- Inspect the Machine

Be sure to thoroughly understand all disassembling/assembling procedures beforehand, to help avoid incorrect disassembling of components as well as personal injury.

Check and record the items listed below to prevent problems from occurring in the future.

- The machine model, machine serial number, and hour meter reading.
- Reason for disassembly (symptoms, failed parts, and causes).
- Clogging of filters and oil, water or air leaks, if any.
- Capacities and condition of lubricants.
- Loose or damaged parts.

- Prepare and Clean Tools and Disassembly Area

Prepare the necessary tools to be used and the area for disassembling work.

- Precautions for Disassembling

- To prevent dirt from entering, cap or plug the removed pipes.
- Before disassembling, clean the exterior of the components and place on a work bench.
- Before disassembling, drain gear oil from the reduction gear.
- Be sure to provide appropriate containers for draining fluids.
- Use matching marks for easier reassembling.
- Be sure to use the specified special tools, when instructed.
- If a part or component cannot be removed after removing its securing nuts and bolts, do not attempt to remove it forcibly. Find the cause(s), then take the appropriate measures to remove it.
- Orderly arrange disassembled parts. Mark and tag them as necessary.
- Store common parts, such as bolts and nuts with reference to where they are to be used and in a manner that will prevent loss.
- Inspect the contact or sliding surfaces of disassembled parts for abnormal wear, sticking, or other damage.
- Measure and record the degree of wear and clearances.

GENERAL / Precautions for Disassembling and Assembling

- Precautions for Assembling

- Be sure to clean all parts and inspect them for any damage. If any damage is found, repair or replace part.
- Dirt or debris on the contact or sliding surfaces may shorten the service life of the machine. Take care not to contaminate any contact or sliding surfaces.
- Be sure to replace O-rings, backup rings, and oil seals with new ones once they are disassembled. Apply a film of grease before installing.
- Be sure that liquid-gasket-applied surfaces are clean and dry.
- If an anti-corrosive agent has been used on a new part, be sure to thoroughly clean the part to remove the agent.
- Utilize matching marks when assembling.
- Be sure to use the designated tools to assemble bearings, bushings and oil seals.
- Keep a record of the number of tools used for disassembly/assembly. After assembling is complete, count the number of tools, so as to make sure that no forgotten tools remain in the assembled machine.

Bleeding Air from Hydraulic System

When hydraulic oil is drained, the suction filter or the suction lines are replaced, or the removal and installation of the pump, swing motor, travel motor or cylinder is done, bleed air from the hydraulic system in the following procedures:

IMPORTANT: If the engine is started with air trapped in the hydraulic pump housing, damage to the pump may result. If the hydraulic motor is operated with air trapped in the hydraulic motor housing, damage to the motor may result. If the cylinder is operated with air trapped in the cylinder tube, damage to the cylinder may result. Be sure to bleed air before starting the engine.

- Bleeding Air from Hydraulic Pump

- Remove the air bleeding plug from the top of the pump and fill the pump housing with hydraulic oil.
- After the pump housing is filled with hydraulic oil, temporarily tighten the plug. Then, start the engine and run at slow idle speed.
- Slightly loosen the plug to bleed air from the pump housing until hydraulic oil oozes out.
- After bleeding all the air, securely tighten the plug.

- Bleeding Air from Travel Motor / Swing Motor

- With the drain plug / hose on travel motor / swing motor removed, fill the motor case with hydraulic oil.

GENERAL / Precautions for Disassembling and Assembling

- Bleeding Air from Hydraulic Circuit

- After refilling hydraulic oil, start the engine. While operating each cylinder, swing motor and travel motor evenly, operate the machine under light loads for 10 to 15 minutes. Slowly start each operation (never fully stroke the cylinders during initial operation stage). As the pilot oil circuit has an air bleed device, air trapped in the pilot oil circuit will be bled while performing the above operation for approx. 5 minutes.
- Reposition the front attachment to check hydraulic oil level.
- Stop the engine. Recheck hydraulic oil level. Replenish oil as necessary.



T142-05-03-007




T142-05-03-008

GENERAL / Precautions for Disassembling and Assembling

Floating Seal Precautions

1. In general, replace the floating seal with a new one after disassembling. If the floating seal is to be reused, follow these procedures:





- (1) Keep seal rings together as a matched set with seal ring faces together. Insert a piece of cardboard to protect surfaces.
- (2) Check the slide surface on seal ring (A) for scuffing, scoring, corrosion, deformation or uneven wear.
- (3) Check O-ring (B) for tears, breaks, deformation or hardening.

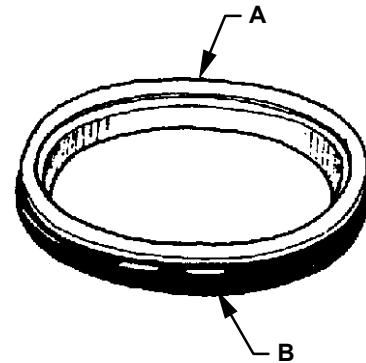

W105-03-05-019

2. If incorrectly assembled, oil leakage or damage will occur. Be sure to do the following, to prevent trouble.

- (1) Clean the floating seal and seal mounting bores with cleaning solvent. Use a wire brush to remove mud, rust or dirt. After cleaning, thoroughly dry parts with compressed air.
- (2) Clean the floating seal and seal mounting bores. Check the bore surface for scuffing or scoring by touching the surface with touch.
- (3) Check that the O-ring is not twisted, and that it is installed correctly on the seal ring.
- (4) After installing the floating seal, check that seal ring surface (A) is parallel with seal mating face (C) by measuring the distances (A) and (C) at point (a) and (b), as illustrated. If these distances differ, correct the O-ring seating.

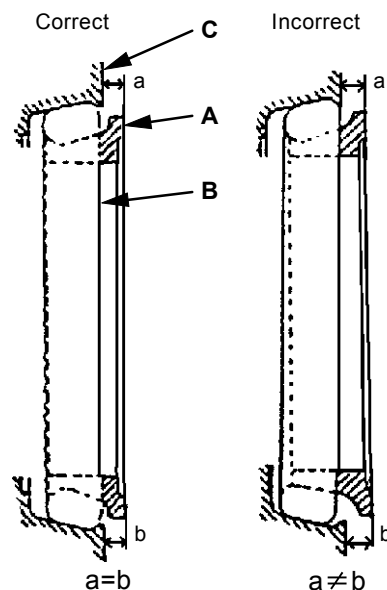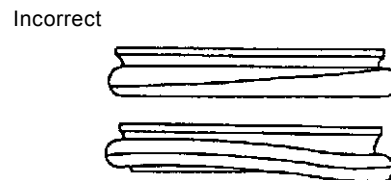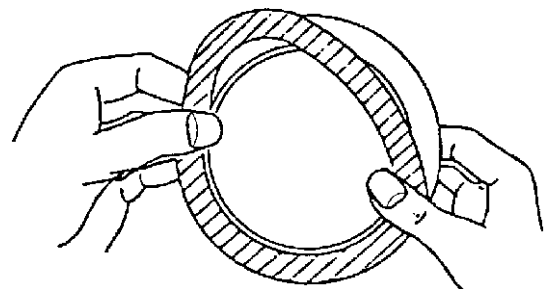


W105-03-05-020

W110-03-05-004


GENERAL / Precautions for Disassembling and Assembling

Precautions for Using Nylon Sling


1. Follow the precautions below to use nylon slings safely.
 - Attach protectors (soft material) on the corners of the load so that the nylon sling does not directly contact the corners. This will prevent the nylon sling from being damaged and the lifted load from slipping.
 - Lower the temperature of the lifted load to lower than 100 °C (212 °F). If unavoidably lifting a load with a temperature of 100 °C (212 °F) or more, reduce the load weight.
 - Do not lift acid or alkali chemicals.
 - Take care not to allow the sling to become wet. The load may slip.
 - When required to use more than one sling, use slings with the same width and length to keep the lifted load balanced.
 - When lifting a load using an eyehole, be sure to eliminate any gaps between the sling and load. (Refer to the right illustration.) Reduce the load weight so that it is less than 80 % of the sling breaking force.
 - Avoid using twisted, bound, connected, or hitched slings.
 - Do not place any object on twisted or bent slings. (Refer to the right illustration.)
 - When removing the slings from under the load, take care not to damage the nylon slings. Avoid contact with protrusions.
 - Avoid dragging slings on the ground, throwing slings or pushing slings with a metal object.
 - When using with other types of slings (wire rope) or accessories (shackle), protect the joint so that the nylon sling is not damaged.
 - Store the nylon slings indoors so they won't deteriorate with heat, sun light, or chemicals.

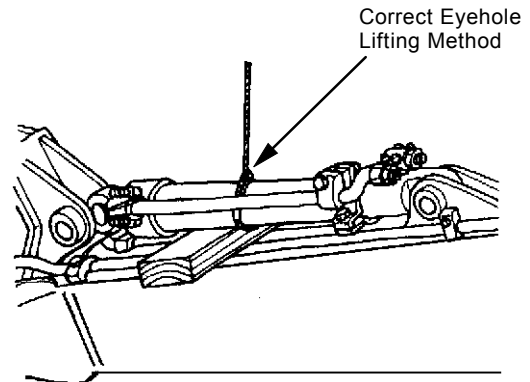

W102-04-02-016

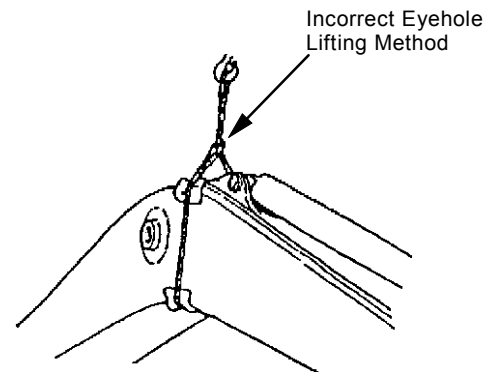

W105-04-01-008

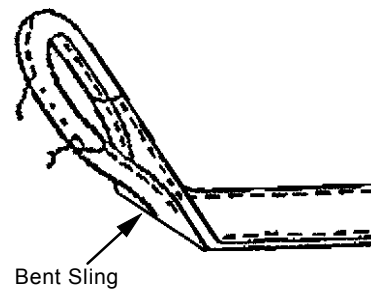

W162-01-01-009


GENERAL / Precautions for Disassembling and Assembling



CAUTION: If a load is lifted with a damaged nylon sling, serious personal injury may result. Be sure to visually check the nylon sling for any damage before using.

2. Before using a nylon sling, visually check the nylon sling for any damage corresponding to examples shown to the right. If any damage is found, cut and discard the sling. Even if no damage is found, do not use slings older than 7-years.

Damaged Appearance

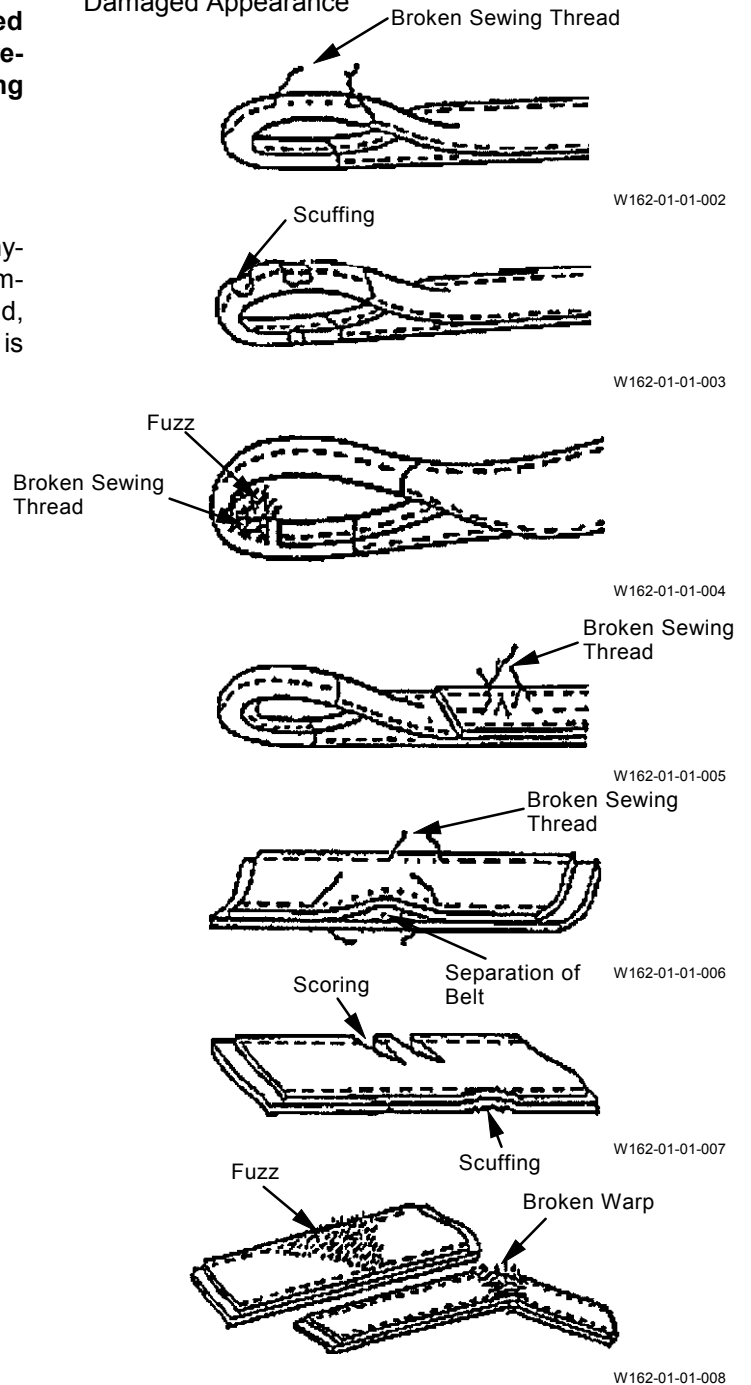

GENERAL / Precautions for Disassembling and Assembling

MAINTENANCE STANDARD TERMINOLOGY

“Standard”

1. Dimension for parts on a new machine.
2. Dimension of new components or assemblies adjusted to specification.

“Allowable Limit”


1. Normal machine performance cannot be accomplished after exceeding this limit.
2. Repair or adjustment is impossible after exceeding this limit.
3. Therefore, in consideration of operation efficiency and maintenance expense, proper maintenance shall be carried out before reaching the “Allowable Limit”.

GENERAL / Tightening

TIGHTENING TORQUE SPECIFICATION

No.	Descriptions	Bolt Dia mm	Q'ty	Wrench Size (mm)	Torque		
					N-m	(kgf-m)	(lbf-ft)
1	Engine cushion rubber mounting bolt	36	12	55	3140	(320)	(2310)
2	Engine bracket mounting bolt	a	24	46	1420	(145)	(1050)
		b	16	30	540	(55)	(400)
		c	32	28.6	440	(45)	(325)
		d	8	36	740	(75)	(540)
		e	24	24	270	(27)	(200)
3	Hydraulic oil tank mounting bolt	36	10	55	2400	(245)	(1770)
4	Fuel tank mounting bolt	36	22	55	2400	(245)	(1770)
5	Pump transmission mounting bolt	UNC1/2	32	19	118	(12)	(87)
6	Pump device mounting bolt	24	24	36	690	(70)	(510)
7	Fan drive pump mounting bolt	20	8	30	390	(40)	(290)
8	Gear pump mounting bolt	12	8	19	88	(9)	(65)
9	Control valve mounting nut	20	24	30	390	(40)	(290)
10	Swing device mounting bolt	36	56	55	3140	(320)	(2320)
11	Swing motor mounting bolt	20	16	30	390	(40)	(290)
12	Battery mounting bolt	10	24	17	49	(5)	(36)
13	Cab mounting bolt	18	8	27	295	(30)	(215)
14	Cab bed mounting bolt	12	50	19	88	(9)	(65)
15	Swing bearing mounting bolt	56	142	85	9800	(1000)	(7230)
16	Counterweight mounting bolt	56	14	85	6860	(700)	(5060)
17	Engine bed mounting bolt	36	84	55	3140	(320)	(2310)
18	Oil cooler mounting bolt	27	8	41	1370	(140)	(1010)
19	Radiator mounting nut	27	8	41	1370	(140)	(1010)
20	Fan motor housing mounting bolt	16	8	22	137	(14)	(101)
21	Fan motor bracket mounting bolt	12	12	19	88	(9)	(65)
22	Fuel cooler mounting bolt	12	8	19	90	(9.2)	(66)
23	Fan motor housing mounting bolt (for fuel cooler)	10	8	17	50	(5.1)	(37)
24	Fan motor bracket mounting bolt (for fuel cooler)	10	8	17	50	(5.1)	(37)
25	Travel device mounting bolt	36	24	55	3140	(320)	(2310)
		56	56	85	9800	(1000)	(7230)
		24	40	36	690	(70)	(505)
		20	46	30	390	(40)	(290)
26	Travel motor mounting bolt	22	16	32	740	(75)	(540)
27	Upper roller mounting bolt	30	24	46	1910	(195)	(1410)
28	Lower roller mounting bolt	56	56	85	9800	(1000)	(7230)
29	Track pin-retaining bolt	30	156	46	1910	(195)	(1410)
30	Side frame mounting bolt	64	80	95	14700	(1500)	(10850)
31	Travel motor cover (Backhoe)	36	30	55	3140	(320)	(2310)
32	Front pin-retaining bolt (Loading Shovel)	24	36	36	930	(95)	(690)
		20	8	30	390	(40)	(290)
		27	10	19	1030	(105)	(759)
33	Front pin-retaining bolt (Backhoe)	24	20	36	930	(95)	(690)
		20	22	30	390	(40)	(290)

GENERAL / Tightening

-  NOTE 1. Apply lubricant (e.g. white zinc B dissolved into spindle oil) to bolts and nuts to reduce friction coefficient of them.
2. Make sure bolt and nut threads are clean before installing.
3. Apply LOCTITE to threads before installing and tightening swing bearing mounting bolts and lower roller mounting bolts.

GENERAL / Tightening

TORQUE CHART

⚠ CAUTION: Use tools appropriate for the work to be done. Makeshift tools and procedures can create safety hazards. For loosening and tightening nuts and bolts, use correct size tools. Otherwise, tightening tools may slip, potentially causing personal injury.











SA-040

Bolt Types

Tighten nuts or bolts correctly to torque specifications. Four different types and grades of bolt are employed. Make sure to employ correct bolts and tighten them correctly when assembling the machine or components.

Specified Tightening Torque Chart

Bolt Dia.	Wrench Size	Hexagon Wrench Size	   M552-07-091			   Socket Bolt M552-07-090			  M157-07-225		
			N·m	(kgf·m)	(lbf·ft)	N·m	(kgf·m)	(lbf·ft)	N·m	(kgf·m)	(lbf·ft)
M8	13	6	30	(3.1)	(22)	20	(2.0)	(15.0)	10	(1.0)	(7.4)
M10	17	8	65	(6.6)	(48)	50	(5.1)	(37)	20	(2.0)	(15.0)
M12	19	10	110	(11.0)	(81)	90	(9.2)	(66)	35	(3.6)	(26.0)
M14	22	12	180	(18.5)	(135)	140	(14.3)	(103)	55	(5.6)	(41)
M16	24	14	270	(27.5)	(200)	210	(21.5)	(155)	80	(8.2)	(59)
M18	27	14	400	(41.0)	(295)	300	(30.5)	(220)	120	(12.0)	(89)
M20	30	17	550	(56.0)	(410)	400	(41.0)	(295)	170	(17.0)	(125)
M22	32	17	750	(76.5)	(550)	550	(56.0)	(410)	220	(22.5)	(162)
M24	36	19	950	(97.0)	(700)	700	(71.5)	(520)	280	(28.5)	(205)
M27	41	19	1400	(143)	(1030)	1050	(107)	(770)	400	(41.0)	(295)
M30	46	22	1950	(200)	(1440)	1450	(148)	(1070)	550	(56.0)	(410)
M33	50	24	2600	(265)	(1920)	1950	(200)	(1440)	750	(76.5)	(550)
M36	55	27	3200	(325)	(2360)	2450	(250)	(1810)	950	(97.0)	(700)

GENERAL / Tightening


IMPORTANT: The following items are applied to both fine and coarse pitch threads.

1. Apply lubricant (i. e. white zinc B dissolved into Spindle oil) to nuts and bolts to reduce their friction coefficients.
The plated bolts require no lubricant.
2. Torque tolerance is $\pm 10\%$.
3. Be sure to use bolts of correct length. Bolts that are too long cannot be tightened, as the bolt tip comes into contact with the bottom of the bolt hole. Bolts that are too short cannot develop sufficient tightening force.
4. The torques given in the chart are for general use only. Do not use these torques if a different torque is given for a specific application.
5. Make sure that nut and bolt threads are clean before installing.
Remove dirt or corrosion, if any.


Bolt Tightening Order

When tightening two or more bolts, tighten them alternately, as shown, to ensure even tightening.


Equally tighten upper and lower alter-

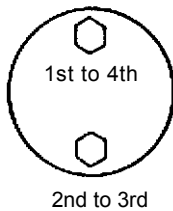

Tighten diagonally

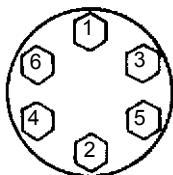

Tighten from center and diago-

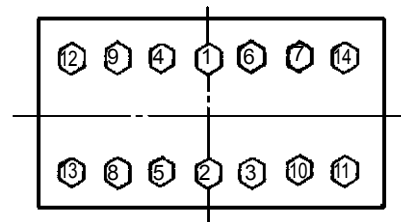


W105-01-01-003

GENERAL / Tightening


Service Recommendations for Split Flange

- IMPORTANT:**
1. Be sure to clean and inspect sealing surfaces. Scratches / roughness cause leaks and seal wear. Unevenness causes seal extrusion. If defects cannot be polished out, replace the component.
 2. Be sure to use only specified O-rings. Inspect O-rings for any damage. Take care not to file O-ring surfaces. When installing an O-ring into a groove, use grease to hold it in place.
 3. While lightly tightening split flange halves, check that split is centered and perpendicular to the port. Hand-tighten bolts to hold parts in place. Take care not to pinch the O-ring.
 4. Tighten bolts alternately and diagonally, as shown, to ensure even tightening.
 5. Do not use air wrenches. Using an air wrench often causes tightening of one bolt fully before tightening of the others, resulting in damage to O-rings or uneven tightening of bolts.

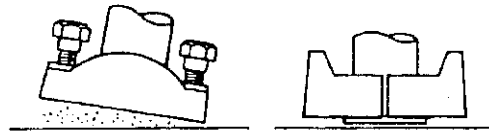


W105-01-01-015

WRONG

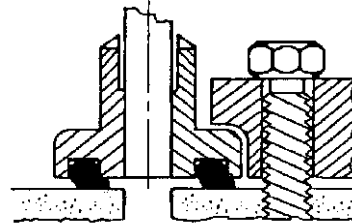


W105-01-01-016

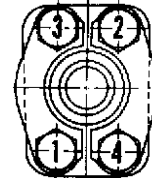


W105-01-01-008

RIGHT

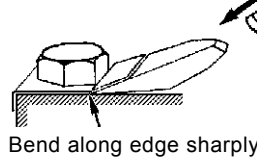

Bend along edge sharply

WRONG

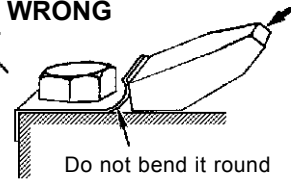

Do not bend it round

Nut and Bolt Locking

- Lock Plate

IMPORTANT: Do not reuse lock plates. Do not try to bend the same point twice.


- Cotter Pin

IMPORTANT: Do not reuse cotter pins. Match the holes in the bolt and nut while tightening, not while loosening.


- Lock Wire

IMPORTANT: Apply wire to bolts in the bolt-tightening direction, not in the bolt-loosening direction.


RIGHT



RIGHT




WRONG



Bend along edge sharply

RIGHT



RIGHT




WRONG



W105-01-01-009


RIGHT

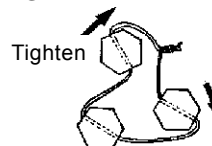

Tighten

Loosen

WRONG

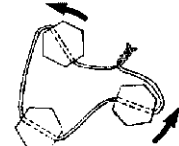


W105-01-01-010

GENERAL / Tightening

PIPING JOINT


IMPORTANT: The torques given in the chart are for general use only. Do not use these torques if a different torque is given for a specific application.

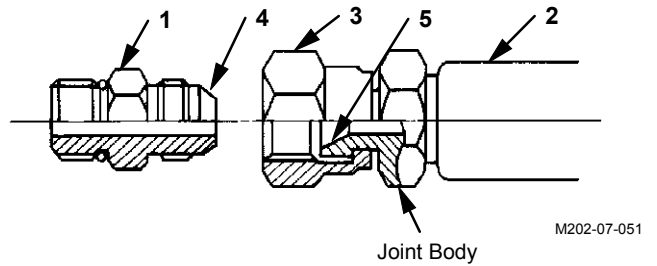

Union Joint

Metal sealing surfaces (4) and (5) of adapter (1) and hose (2) fit together to seal pressure oil. Union joints are used to join small-diameter lines.

- IMPORTANT:**
1. Do not over-tighten nut (3). Excessive force will be applied to metal sealing surfaces (4) and (5), possibly cracking adapter (1). Be sure to tighten nut (3) to specifications.
 2. Scratches or other damage to sealing surfaces (4) or (5) will cause oil leakage at the joint. Take care not to damage them when connecting/disconnecting.

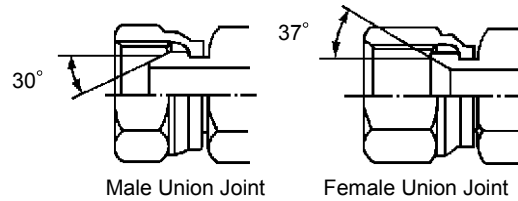

Description	Wrench Size mm	Wrench Size mm	Tightening Torque
	Union Nut	Hose Fittings	N·m (kgf·m, lbf·ft)
30° male	17	17	24.5 (2.5,18)
	19	19	29.5 (3.0,21.5)
	22	22	39 (4.0,28.5)
	27	27	93 (9.5,69)
	32	32	137 (14.0,101)
	36	36	175 (18.0,129)
	41	41	205 (21.0,151)
37° female	17	14	24.5 (2.5,18)
	19	17	29.5 (3.0,21.5)
	22	19	39 (4.0,28.5)
	27	22	93 (9.5,69)
	32	27	137 (14.0,101)
	36	32	175 (18.0,129)
	41	36	205 (21.0,151)


NOTE: Tightening torque of 37° male coupling without union is similar to tightening torque of 37° female.

GENERAL / Tightening

O-ring Seal Joint

O-ring (6) seats against the end face of adapter (7) to seal pressure oil.

- IMPORTANT:**
1. Be sure to replace O-ring (6) with a new one when reconnecting.
 2. Before tightening nut (9), confirm that O-ring (6) is seated correctly in O-ring groove (e). Tightening nut (9) with O-ring (6) displaced will damage O-ring (6), resulting in oil leakage.
 3. Take care not to damage O-ring groove (e) or sealing surface (10). Damage to O-ring (6) will cause oil leakage.
 4. If nut (9) is loose and oil is leaking, do not re-tighten nut (9). Replace O-ring (6) with a new one and check that O-ring (6) is correctly seated in place, tighten nut (9).

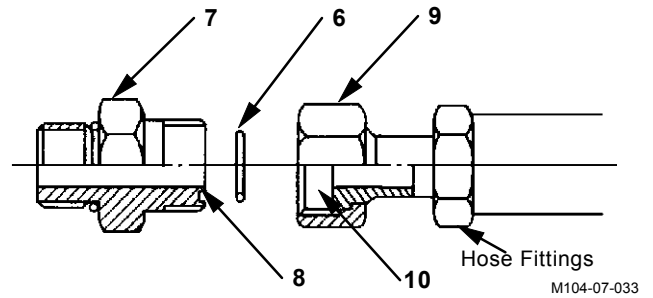


Wrench Size mm	Wrench Size mm	Tightening Torque
Union Nut	Hose Fittings	N·m (kgf·m, lbf·ft)
19	17	29.5 (3.0,21.5)
22	19	69 (7.0,51)
27	22	93 (9.5,69)
32	27	137 (14.0,101)
36	30,32	175 (18.0,129)
41	36	205 (21.0,151)
46	41	205 (21.0,151)

GENERAL / Tightening

Screw-In Connection

Depending on types of screw and sealing, different types of screw fittings are used.

IMPORTANT: Be sure to confirm that the thread pitch and thread type (tapered or straight) are the correct type before using any screw-in connection.

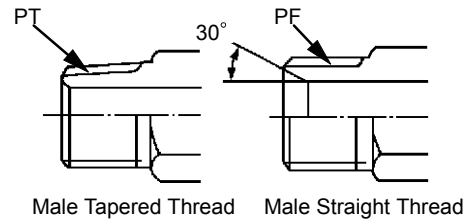

W105-01-01-018

Male Tapered Thread		
Wrench Size mm	Tightening Torque N·m (kgf·m, lbf·ft)	
Hose Fittings	FC material	SS material
19	14.5 (1.5,10.5)	34 (3.5,25)
22	29.5 (3.0,21.5)	49 (5.0,36)
27	49 (5.0,36)	93 (9.5,69)
36	69 (7.0,51)	157 (16,116)
41	108 (11,80)	205 (21,151)
50	157 (16,116)	320 (33,235)
60	195 (20,144)	

Seal Tape Application

Seal tape is used to seal clearances between male and female threads, so as to prevent any leaks between threads.

Be sure to apply just enough seal tape to fill up thread clearances. Do not overwrap.

• Application Procedure

Confirm that the thread surface is clean and, free of dirt or damage.

Apply seal tape around threads as shown. Wrap seal tape in the same direction as the threads.

Low-Pressure-Hose Clamp Tightening Torque


Low-pressure-hose clamp tightening torque differs depending on the type of clamp.

T-Bolt Type Band Clamp:

4.4 N·m (0.45 kgf·m, 3.25 lbf·ft)


Worm Gear Type Band Clamp:

5.9 to 6.9 N·m (0.6 to 0.7 kg·m, 4.3 to 5.1 lbf·ft)

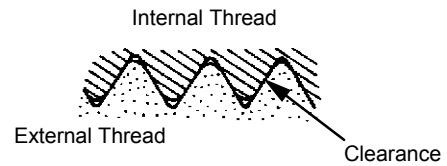


W105-01-01-019

Leave one to two pitch threads uncovered

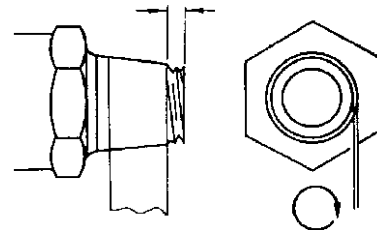

M114-07-041

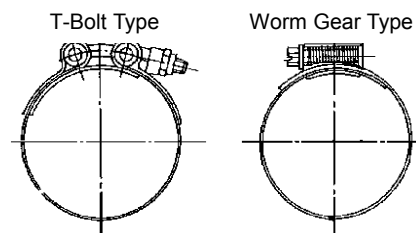

M114-07-043

M114-07-042

GENERAL / Tightening

Connecting Hose




CAUTION: When replacing hoses, be sure to use only genuine Hitachi service parts. Using hoses other than genuine Hitachi hoses may cause oil leaks, hose rupture or Separation of fitting, possibly resulting in a fire on the machine.

Do not install hoses kinked. Application of high oil pressure, vibration, or an impact to a kinked hose may result in oil leaks, hose rupture or separation of fitting. Utilize Print marks on hoses when installing to prevent hose from being kinked.


If hoses rub against each other, wear to the hoses will result, leading to hose rupture. Take necessary measures to protect hoses from rubbing against each other.

Take care so that hoses do not come into contact with moving parts or sharp objects.

WRONG

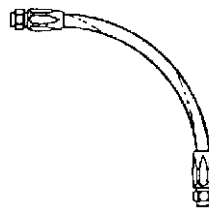


RIGHT

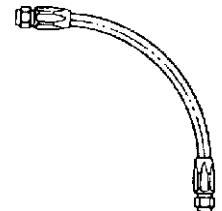


W105-01-01-011

WRONG

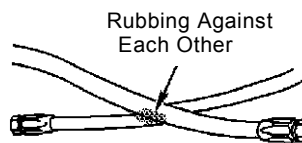


RIGHT

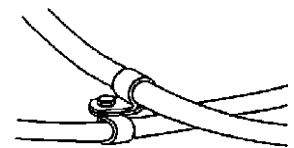


W105-01-01-012

WRONG

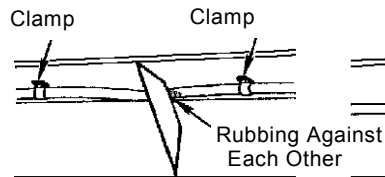


RIGHT

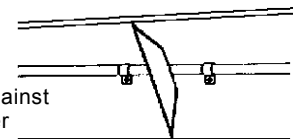


W105-01-01-013

WRONG

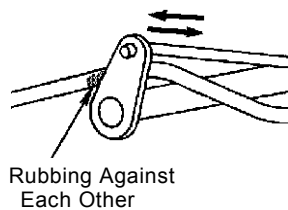

RIGHT

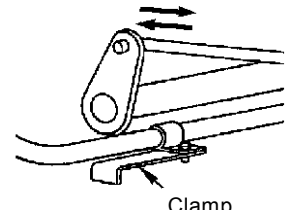

W105-01-01-014

GENERAL / Tightening

PERIODIC REPLACEMENT OF PARTS


To ensure safe operation, be sure to conduct periodic inspection of the machine. In addition, the parts listed below, if defective, may pose serious safety/fire hazards. It is very difficult to gauge the extent of deterioration, fatigue, or weakening of the parts listed below simply by visual inspection alone. For this reason, replace these parts at the intervals shown in the table below. However, if any of these parts are found to be defective, replace before starting operation, regardless of the interval.

Also, when replacing hoses, check the clamps for deformation, cracks, or other deterioration, and replace as necessary.


Be sure to perform periodic inspection of all hoses, as shown below, and replace or retighten any defective parts found, as necessary.

Consult your authorized dealer for correct replacement.

Periodic Replacement Parts		Replacement Intervals	
Engine	Fuel hose (Fuel tank to filter)	Every 2 years	
	Fuel hose (Fuel tank to injection pump)	Every 2 years	
	Heater hose (Heater to engine)	Every 2 years	
Hydraulic System	Base Machine	Pump suction hose	Every 2 years
		Pump delivery hose	Every 2 years
		Swing hose	Every 2 years
	Front Attachment	Boom cylinder line hose	Every 2 years
		Arm cylinder line hose	Every 2 years
		Bucket cylinder line hose	Every 2 years
		Pilot hose	Every 2 years

 **NOTE:** Be sure to replace seals, such as O-rings and gaskets, when replacing hoses.

SECTION 2 UPPERSTRUCTURE

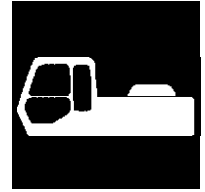

CONTENTS

Group 1 Cab

Dimensions of the Cab Glass W2-1-1

Group 2 Counterweight

Remove and Install Counterweight W2-2-1

Group 3 Main Frame

Remove and Install Main Frame W2-3-1
Remove and Install Left Frame W2-3-2
Remove and Install Right Frame W2-3-9
Remove and Install Main Frame W2-3-14

Group 4 Pump Device

Remove and Install Pump Device W2-4-1
Disassemble Pump Transmission W2-4-24
Assemble Pump Transmission W2-4-28
Disassemble Main Pump W2-4-30
Assemble Main Pump W2-4-40
Maintenance Standard W2-4-48
Disassemble Regulator
for Main Pump W2-4-50
Assemble Regulator for Main Pump .. W2-4-56
Components of 4-Spool Pump W2-4-63
Disassemble Oil Cooler Fan
Drive Pump W2-4-64
Assemble Oil Cooler Fan
Drive Pump W2-4-68
Maintenance Standard W2-4-74
Disassemble Regulator
for Oil Cooler Fan Drive Pump W2-4-76
Assemble Regulator
for Oil Cooler Fan Drive Pump W2-4-82

Disassemble Air Compressor

Drive Pump and Pilot Pump W2-4-88

Assemble Air Compressor

Drive Pump and Pilot Pump W2-4-94

Maintenance Standard W2-4-98

Disassemble Lubrication Pump

for Pump Transmission W2-4-100

Assemble Lubrication Pump

for Pump Transmission W2-4-102

Maintenance Standard W2-4-104

Group 5 Control Valve

Remove and Install Control Valve W2-5-1
Disassemble Control Valve W2-5-7
Assemble Control Valve W2-5-15

Group 6 Swing Device

Remove and Install Swing Device W2-6-1
Disassemble Swing Device W2-6-4
Assemble Swing Device W2-6-10
Disassemble Swing Motor W2-6-16
Assemble Swing Motor W2-6-20
Maintenance Standard W2-6-24
Disassemble and Assemble
Valve Unit W2-6-26

Group 7 Pilot Valve

- Remove and Install
 - Front/Swing Pilot Valve W2-7-1
- Remove and Install Travel and
 - Bucket Open/Close Pilot Valve W2-7-4
- Pilot Line Connection W2-7-8
- Disassemble Front/Swing Pilot Valve. W2-7-10
- Assemble Front/Swing Pilot Valve W2-7-12
- Disassemble Travel and
 - Bucket Open/Close Pilot Valve W2-7-16
- Assemble Travel and
 - Bucket Open/Close Pilot Valve W2-7-18

Group 8 DQR Valve

- Remove and Install DQR Valve..... W2-8-1
- DQR Valve Construction..... W2-8-4

Group 9 Pilot Shut-Off Valve

- Remove and Install
 - Pilot Shut-off Valve W2-9-1
- Disassemble Pilot Shut-off Valve W2-9-4
- Assemble Pilot Shut-off Valve..... W2-9-6

Group 10 Shuttle Valve

- Remove and Install Shuttle Valve W2-10-1
- Disassemble and Assemble
 - Shuttle Valve W2-10-4

Group 11 Solenoid Valve

- Remove and Install Solenoid Valve.... W2-11-1
- Solenoid Valve Construction W2-11-4

Group 12 Oil Cooler Fan Motor

- Remove and Install
 - Oil Cooler Fan Motor W2-12-1
- Disassemble Oil Cooler Fan Motor W2-12-6
- Assemble Oil Cooler Fan Motor..... W2-12-8
- Maintenance Standard W2-12-10

Group 13 Fuel Cooler Fan Motor

- Remove and Install
 - Fuel Cooler Fan Motor W2-13-1
- Disassemble Fuel Cooler Fan Motor.. W2-13-4
- Assemble Fuel Cooler Fan Motor W2-13-8
- Maintenance Standard..... W2-13-12

Group 14 Compressor Drive Motor

- Remove and Install
 - Compressor Drive Motor..... W2-14-1
- Disassemble Compressor
 - Drive Motor..... W2-14-4
- Assemble Compressor Drive Motor ... W2-14-6

Group 15 Air Conditioner

- Work after Replacing Component..... W2-15-1
- Add Compressor Oil W2-15-1
- Charge Air Conditioner
 - with Refrigerant W2-15-2

Group 16 Lift Cylinder


- Remove and Install Lift Cylinder W2-16-1
- Disassemble Lift Cylinder W2-16-4
- Assemble Lift Cylinder W2-16-6


UPPERSTRUCTURE / Cab

DIMENSIONS OF THE CAB GLASS


Unit: mm

Material: JIS R 3211, ANSI AS2, ECE ANNEX5 or equivalent


 NOTE: 1 mm = 0.03937 in

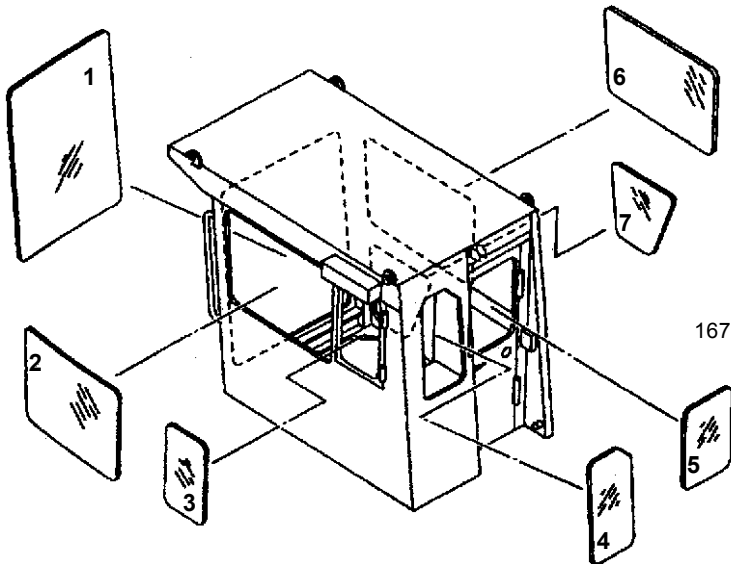


W146-02-01-002

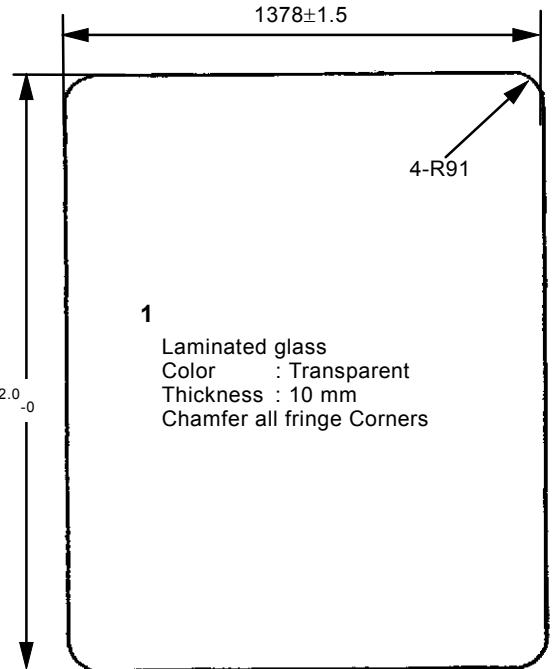

W117-02-01-002

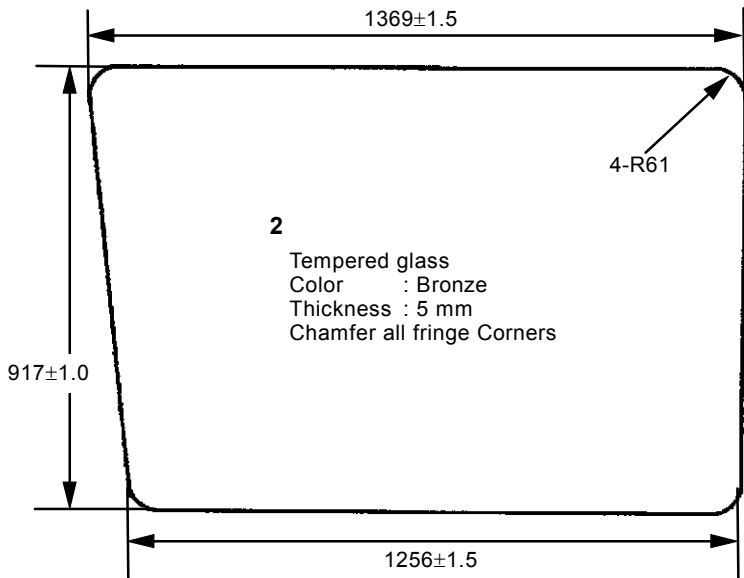


W117-02-01-003

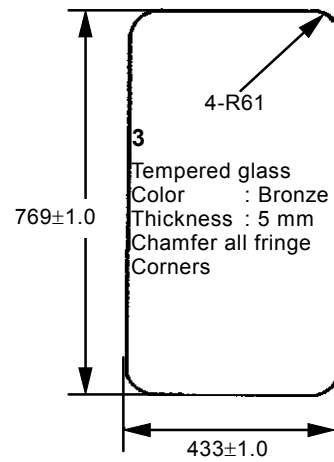

W117-02-01-004

UPPERSTRUCTURE / Cab

 NOTE: 1 mm = 0.03937 in

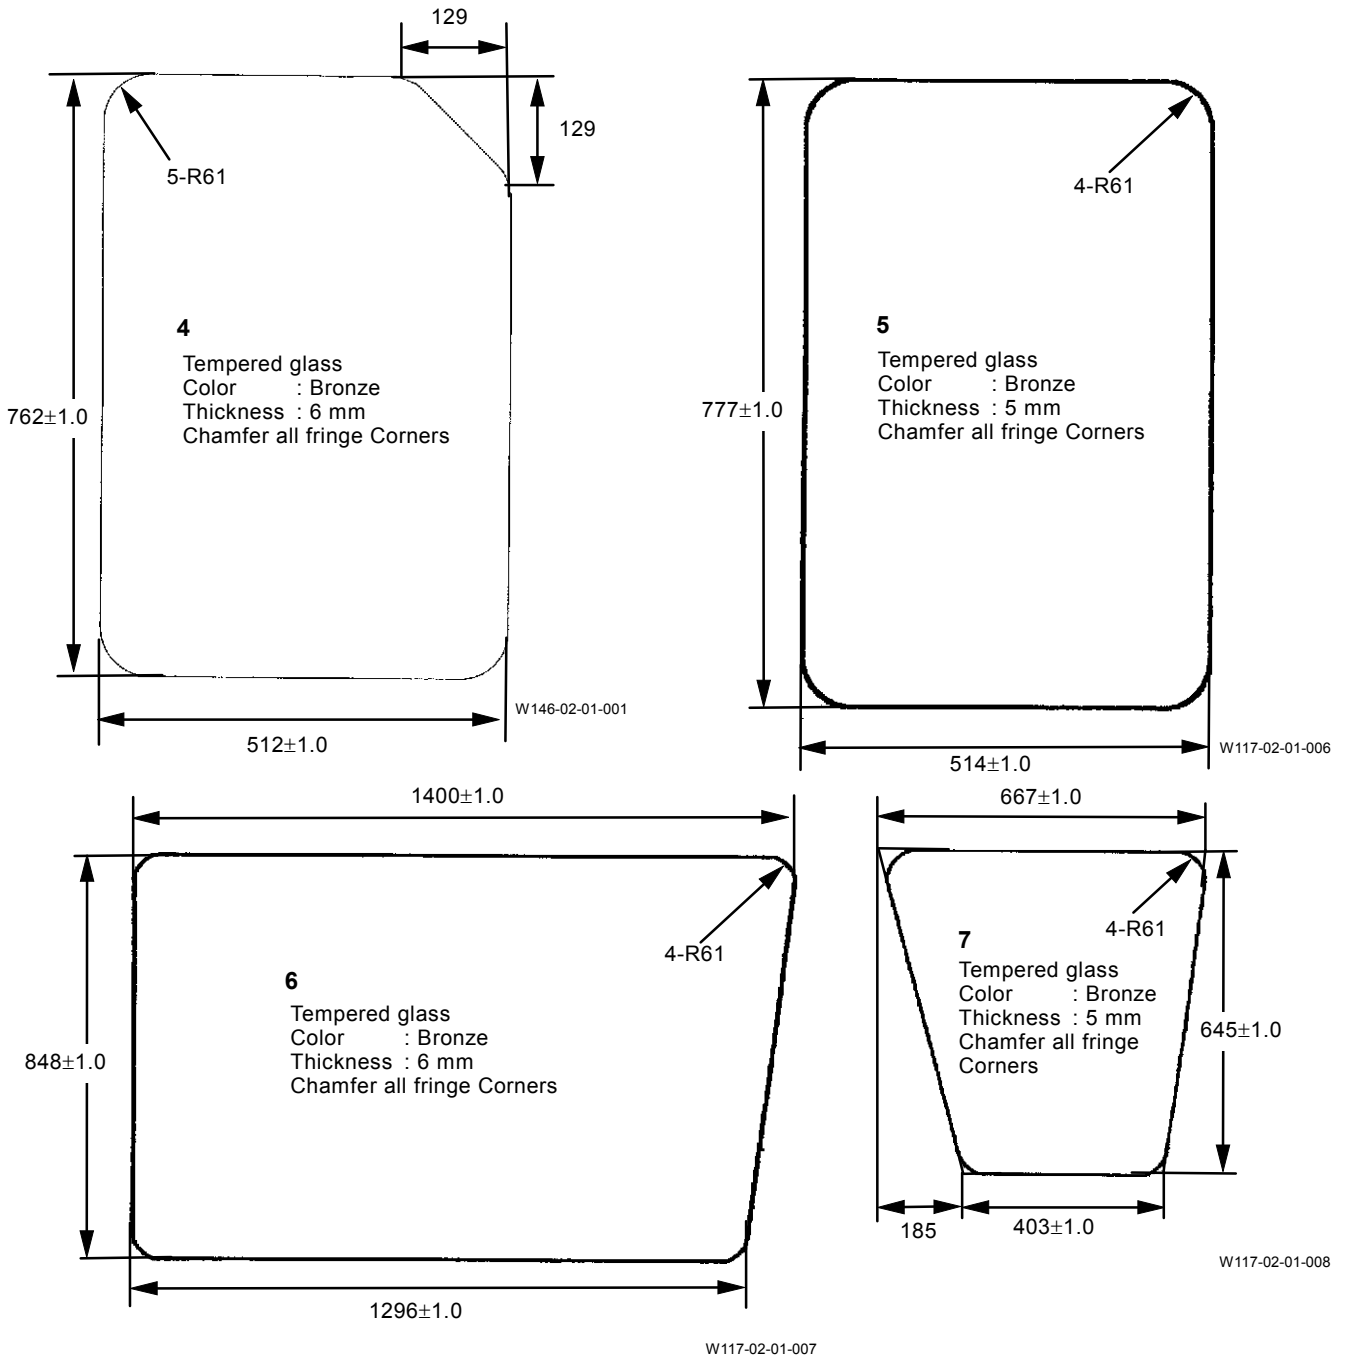

UPPERSTRUCTURE / Counterweight


REMOVE AND INSTALL COUNTERWEIGHT

CAUTION: Park the machine on a solid level surface. Lower the bucket to the ground steady before starting work.

Be sure not to operate the machine or the front attachment with the counterweight having been removed. Otherwise the machine may tip over.


Removal

1. Park the machine on a solid level surface with the front positioned as illustrated on the right.
2. Install eyebolts (M12, Pitch 1.75) into the lifting holes (2 used for each) in covers (2) (2 used) and (3) (2 used). Remove bolts (1) (20 used) to lift and remove covers (2) (2 used) and (3) (2 used) from the counterweight by crane.


 : 19 mm


CAUTION: Counterweight weight:
52100 kg (114860 lb)
Shackle (4) weight: 26 kg (60 lb)

3. Attach wire to shackles (4) (4 used) and lift by crane. Then install the shackle to the lifting hole in the top of the counterweight. Hold the counterweight by crane.

 **NOTE:** Shackle (4): Part No. 4048503

4. Remove U-nuts (7) (10 used) and washers (6) (10 used).

 **NOTE:** If U-nut (7) is removed from bolt (5), it can fall freely. Catch U-nut (7) by hand or receive it with a tray.


 : 85 mm




T142-05-03-007



T142-05-03-008

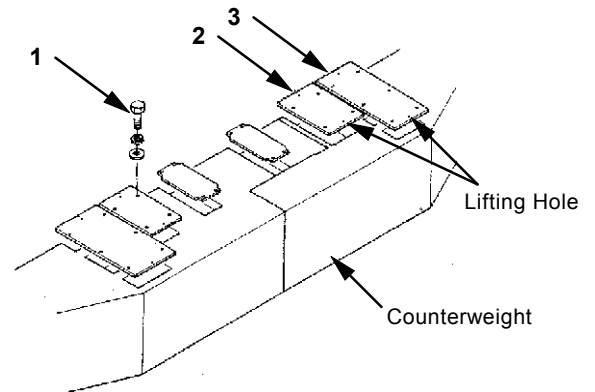

W18B-02-02-008

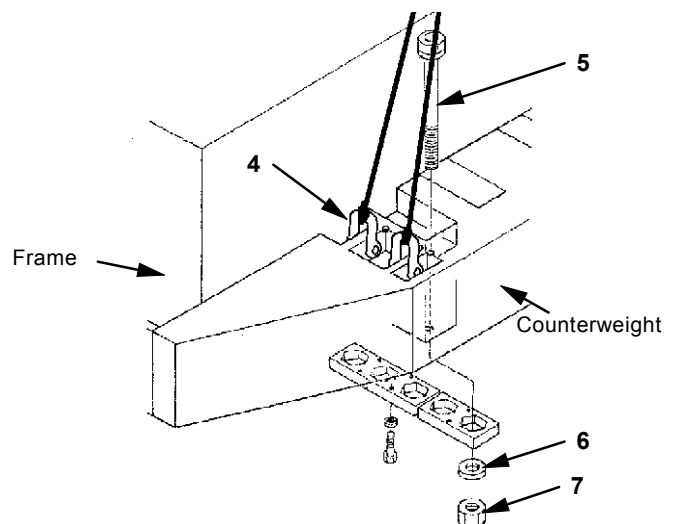

W18B-02-02-009

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**