

ProGator[®] Utility Vehicle 2020 and 2030

TECHNICAL MANUAL

**John Deere
Worldwide Commercial and
Consumer Equipment Division**

TM1759 (26Jan00)

Safety



Specifications and Information



Engine—Gasoline



Engine—Diesel



Electrical



Power Train



Steering



Hydraulics



Brakes



Miscellaneous





RECOGNIZE SAFETY INFORMATION



This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.


Follow recommended precautions and safe servicing practices.

Understand Signal Words

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.


REPLACE SAFETY SIGNS

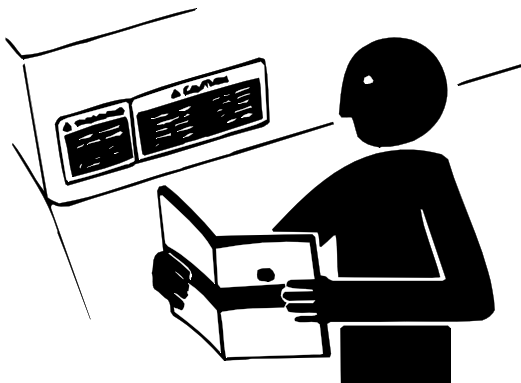

Replace missing or damaged safety signs. See the machine operator's manual for correct safety sign placement.

HANDLE FLUIDS SAFELY-AVOID FIRES

Be Prepared For Emergencies

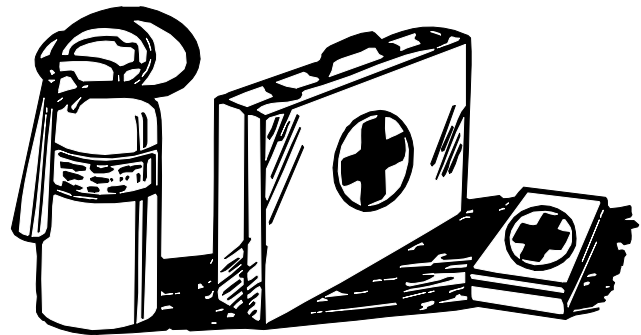

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.


Do not store oily rags; they can ignite and burn spontaneously.

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

USE CARE IN HANDLING AND SERVICING BATTERIES

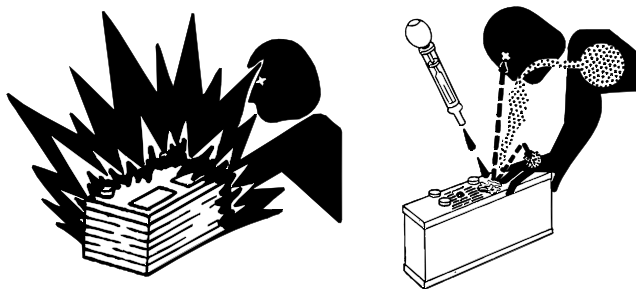

Prevent Battery Explosions

- Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.
- Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.
- Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).

Prevent Acid Burns

- Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.
- **Avoid acid burns by:**
 1. Filling batteries in a well-ventilated area.
 2. Wearing eye protection and rubber gloves.
 3. Avoiding breathing fumes when electrolyte is added.
 4. Avoiding spilling or dripping electrolyte.
 5. Use proper jump start procedure.
- **If you spill acid on yourself:**
 1. Flush your skin with water.
 2. Apply baking soda or lime to help neutralize the acid.
 3. Flush your eyes with water for 10_15 minutes.
 4. Get medical attention immediately.
- **If acid is swallowed:**
 1. Drink large amounts of water or milk.
 2. Then drink milk of magnesia, beaten eggs, or vegetable oil.
 3. Get medical attention immediately.

USE CARE AROUND HIGH-PRESSURE FLUID LINES



Avoid High-pressure Fluids



Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid injury from escaping fluid under pressure by stopping the engine and relieving pressure in the system before disconnecting or connecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

Avoid Heating Near Pressurized Fluid Lines




Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



USE SAFE SERVICE PROCEDURES

Wear Protective Clothing

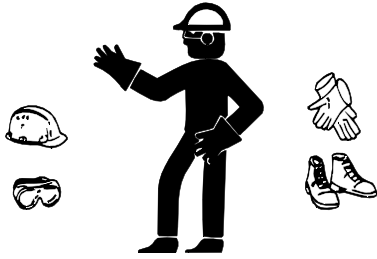


Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing. Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

Service Machines Safely

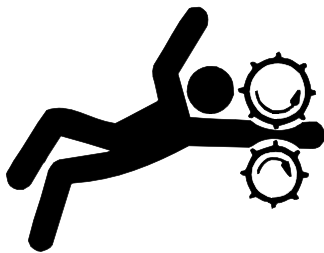


Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

Use Proper Tools

Use tools appropriate to the work. Makeshift tools and procedures can create safety hazards. Use power tools only to loosen threaded parts and fasteners. For loosening and tightening hardware, use the correct size tools. **DO NOT** use U.S. measurement tools on metric fasteners. Avoid bodily injury caused by slipping wrenches. Use only service parts meeting John Deere specifications.


Park Machine Safely

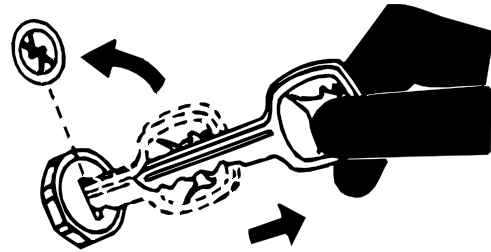

Before working on the machine:

1. Lower all equipment to the ground.
2. Stop the engine and remove the key.
3. Disconnect the battery ground strap.
4. Hang a "DO NOT OPERATE" tag in operator station.

Support Machine Properly And Use Proper Lifting Equipment

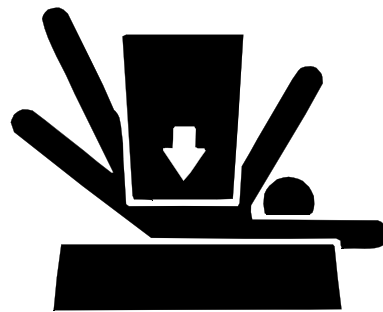

If you must work on a lifted machine or attachment, securely support the machine or attachment.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

Lifting heavy components incorrectly can cause severe injury or machine damage. Follow recommended procedure for removal and installation of components in the manual.

Work In Clean Area

Before starting a job:

1. Clean work area and machine.
2. Make sure you have all necessary tools to do your job.
3. Have the right parts on hand.
4. Read all instructions thoroughly; do not attempt shortcuts.


Using High Pressure Washers

Directing pressurized water at electronic/electrical components or connectors, bearings, hydraulic seals, fuel injection pumps or other sensitive parts and components may cause product malfunctions. Reduce pressure and spray at a 45 to 90 degree angle.

Illuminate Work Area Safely

Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.

Work In Ventilated Area

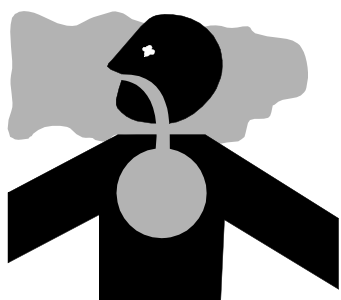

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

WARNING: California Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

Gasoline engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

Remove Paint Before Welding Or Heating

Avoid potentially toxic fumes and dust. Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch. Do all work outside or in a well ventilated area. Dispose of paint and solvent properly. Remove paint before welding or heating: If you sand or grind paint, avoid breathing the dust. Wear an approved respirator. If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

Avoid Harmful Asbestos Dust

Avoid breathing dust that may be generated when handling components containing asbestos fibers. Inhaled asbestos fibers may cause lung cancer.

Components in products that may contain asbestos fibers are brake pads, brake band and lining assemblies, clutch plates, and some gaskets. The asbestos used in these components is usually found in a resin or sealed in some way. Normal handling is not hazardous as long as airborne dust containing asbestos is not generated.

Avoid creating dust. Never use compressed air for cleaning. Avoid brushing or grinding material containing asbestos. When servicing, wear an approved respirator. A special vacuum cleaner is recommended to clean asbestos. If not available, apply a mist of oil or water on the material containing asbestos. Keep bystanders away from the area.



SERVICE TIRES SAFELY



Explosive separation of a tire and rim parts can cause serious injury or death.


Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job. Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.

When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.




AVOID INJURY FROM ROTATING BLADES, AUGERS & PTO SHAFTS

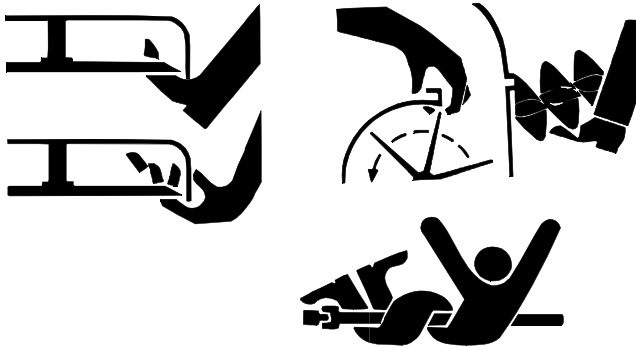

Keep hands and feet away while machine is running. Shut off power to service, lubricate or remove mower blades, augers or PTO shafts.

HANDLE CHEMICAL PRODUCTS SAFELY

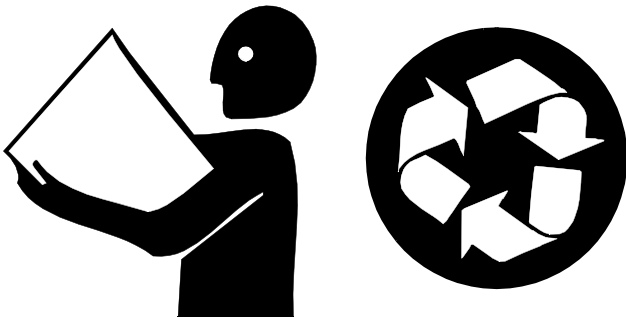


Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques. Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

Dispose of Waste Properly

Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries. Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them. Do not pour waste onto the ground, down a drain, or into any water source. Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

SERVICE COOLING SYSTEM SAFELY

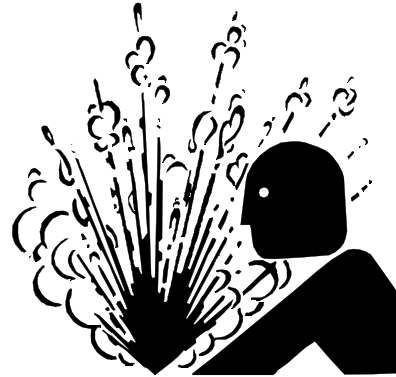

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off machine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

LIVE WITH SAFETY



Before returning machine to customer, make sure machine is functioning properly, especially the safety systems. Install all guards and shields.

CONTENTS

GENERAL VEHICLE SPECIFICATIONS	3
ENGINE – GASOLINE	3
ENGINE – DIESEL	3
ELECTRICAL	4
FUEL SYSTEM	4
DRIVE TRAIN	4
HYDRAULIC SYSTEM	5
TIRES	5
Dimensions	5
INCH FASTENER TORQUE VALUES	6
METRIC FASTENER TORQUE VALUES	7
O-RING SEAL SERVICE RECOMMENDATIONS	8
FACE SEAL FITTINGS WITH INCH STUD ENDS TORQUE	8
FACE SEAL FITTINGS WITH METRIC STUD ENDS TORQUE	9
O-RING FACE SEAL FITTINGS	10
O-RING BOSS FITTINGS	10
FUEL SPECIFICATIONS	11
GASOLINE	11
GASOLINE STORAGE	11
DIESEL FUEL	12
DIESEL FUEL LUBRICITY	12
DIESEL FUEL STORAGE	12
LUBRICANTS	13
ENGINE OIL	13
BREAK-IN ENGINE OIL	13
BREAK-IN DIESEL ENGINE OIL	14
TRANSMISSION AND HYDRAULIC OIL	14
CHASSIS GREASE	15
ALTERNATIVE LUBRICANTS	15
SYNTHETIC LUBRICANTS	15
LUBRICANT STORAGE	16
MIXING OF LUBRICANTS	16
OIL FILTERS	16
COOLANTS	16
COOLANT	16
COOLANT DRAIN INTERVAL	17
PRODUCT IDENTIFICATION LOCATIONS	17



GENERAL VEHICLE SPECIFICATIONS

ENGINE – GASOLINE

Make	Yanmar
Model	3TG72-JUV
Type	4-cycle Gasoline
Bore	72 mm (2.84 in.)
Stroke	72 mm (2.84 in.)
Cylinders	3
Valves	Overhead
Displacement	879 cm ³ (53.6 in.)
Spark Plug	NGK BPR4ES
Gross Output Power	19.9 kW (26.7 hp)
Maximum Torque	64.5 N•m (47.6 lb-ft) @ 2300 rpm
Lubrication	Full Pressure
Oil Filter	Spin On (Standard)
Engine Slow Idle	1450 ±50 rpm
Engine Fast Idle	3530 ±50 rpm
Cooling System	Liquid w/Pump and Radiator
Air Cleaner	Dry Replaceable Primary and Secondary Elements

ENGINE – DIESEL

Make	Yanmar
Model	3TNE74C-JUV
Type	4-cycle Diesel
Bore	74 mm (2.91 in.)
Stroke	78 mm (3.07 in.)
Cylinders	3
Valves	Overhead
Displacement	1006 cm ³ (61.4 in.)
Gross Output Power	17.1 kW (22.9 hp)
Maximum Torque	61.7 N•m (45.5 lb-ft) @ 2400 rpm
Lubrication	Full Pressure
Oil Filter	Spin On (Standard)
Engine Rated Speed	3600 rpm
Engine Slow Idle	1450 ±50 rpm
Engine Fast Idle	3450 ±50 rpm
Cooling System	Liquid w/Pump and Radiator
Air Cleaner	Dry Replaceable Dual Element w/Safety Element

1. Specifications and design subject to change without notice.

ELECTRICAL

Volts.....	12 VDC
Battery Rating (CCA @ 0°F).....	.47 amp-hr (500 amp)
Alternator.....	.55 amps
Regulator.....	External, Current Limiting
Starting Motor	
Gasoline Engine.....	1.1 kW
Diesel Engine.....	1.1 kW
Headlights.....	37.5 W Halogen Bulb
Instrument Panel Lights.....	1.7 W Bayonet Base

FUEL SYSTEM**Gasoline Engine:**

System Type.....	Carburetor
Fuel Type.....	Gasoline - Regular Unleaded
Fuel Tank Capacity.....	30.3 L (8 gal)
Fuel Filter.....	In-Line
Fuel Pump.....	Electric

Diesel Engine:

System Type.....	Indirect Fuel Injection
Injection Pump.....	In-Line w/Electric Shutoff
Fuel Type.....	Diesel
Fuel Tank Capacity.....	30.3 L (8 gal)
Fuel Filter.....	Glass Bowl with Disposable Paper Element
Fuel Pump.....	Electric

DRIVE TRAIN

Type.....	Syncromesh Gear
Differential Lock.....	Standard, Hand Operated
Mechanical Front Wheel Drive (MFWD).....	Bi-Directional Overrunning Clutch
Number of Speeds.....	5 Forward, 1 Reverse
Steering.....	Hydraulic Power Assist
Clutch Type.....	Dry, Single Disk

HYDRAULIC SYSTEM

Lift/Lower System (Auxiliary)

Type	Open System
Working Pressure	17000 kPa (2466 psi)
Pump Capacity	26.9 liters/min (7.1 gpm)

Steering System

Type	Open System
Working Pressure	7500 kPa (1088 psi)
Pump Capacity	12.5 liters/min (3.3 gpm)

System Capacity 11.4 L (3.0 gal)

Relief Valve Pressure Settings

Steering Cylinder Unit	70 - 75 kpa (101 - 105 psi)
Lift / Lower and Auxiliary PTO Control Valve	17926 kpa (2600 psi)



TIRES

Front Tires	Industrial Trax 23X10.50-12
Rear Tires	Multi Trac 26X12.00-12
Rear Tires (Optional)	Multi Trac 26X14.00-12
Tire Pressure (All)	69-97 kPa (10-14 psi)

Dimensions

Ground Clearance	16.8 cm (6.6 in.)
Wheelbase (Front to Rear Axle)	167.6 cm (66 in.)
Wheel Tread, Front	123.2 cm (48.5 in.)
Wheel Tread, Rear	129 cm (50.8 in.)
Overall Length w/ Optional Cargo Box	328.4 cm (129.3 in.)
Overall Length w/o Optional Cargo Box	319.3 cm (125.7 in.)
Overall Width	158.5 cm (62.4 in.)
Overall Height	193.7 cm (76.3 in.)

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**