

TRS21/21E/22/24/26/27/32 and TRX24/26 Walk-Behind Snowthrowers/Snowblowers

TECHNICAL MANUAL

**John Deere
Lawn & Grounds Care Division
TM1466 (20Jan95)
Replaces TM1466 (25Aug92)**

Introduction

FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

N This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and diagnostics. Repair sections tell how to repair the components. Diagnostic sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, other materials needed to do the job and service parts kits.

Section 10, Group 15—Repair Specifications, consist of all applicable specifications, near tolerances and specific torque values for various components on each individual machine.

Binders, binder labels, and tab sets can be ordered by John Deere dealers direct from the John Deere Distribution Service Center.

This manual is part of a total product support program.

FOS MANUALS—REFERENCE

TECHNICAL MANUALS—MACHINE SERVICE

COMPONENT MANUALS—COMPONENT SERVICE

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced technicians.

Technical Manuals are concise guides for specific machines. Technical manuals are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Component Technical Manuals are concise service guides for specific components. Component technical manuals are written as stand-alone manuals covering multiple machine applications.

Contents

SECTION 10—GENERAL INFORMATION

- Group 05—Safety
- Group 10—General Specifications
- Group 15—Repair Specifications
- Group 20—Fuels and Lubricants
- Group 25—Serial Number Locations

SECTION 20—4 AND 5-HP ENGINE REPAIR—TRS22 AND TRS/TRX24

- Group 05—Carburetor, Fuel Tank, and Muffler
- Group 10—Remove and Install Engine
- Group 15—Blower Housing, Cylinder Head, and Breather
- Group 20—Governor, Camshaft, and Tappets
- Group 25—Flywheel, Crankshaft and Piston Assembly
- Group 30—Cylinder Block
- Group 35—Recoil Starter

SECTION 21—8 AND 10-HP ENGINE REPAIR—TRS/TRX26, TRS27, TRS32

- Group 05—Carburetor, Fuel Tank, and Muffler
- Group 10—Remove and Install Engine
- Group 15—Blower Housing, Cylinder Head, and Breather
- Group 20—Governor, Camshaft, and Tappets
- Group 25—Flywheel, Crankshaft and Piston Assembly
- Group 30—Cylinder Block
- Group 35—Recoil Starter

SECTION 25—4 AND 5-HP ENGINE REPAIR—TRS21

- Group 05—Fuel System and Muffler
- Group 10—Engine
- Group 15—Recoil Starter

SECTION 40—ELECTRICAL

- Group 05—Electric Starter—4-Cycle Engines
- Group 06—Electric Starter
- Group 10—4 and 5-HP Ignition and Charging

System

- Group 15—8 and 10-HP Ignition and Charging System
- Group 20—4 HP (2-Cycle) Ignition System

SECTION 50—POWER TRAIN—TRS22, TRS/TRX24 & 26

- Group 05—Drive Belt Care and Maintenance
- Group 10—Power Train Repair
- Group 15—Blower and Auger Drive Repair

SECTION 55—POWER TRAIN—TRS27 AND 32

- Group 05—Drive Belt Care and Maintenance
- Group 10—Power Train Repair—TRS27 and 32 (S.N. —140000)
- Group 15—Blower and Auger Drive Repair
- Group 20—Power Train Repair—TRS27 and 32 (S.N. 140001—)

SECTION 85—AUGER DRIVE SYSTEM—TRS1

- Group 05—Drive Belt Care and Maintenance
- Group 10—Auger Drive Repair

SECTION 210—TEST AND ADJUSTMENT SPECIFICATIONS/OPERATIONAL CHECKOUT PROCEDURES

- Group 05—Test and Adjustment Specifications
- Group 10—Operational Checkout Procedures

SECTION 220—ENGINE—4-CYCLE ENGINES

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests and Adjustments

SECTION 225—ENGINE—2-CYCLE ENGINES

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests and Adjustments

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

TM1466-20Jan95

COPYRIGHT© 1995
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright© 1989 Deere & Company

10 **SECTION 230—FUEL SYSTEM—4-CYCLE ENGINES**

- Group 05—Component Location—4-Cycle Engine
- Group 10—Theory of Operation
- Group 15—Diagnosis and Adjustments—4-Cycle Engine

20 **SECTION 235—FUEL SYSTEM—2-CYCLE ENGINE**

- Group 05—Component Location—2-Cycle Engine
- Group 10—Theory of Operation
- Group 15—Diagnosis and Tests—2-Cycle Engine

21 **SECTION 240—ELECTRICAL SYSTEM—4-CYCLE ENGINES**

- Group 05—Component Location—4-Cycle Engine
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests and Adjustments—4-Cycle Engine

25 **SECTION 245—ELECTRICAL SYSTEM—2-CYCLE ENGINES**

- Group 05—Component Location—2-Cycle Engine
- Group 10—Theory of Operation
- Group 15—Diagnosis and Adjustments—2-Cycle Engine

40 **SECTION 250—POWER TRAIN—TRS22, TRS/TRX24 AND 26**

- Group 05—Component Location—TRS22, TRS/TRX24 and 26
- Group 10—Theory of Operation
- Group 15—Diagnosis and Adjustments—TRS22, TRS/TRX24 and 26

50 **SECTION 255—POWER TRAIN—TRS27, AND 32**

- Group 05—Component Location—TRS27 and 32
- Group 10—Theory of Operation
- Group 15—Diagnosis and Adjustments—TRS27 and 32

85 **SECTION 280—AUGER DRIVE SYSTEM—2 STAGE**

- Group 05—Component Location—2 Stage
- Group 10—Theory of Operation
- Group 15—Diagnosis and Adjustments—2 Stage

210 **SECTION 285—AUGER DRIVE SYSTEM—TRS21**

- Group 05—Component Location—Single Stage
- Group 10—Theory of Operation
- Group 15—Diagnosis and Adjustments—Single Stage

Section 10 GENERAL INFORMATION

Contents

Page

Group 05—Safety 10-05-1

Group 10—General Specifications

Machine Specifications

TRS21 and 22 10-10-1

TRS/TRX24 and 26 10-10-3

TRS27 and 32 10-10-6

Group 15—Repair Specifications

Repair Specifications

TRS21/21ES 10-15-1

TRS22 and TRS/TRX24 10-15-2

TRS/TRX26 10-15-5

TRS27 and 32 10-15-7

Inch Cap Screw Torque Values 10-15-10

Set Screw Seating Torque Chart 10-15-11

Group 20—Fuels and Lubricants

Two-Cycle Gasoline Engine Oil 10-20-1

Two-Cycle Engine Fuel 10-20-1

Fuel 10-20-2

Engine Oil 10-20-2

Gear Oil 10-20-3

Grease 10-20-3

Group 25—Serial Number Locations

Serial Number Information 10-25-1

Product Identification Number Location . . 10-25-1


Engine Serial Number Location 10-25-2

Group 30—Features and Accessories . . 10-30-1

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

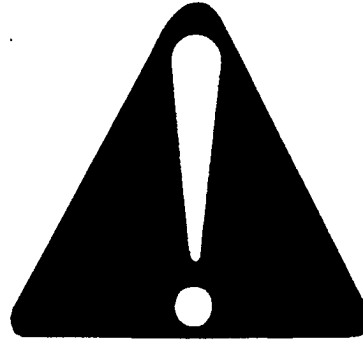

DX,ALERT -19-04JUN90

10
05
1
-UN-07DEC88
T81389

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-09JAN92

-19-30SEP88
TS187

FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.



DX,READ -19-04JUN90

-UN-23AUG88
TS201

10
05
2

HANDLE FLUIDS SAFELY—AVOID FIRES

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.



DX,FLAME -19-04JUN90


-UN-23AUG88
TS227

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

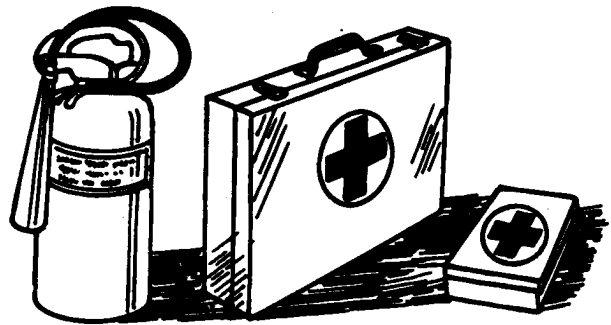

DX,FIRE2 -19-04JUN90

-UN-23AUG88
TS291


WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

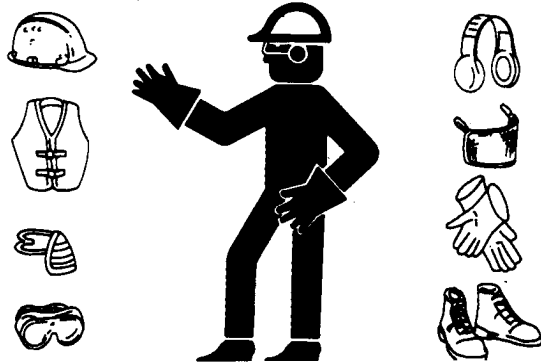


DX,WEAR -19-10SEP90

-UN-23AUG88
TS206

SERVICE MACHINES SAFELY

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

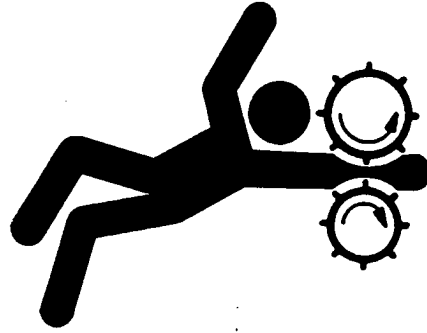

DX, LOOSE -19-04JUN90

TS228 -UN-23AUG88

3910

WORK IN VENTILATED AREA

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.




DX, AIR -19-04JUN90

TS220 -UN-23AUG88

WORK IN CLEAN AREA

Before starting a job:

- Clean work area and machine.
- Make sure you have all necessary tools to do your job.
- Have the right parts on hand.
- Read all instructions thoroughly; do not attempt shortcuts.

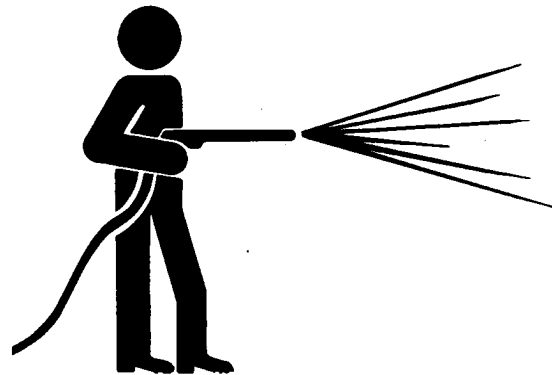

DX, CLEAN -19-04JUN90

T6642EJ -UN-18OCT88

10
05
4

REMOVE PAINT BEFORE WELDING OR HEATING


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

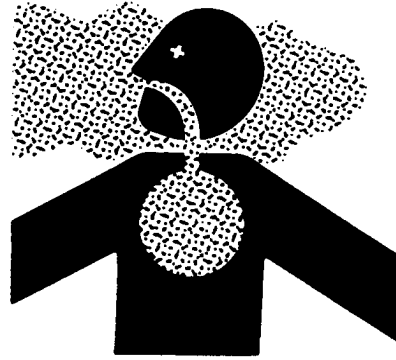

TS220 -UN-23AUG88

DX,PAINT -19-04JUN90

ILLUMINATE WORK AREA SAFELY

Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.



TS223 -UN-23AUG88

DX,LIGHT -19-04JUN90

REPLACE SAFETY SIGNS

Replace missing or damaged safety signs. See the machine operator's manual for correct safety sign placement.



TS201 -UN-23AUG88

DX,SIGNS1 -19-04JUN90

SERVICE TIRES SAFELY

Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job.

Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.

When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.



DX,TIRECP -19-24AUG90

51910
-UN-12APR90
TS952

PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate or service machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.



MX,SERV,CP -19-16JUL92

TS218
-UN-23AUG88

10
05
6

USE PROPER TOOLS

Use tools appropriate to the work. Makeshift tools and procedures can create safety hazards.

Use power tools only to loosen threaded parts and fasteners.

For loosening and tightening hardware, use the correct size tools. DO NOT use U.S. measurement tools on metric fasteners. Avoid bodily injury caused by slipping wrenches.

Use only service parts meeting John Deere specifications.



-UN-08NOV89
TS779

DX,REPAIR -19-04JUN90


DISPOSE OF WASTE PROPERLY

Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

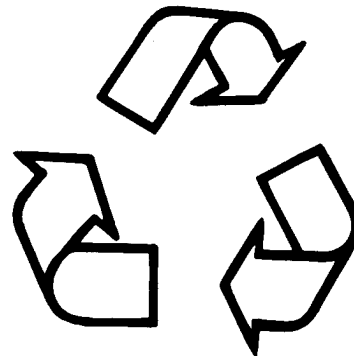

-UN-26NOV90
TS1133

MX,DRAIN,CP -19-16JUL92

LIVE WITH SAFETY

Before returning machine to customer, make sure machine is functioning properly, especially the safety systems. Install all guards and shields.



-19-07OCT88
TS231

DX,LIVE -19-04JUN90

DO NOT MODIFY SNOWBLOWER

Never alter engine governor setting.

Unauthorized modifications to the snowblower may impair the function and/or safety and affect snowblower life.

Do not alter or remove any part of the snowblower impeller clutch mechanism.

MX,1005FA,A1 -19-10OCT89

USE CARE WITH ELECTRICAL CORD (ELECTRIC START MODELS ONLY)

The plug end of power cord is equipped with a third (ground) prong. Do not remove this prong. Be sure to plug electric start power cord into an outlet that is properly grounded and that will accommodate a 3-prong plug.

Do not use an extension cord.

Disconnect power cord from electrical outlet before removing upper shroud of snowblower.

Make sure power cord and connection receptacles are moisture-free before making connection.

Always connect power cord to snowblower before connecting to receptacle.

Always disconnect power cord at receptacle before disconnecting at snowblower.

Disconnect power cord from receptacle before refueling, servicing or removing cowling.

Replace damaged power cord immediately.

MX,1005FA,A2 -19-10OCT89

MACHINE SPECIFICATIONS—TRS21 AND 22

	TRS21	TRS22
ENGINE		
Manufacturer	Tecumseh Snow King	Tecumseh Snow King
Model	HSK840	HSSK40
Type	Air cooled (2)	Air cooled (4)
Horsepower	5 hp (3.73 kW)	4 hp (2.9 kW)
RPM	3600	3600
Displacement	8.46 cu. in. (139 cc)	10.49 cu. in. (172 cc)
Bore	2.440 in. (62 mm)	2.625 in. (67 mm)
Stroke	1.810 in. (46 mm)	1.938 in. (49 mm)
Cooling	Forced air	Forced air
Lubrication		
Type	Pressurized mist (fuel-oil mix)	Splash system
Oil Capacity	N/A	21 U.S. oz (0.62 L)
Fuel		
Type Required	2-Cycle 50:1 gas/oil mixture	Lead-free or leaded Regular grade gasoline
Fuel Tank Capacity	1.5 U.S. qt	2 U.S. qt
Carburetor	Float-type with primer	Float-type with primer
Fuel Filter	In-line	Fine mesh molded in fuel tank
Electrical		
Ignition	Electronic	Flywheel magneto, solid state
Spark Plug	Resistor	Resistor
Starter	Recoil	Recoil
Electric Start	Factory installed	Attachment
Alternator	N/A	Attachment
Headlight	N/A	Attachment
Component Construction		
Bearings		
PTO End	Needle bearings	Aluminum alloy
Flywheel End	Needle bearings	Aluminum alloy
Crankshaft	Iron alloy	Iron alloy
Cylinder	Aluminum alloy with cast iron sleeve	Aluminum alloy
Valves		
Intake	N/A	Heat treated alloy steel
Exhaust	N/A	Austentic steel
Guides	N/A	Iron alloy inserts
Seats	N/A	One piece iron alloy, cast integrally into cylinder

MACHINE SPECIFICATIONS—TRS21 AND 22

	TRS21	TRS22
SNOW THROWER		SNOW BLOWER
Stages	1	2
Clearing Width	21 in. (533 mm)	22 in. (559 mm)
Auger		
Type	Rubber ribbon	Serrated ribbon
Diameter	9 in. (229 mm)	10 in. (254 mm)
Housing Opener		
Height	12 in. (305 mm)	13.5 in. (343 mm)
Drive-Clutch	V-belt from engine to auger	V-belt from engine to blower shaft
Drive-gear case	N/A	Worm on blower shaft-to-gear on auger shaft
Blower		
Diameter	9 in. (229 mm)	10 in. (254 mm)
Number of Blades	2	4
Discharge Chute		
Rotation	0—190 degrees	0—200 degrees
Traction Drive System		
Drive components	N/A	Primary reduction—V-belt from engine to transmission. Transmission—spring loaded friction disk driven from aluminum input disk. Gear reduction to axle shaft. Pin in hub and axle
Differential	N/A	
Speeds		
1st	N/A	0.90 mph (1.45 km/h)
2nd	N/A	1.20 mph (1.93 km/h)
3rd	N/A	1.50 mph (2.41 km/h)
4th	N/A	1.90 mph (3.06 km/h)
5th	N/A	2.25 mph (3.62 km/h)
6th	N/A	2.50 mph (4.02 km/h)
Reverse 1	N/A	1.00 mph (1.61 km/h)
Reverse 2	N/A	1.15 mph (1.85 km/h)
Wheels	Semi-pneumatic	Steel 9 x 2 in.
Tires	N/A	Pneumatic turf tread 12.5 x 4 in.
OVERALL DIMENSIONS		
Length	46 in. (1168 mm)	N/A
Width	21 in. (533 mm)	N/A
Height	36 in. (914 mm)	N/A
Shipping Weight		
Recoil Start	72 lb (33 kg)	N/A
Electric Start	75 lb (34 kg)	N/A

(Specifications and design subject to change without notice.)

MX,1010FA,A9A -19-05AUG92

**MACHINE SPECIFICATIONS—TRS/TRX24
AND 26**

	TRS24	TRX24	TRS26	TRX26
ENGINE				
Manufacturer	Tecumseh Snow King	Tecumseh Snow King	Tecumseh Snow King	Tecumseh Snow King
Model	HSSK50	HSSK50	HMSK80	HMSK80
Type (cycle)	Air cooled (4)	Air cooled (4)	Air cooled (4)	Air cooled (4)
Horsepower	5 hp (3.73 kW)	5 hp (3.73 kW)	8 hp (6 kW)	8 hp. (6 kW)
RPM	3700	3700	3700	3700
Displacement	12.04 cu. in. (197 cc)	12.04 cu. in. (197 cc)	19.43 cu. in. (318 cc)	19.43 cu. in. (318 cc)
Bore	2.813 in. (71.5 mm)	2.813 in. (71.5 mm)	3.125 in. (79.4 mm)	3.125 in. (79.4 mm)
Stroke	1.938 in. (49.2 mm)	1.938 in. (49.2 mm)	2.532 in. (64.3 mm)	2.532 in. (64.3 mm)
Cooling	Forced air	Forced air	Forced air	Forced air
Lubrication				
Type	Splash system	Splash system	Splash system	Splash system
Oil capacity	21 U.S. oz. (0.62 L)	21 U.S. oz. (0.62 L)	26 U.S. oz. (0.77 L)	26 U.S. oz. (0.77 L)
Fuel				
Type required	Lead-free or leaded regular grade gasoline			
Fuel tank capacity	2 U.S. qt. (1.9 L)	2 U.S. qt. (1.9 L)	4 U.S. qt. (3.79 L)	4 U.S. qt. (3.79 L)
Carburetor		Float-type with primer.		
Fuel filter		Fine mesh molded in fuel tank.		
Electrical				
Ignition	Flywheel magneto solid state	Flywheel magneto solid state	Flywheel magneto solid state	Flywheel Magneto solid state
Spark plug	Resistor	Resistor	Resistor	Resistor
Alternator	Attachment	Attachment	Standard	Standard
Electric start	Attachment	Attachment	Attachment	Attachment
Headlight	Attachment	Attachment	Attachment	Attachment
Component Construction				
Bearings				
PTO end	Aluminum alloy	Aluminum alloy	Replaceable bronze bushing	Replaceable bronze bushing
Flywheel end	Aluminum alloy	Aluminum alloy	Aluminum alloy	Aluminum alloy
Crankshaft	Iron alloy	Iron alloy	Iron alloy	Iron alloy
Cylinder	Aluminum alloy	Aluminum alloy	Aluminum alloy	Aluminum alloy

MX,1010FA,A5 -19-05AUG92

General Specifications/Machine Specifications

10
10
4

	TRS24	TRX24	TRS26	TRX26
Valves				
Intake	Heat treated alloy steel	Heat treated alloy steel	Heat treated alloy steel	Heat treated alloy steel
Exhaust	Austenitic steel	Austenitic steel	Austenitic steel	Austenitic steel
Guides	Iron alloy inserts	Iron alloy inserts	Iron alloy inserts	Iron alloy inserts
Seats		One piece iron alloy, cast integrally into cylinder.		
SNOW BLOWER				
Stages	2	2	2	2
Clearing width	24.25 in. (616 mm)	24.25 in. (616 mm)	26.25 in. (667 mm)	26.25 in. (667 mm)
Auger				
Type	Serrated ribbon	Serrated ribbon	Serrated ribbon	Serrated ribbon
Diameter	12 in. (305 mm)	12 in. (305 mm)	12 in. (305 mm)	12 in. (305 mm)
Auger shaft diameter	0.75 in. (19 mm)	0.75 in. (19 mm)	0.75 in. (19 mm)	0.75 in. (19 mm)
Drive-clutch		V-belt from engine to blower shaft.		
Drive-gear case		Worm on blower shaft—to gear on auger shaft.		
Blower				
Diameter	12 in. (305 mm)	12 in. (305 mm)	12 in. (305 mm)	12 in. (305 mm)
Number of blades	4	4	4	4
Discharge chute rotation	200 degrees	200 degrees	200 degrees	200 degrees
Traction Drive System				
Drive components		Primary reduction—V-belt from engine to transmission. Transmission—spring loaded friction disk driven from aluminum input disk. Gear reduction to axle shaft.		
Differential (TRS only)	Pin in hub and axle		Pin in hub and axle	

MX,1010FA,A5A -19-05AUG92

General Specifications/Machine Specifications

	TRS24	TRX24	TRS26	TRX26
SNOW BLOWER—Continued				
Traction Drive System—Continued				
Speeds				
1st	0.90 mph (1.45 km/h)	0.65 mph (1.05 km/h)	0.90 mph (1.45 km/h)	0.65 mph (1.05 km/h)
2nd	1.20 mph (1.93 km/h)	0.80 mph (1.29 km/h)	1.20 mph (1.93 km/h)	0.80 mph (1.29 km/h)
3rd	1.50 mph (2.41 km/h)	1.00 mph (1.61 km/h)	1.50 mph (2.41 km/h)	1.00 mph (1.61 km/h)
4th	1.90 mph (3.06 km/h)	1.20 mph (1.93 km/h)	1.90 mph (3.06 km/h)	1.20 mph (1.93 km/h)
5th	2.25 mph (3.62 km/h)	1.40 mph (2.25 km/h)	2.25 mph (3.62 km/h)	1.40 mph (2.25 km/h)
6th	2.50 mph (4.02 km/h)	1.50 mph (2.41 km/h)	2.50 mph (4.02 km/h)	1.50 mph (2.41 km/h)
Reverse 1	1.00 mph (1.61 km/h)	0.65 mph (1.05 km/h)	1.00 mph (1.61 km/h)	0.65 mph (1.05 km/h)
Reverse 2	1.15 mph (1.85 km/h)	0.70 mph (1.13 km/h)	1.15 mph (1.85 km/h)	0.70 mph (1.13 km/h)
Wheels	Steel	N/A	Steel	N/A
Tires	Pneumatic turf tread 12 x 6 in.	N/A	Pneumatic turf tread 13.5 x 6 in.	N/A
Tracks				
Design	N/A	Multiple lug, grip traction	N/A	Multiple lug, grip traction
Material	N/A	Nylon reinforced, dual durometer rubber	N/A	Nylon reinforced dual durometer rubber
Size	N/A	51 x 4.75 in.	N/A	51 x 4.75 in.
OVERALL DIMENSIONS				
Length	62.25 in. (1581 mm)	62.25 in. (1581 mm)	62.25 in. (1581 mm)	62.25 in. (1581 mm)
Width	25.5 in. (647 mm)	25.5 in. (647 mm)	27.5 in. (698 mm)	27.5 in. (698 mm)
Height	41.5 in. (1054 mm)	41.5 in. (1054 mm)	41.5 in. (1054 mm)	41.5 in. (1054 mm)
Shipping Weight	247 lb. (111 kg)	266 lb. (120 kg)	276 lb. (124 kg)	289 lb. (130 kg)

(Specifications and design subject to change without notice.)

MX,1010FA,A6 -19-18AUG92

10
10
5

MACHINE SPECIFICATIONS—TRS27 AND 32

	TRS27	TRS32
ENGINE		
Manufacturer	Tecumseh Snow King	Tecumseh Snow King
Model	HMSK80	HMSK100
Type (cycle)	Air cooled (4)	Air cooled (4)
Horsepower	8 hp (6 kW)	10 hp (7.5 kW)
RPM	3700	3700
Displacement	19.43 cu. in. (318 cc)	21.82 cu. in. (358 cc)
Bore	3.125 in. (79.9 mm)	3.313 in. (84.4 mm)
Stroke	2.531 in. (64.3 mm)	2.531 in. (64.3 mm)
Cooling	Forced air	Forced air
Lubrication		
Type	Splash system	Splash system
Oil capacity	26 U.S. oz. (0.77 L)	26 U.S. oz. (0.77 L)
Oil fill	Extended oil fill and dipstick on top of cylinder cover	
Fuel		
Type required	Lead-free or leaded regular grade gasoline	
Fuel tank capacity	1 U.S. gal. (3.79 L)	1 U.S. gal. (3.79 L)
Carburetor	Float-type with primer.	
Fuel filter	Fine mesh molded in fuel tank.	
Electrical		
Ignition	Flywheel magneto with key switch (solid state)	
Spark plug	Resistor	Resistor
Alternator	Standard	Standard
Electric start	Attachment	Attachment
Headlight	Standard	Standard
Component Construction		
Bearings		
PTO end	Replaceable bronze bushing	Replaceable bronze bushing
Flywheel end	Aluminum alloy	Aluminum alloy
Crankshaft	Iron alloy	Iron alloy
Cylinder	Aluminum alloy	Aluminum alloy
Valves		
Intake	Heat treated alloy steel	Heat treated alloy steel
Exhaust	Austenitic steel	Austenitic steel
Guides	Iron alloy inserts	Iron alloy inserts
Seats	One piece iron alloy, cast integrally into cylinders.	
Muffler	Soft-tone	Soft-tone

MX,1010FA,A7 -19-03AUG92

General Specifications/Machine Specifications

	TRS27	TRS32
SNOW BLOWER		
Starter	Manual rewind with compression release Accepts 120 Volt, electric start kit	
Stages	2	2
Clearing width	27.25 in. (692 mm)	32.25 in. (819 mm)
Auger		
Type	Serrated ribbon	Serrated ribbon
Housing opening (height)	23.50 in. (597 mm)	23.50 in. (597 mm)
Diameter	16 in. (406 mm)	16 in. (406 mm)
Shaft diameter	1.0 in. (25.4 mm)	1.0 in. (25.2 mm)
Drive—clutch	V-belt from engine to blower shaft	
Drive gear case	Worm on blower shaft—to gear on auger shaft	
Blower		
Diameter	12 in. (305 mm)	12 in. (305 mm)
Number of blades	4	4
Discharge chute rotation	220 degrees	220 degrees
Traction drive system		
Drive components	Primary reduction—V-belt from engine to transmission Transmission—spring loaded friction disc driven from aluminum input disk. Gear reduction to axle shaft	
Differential		
Speeds		
1st	1.00 mph (1.61 km/h)	1.00 mph (1.61 km/h)
2nd	1.45 mph (2.33 km/h)	1.45 mph (2.33 km/h)
3rd	1.90 mph (3.06 km/h)	1.90 mph (3.06 km/h)
4th	2.34 mph (3.77 km/h)	2.34 mph (3.77 km/h)
5th	2.78 mph (4.47 km/h)	2.78 mph (4.47 km/h)
6th	3.23 mph (5.20 km/h)	3.23 mph (5.20 km/h)
Reverse 1	0.90 mph (1.45 km/h)	0.90 mph (1.45 km/h)
Reverse 2	1.70 mph (2.74 km/h)	1.70 mph (2.74 km/h)
Wheels	Steel	Steel
Tires	Pneumatic 4.8 x 4.0-8 turf Diamond tread	Pneumatic 16 x 6.5-8 turf Diamond tread
OVERALL DIMENSIONS		
Length	66.5 in (1.689 mm)	66.5 in (1.689 mm)
Width	27.5 in. (698 mm)	32.5 in. (825 mm)
Height	41.5 in. (1054 mm)	41.5 in. (1054 mm)
Shipping weight	290 lb. (131 kg)	305 lb. (137 kg)

(Specifications and design subject to change without notice.)

TRS21/21ES REPAIR SPECIFICATIONS

Item	Measurement	Specification
SECTION 25—ENGINE REPAIR (5 HP)		
Blower Housing Cap Screw	Torque	105 lb-in. (12 N•m)
Carburetor Mounting Nut	Torque	135 lb-in. (15 N•m)
Carburetor Float	Level	Float Gauge or 3/16 in. (4.76 mm) drill bit
Crankcase Halves Cap Screw	Torque	162 lb-in. (18 N•m)
Crankshaft		
PTO Journal	Diameter	0.9833—0.9838 in. (24.976—24.9888 mm)
Crankpin Journal	Diameter	0.9710—0.9715 in. (24.663—24.676 mm)
Flywheel Journal	Diameter	0.7864—0.7869 in. (19.975—19.987 mm)
Flywheel Nut	Torque	32 lb-ft. (43 N•m)
Governor Following Lever Cap Screw	Torque	65 lb-in. (7 N•m)
Muffler Cap Screw	Torque	110 lb-in. (12.5 N•m)
Piston Ring	End Gap	0.007—0.017 in. (0.178—0.432 mm)
Recoil Starter Roll Pin	Depth	Install within 0.125 in. (3 mm) of top of starter housing
SECTION 40—ELECTRICAL		
Electric Starter Mounting Cap Screw	Torque	70 lb-in. (7.5 N•m)
Ignition Module	Air Gap	0.0125 in. (0.32 mm)
Stator Cap Screw	Torque	70 lb-in. (705 N•m)

TRS22 AND TRS/TRX24 REPAIR SPECIFICATIONS

10
15
2

Item	Measurement	Specification
SECTION 20—ENGINE REPAIR (4 and 5 HP)		
Carburetor Mounting Nut	Torque	60 lb-in. (6.7 N·m)
Carburetor Float	Level	Float gauge or 7/32 in. (5.56 mm) drill bit
Camshaft Bearing Journal	Diameter (Min)	0.4975 in. (12.637 mm)
Connecting Rod Cap Screw	Torque	170 lb-in. (19 N·m)
Connecting Rod	I.D. (Crankpin End) (Max)	1.0005—1.0010 in. (25.413—25.425 mm)
Crankcase Cover Cap Screw	Torque	90 lb-in. (10 N·m)
Crankshaft		
PTO Journal	Diameter	0.9985—0.9990 in. (25.362—25.375 mm)
Crankpin Journal	Diameter	0.9995—1.0000 in. (25.387—25.400 mm)
Flywheel Journal	Diameter	0.9985—0.9990 in. (25.362—25.375 mm)
	End Play	0.005—0.027 in. (0.127—0.680 mm)
Cylinder Block		
Crankshaft Bearing Bore	I.D. (Max)	1.0010 in. (25.425 mm)
Piston Bore	I.D. (STD)	2.813 in. (71.45 mm) (Max)
Piston Bore	I.D. Wear (Max)	0.005 in. (0.127 mm)
Piston Bore	Crosshatch Pattern	45 degrees
Cylinder Head Cap Screw	Torque	180 lb-in. (20.3 N·m)
Cylinder Head	Distortion (Max)	0.002 in. (0.05 mm)
Flywheel Nut	Torque	52 lb-ft (70 N·m)
Governor Shaft	Exposed Length	1.31 in. (33.34 mm)
Intake Manifold Cap Screw	Torque	84 lb-in. (9.5 N·m)
Muffler Cap Screw	Torque	120 lb-in. (13.5 N·m)

Continued on next page

Item	Measurement	Specification
Piston	Diameter (TRS22) Diameter (TRS/TRX24)	2.6202—2.6210 in. (66.553—66.573 mm) 2.8072—2.8080 in. (71.303—71.323 mm)
Piston-to-Piston Bore	Clearance	0.0040—0.0058 in. (0.102—0.147 mm)
Piston Rings	End Gap (Max)	0.01—0.02 in. (0.254—0.508 mm)
Compression Rings	Side Clearance	0.002—0.005 in. (0.051—0.127 mm)
Oil Control Ring	Side Clearance	0.001—0.004 in. (0.025—0.102 mm)
Cylinder Bore		
TRS22	Diameter (Max)	2.626 in. (66.70 mm)
TRS/TRX24	Diameter (Max)	2.813 in. (71.45 mm)
Recoil Starter Roll Pin	Installation	Within 0.125 in. (3 mm) of top of starter housing
Spark Plug	Torque	250 lb-in. (28 N·m)
Valve	Margin (Min)	0.0312 in. (0.792 mm)
Valve Spring	Squareness Tolerance (Max)	0.09 in. (2.387 mm)
	Free Length	1.56 in. (36.690 mm)
	Compressed Length	0.70 in. (17.856 mm)
	Compressed Tension	48 lbs (21.77 kg)
Valve Guide	Inside Diameter (STD)	0.312—0.313 in. (7.924—7.950 mm)
	Inside Diameter (Oversize)	0.343—0.344 in. (8.712—8.737 mm)
	Wear Tolerance (Max)	0.0015—0.0020 in. (0.038—0.050 mm)
Valve Stem	Bend (Max)	0.001 in. (0.03 mm)
	Diameter (Intake) (STD)	0.309—0.310 in. (7.848—7.874 mm)
	Diameter (Intake) (Oversize)	0.340—0.341 in. (8.636—8.661 mm)
	Diameter (Exhaust) (STD)	0.308—0.309 in. (7.823—7.848 mm)
	Diameter (Exhaust) (Oversize)	0.339—0.340 in. (8.610—8.636 mm)
Valve-To-Tappet	Clearance	0.008 in. (0.2 mm)

Continued on next page

Repair Specifications/Repair Specifications

10
15
4

Item	Measurement	Specification
SECTION 40—ELECTRICAL		
Electric Starter Mounting Cap Screw	Torque	70 lb-in. (7.5 N·m)
Ignition Module	Air Gap	0.0125 in. (0.32 mm)
Stator Cap Screw	Torque	70 lb-in. (7.5 N·m)
SECTION 50—POWER TRAIN		
Traction Drive Sheave Set Screw	Torque	44 lb-in. (5 N·m)

MX,1010FA,A1A -19-18AUG92

TRS/TRX26 REPAIR SPECIFICATIONS

Item	Measurement	Specification
SECTION 21—ENGINE REPAIR (8 HP)		
Carburetor Mounting Nut	Torque	60 lb-in. (6.7 N·m)
Carburetor Float	Level	Float gauge or 7/32 in. (5.56 mm) drill bit
Camshaft Bearing Journal	Diameter (Max)	0.6230 in. (15.82 mm)
Connecting Rod Cap Screw	Torque	170 lb-in. (19 N·m)
Connecting Rod	I.D. (Crankpin End) (Max)	1.0005—1.0010 in. (25.413—25.425 mm)
Crankcase Cover Cap Screw	Torque	90 lb-in. (10 N·m)
Crankshaft		
PTO Journal	Diameter	0.9985—0.9990 in. (25.362—25.375 mm)
Crankpin Journal	Diameter	0.9995—1.0000 in. (25.387—25.400 mm)
Flywheel Journal	Diameter	0.9985—0.9990 in. (25.362—25.375 mm)
Crankshaft	End Play	0.005—0.027 in. (0.127—0.680 mm)
Cylinder Block		
Crankshaft Bearing Bore	I.D. (Max)	1.3770 in. (34.976 mm)
Piston Bore	I.D. (STD)	3.126 in. (79.40 mm)
Piston Bore	I.D. Wear (Max)	0.005 in. (0.127 mm)
Piston Bore	Crosshatch Pattern	45 degrees
Cylinder Head Cap Screw	Torque	180 lb-in. (20.3 N·m)
Cylinder Head	Distortion (Max)	0.002 in. (0.05 mm)
Flywheel Nut	Torque	52 lb-ft (70 N·m)
Governor Shaft	Exposed Length	1.31 in. (33.34 mm)
Intake Manifold Cap Screw	Torque	84 lb-in. (9.5 N·m)
Muffler Cap Screw	Torque	120 lb-in. (13.5 N·m)
Piston	Diameter	3.1195—3.1205 in. (79.235—79.261 mm)

Continued on next page

Item	Measurement	Specification
Piston-to-Piston Bore	Clearance	0.0045—0.0065 in. (0.114—0.165 mm)
Piston Rings	End Gap (Max)	0.01—0.02 in. (0.254—0.508 mm)
Compression Rings	Side Clearance	0.002—0.005 in. (0.051—0.127 mm)
Oil Control Ring	Side Clearance	0.001—0.004 in. (0.025—0.102 mm)
Recoil Starter Nut	Torque	60 lb-in. (7 N·m)
Recoil Starter Roll Pin	Installation	Within 0.125 in. (3 mm) of top of starter housing
Spark Plug	Torque	250 lb-in. (28 N·m)
Valve	Margin (Min)	0.0312 in. (0.792 mm)
Valve Spring	Squareness Tolerance (Max)	0.09 in. (2.387 mm)
	Free Length	1.56 in. (36.690 mm)
	Compressed Length	0.70 in. (17.856 mm)
	Compressed Tension	48 lbs (21.77 kg)
Valve Guide	Inside Diameter (STD)	0.312—0.313 in. (7.924—7.950 mm)
	Inside Diameter (Oversize)	0.343—0.344 in. (8.712—8.737 mm)
	Wear Tolerance (Max)	0.0015—0.0020 in. (0.038—0.050 mm)
Valve Stem	Bend (Max)	0.001 in. (0.03 mm)
	Diameter (Intake) (STD)	0.309—0.310 in. (7.848—7.874 mm)
	Diameter (Intake) (Oversize)	0.340—0.341 in. (8.636—8.661 mm)
	Diameter (Exhaust) (STD)	0.308—0.309 in. (7.823—7.848 mm)
	Diameter (Exhaust) (Oversize)	0.339—0.340 in. (8.610—8.636 mm)
Valve-To-Tappet	Clearance	0.008 in. (0.2 mm)

SECTION 40—ELECTRICAL

Electric Starter Mounting Cap Screw	Torque	70 lb-in. (7.5 N·m)
Ignition Module	Air Gap	0.0125 in. (0.32 mm)
Stator Cap Screw	Torque	70 lb-in. (7.5 N·m)

SECTION 50—POWER TRAIN

Traction Drive Sheave Set Screw	Torque	44 lb-in. (5 N·m)
---------------------------------	--------	-------------------

TRS27 AND 32 REPAIR SPECIFICATIONS

Item	Measurement	Specification
SECTION 21—ENGINE REPAIR (8 AND 10 HP)		
Carburetor Mounting Nut	Torque	60 lb-in. (6.7 N·m)
Carburetor Float	Level	Float gauge or 7/32 in. (5.56 mm) drill bit
Camshaft Bearing Journal	Diameter (Max)	0.6230 in. (15.82 mm)
Connecting Rod Cap Screw	Torque	170 lb-in. (19 N·m)
Connecting Rod	I.D. (Crankpin End) (Max)	1.0005—1.0010 in. (25.413—25.425 mm)
Crankcase Cover Cap Screw	Torque	90 lb-in. (10 N·m)
Crankshaft	Diameter	0.9985—0.9990 in. (25.362—25.375 mm)
PTO Journal	Diameter	0.9995—1.0000 in. (25.387—25.400 mm)
Crankpin Journal	Diameter	0.9985—0.9990 in. (25.362—25.375 mm)
Flywheel Journal	End Play	0.005—0.027 in. (0.127—0.680 mm)
Crankshaft		
Cylinder Block		
Crankshaft Bearing Bore	I.D. (Max)	1.3770 in. (34.976 mm)
Piston Bore (8-HP)	I.D. (STD)	3.126 in. (79.40 mm)
Piston Bore (10-HP)	I.D. (STD)	3.313 in. (84.15 mm)
Piston Bore	I.D. Wear (Max)	0.005 in. (0.127 mm)
Piston Bore	Crosshatch Pattern	45 degrees
Cylinder Head Cap Screw	Torque	180 lb-in. (20.3 N·m)
Cylinder Head	Distortion (Max)	0.002 in. (0.05 mm)
Flywheel Nut	Torque	52 lb-ft (70 N·m)
Governor Shaft	Exposed Length	1.31 in. (33.34 mm)
Intake Manifold Cap Screw	Torque	84 lb-in. (9.5 N·m)
Muffler Cap Screw	Torque	120 lb-in. (13.5 N·m)

Continued on next page

Item	Measurement	Specification
Piston (8-HP)	Diameter	3.1195—3.1205 in. (79.235—79.261 mm)
Piston (10-HP)	Diameter	3.3098—3.3108 in. (84.069—84.094 mm)
Piston-to-Piston Bore (8-HP)	Clearance	0.0045—0.0065 in. (0.114—0.165 mm)
Piston-to-Piston Bore (10-HP)	Clearance	0.0012—0.0032 in. (0.030—0.081 mm)
Piston Rings	End Gap (Max)	0.01—0.02 in. (0.254—0.508 mm)
Compression Rings (8-HP)	Side Clearance	0.002—0.005 in. (0.051—0.127 mm)
Compression Rings (10-HP)	Side Clearance	0.0015—0.0035 in. (0.038—0.089 mm)
Oil Control Ring	Side Clearance	0.001—0.004 in. (0.025—0.102 mm)
Recoil Starter Nut	Torque	60 lb-in. (7 N·m)
Recoil Starter Roll Pin	Installation	Within 0.125 in. (3 mm) of top of starter housing
Spark Plug	Torque	250 lb-in. (28 N·m)
Valve	Margin (Min)	0.0312 in. (0.792 mm)
Valve Spring	Squareness Tolerance (Max)	0.09 in. (2.387 mm)
	Free Length	1.56 in. (36.690 mm)
	Compressed Length	0.70 in. (17.856 mm)
	Compressed Tension	48 lbs (21.77 kg)
Valve Guide	Inside Diameter (STD)	0.312—0.313 in. (7.924—7.950 mm)
	Inside Diameter (Oversize)	0.343—0.344 in. (8.712—8.737 mm)
	Wear Tolerance (Max)	0.0015—0.0020 in. (0.038—0.050 mm)
Valve Stem	Bend (Max)	0.001 in. (0.03 mm)
	Diameter (Intake) (STD)	0.309—0.310 in. (7.848—7.874 mm)
	Diameter (Intake) (Oversize)	0.340—0.341 in. (8.636—8.661 mm)
	Diameter (Exhaust) (STD)	0.308—0.309 in. (7.823—7.848 mm)
	Diameter (Exhaust) (Oversize)	0.339—0.340 in. (8.610—8.636 mm)
Valve-To-Tappet	Clearance	0.008 in. (0.2 mm)
SECTION 40—ELECTRICAL		
Electric Starter Mounting Cap Screw	Torque	70 lb-in. (7.5 N·m)
Ignition Module	Air Gap	0.0125 in. (0.32 mm)
Stator Cap Screw	Torque	70 lb-in. (7.5 N·m)

Continued on next page

Repair Specifications/Repair Specifications

10
15
9

Item	Measurement	Specification
SECTION 55—POWER TRAIN		
Blower and Auger Axle	End Play (Max)	0.0625 in. (1.59 mm)
Traction Wheel Assembly Hexagonal Shaft	End Play (Max)	0.0625 in. (1.59 mm)
Traction Wheel Assembly Wheel Nut	Torque	45 lb-ft (61 N·m)

MX,1010FA,A4 -19-05AUG92

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**