


STAMFORD®

Installation, Service & Maintenance Manual for AC generators with prefix MV734

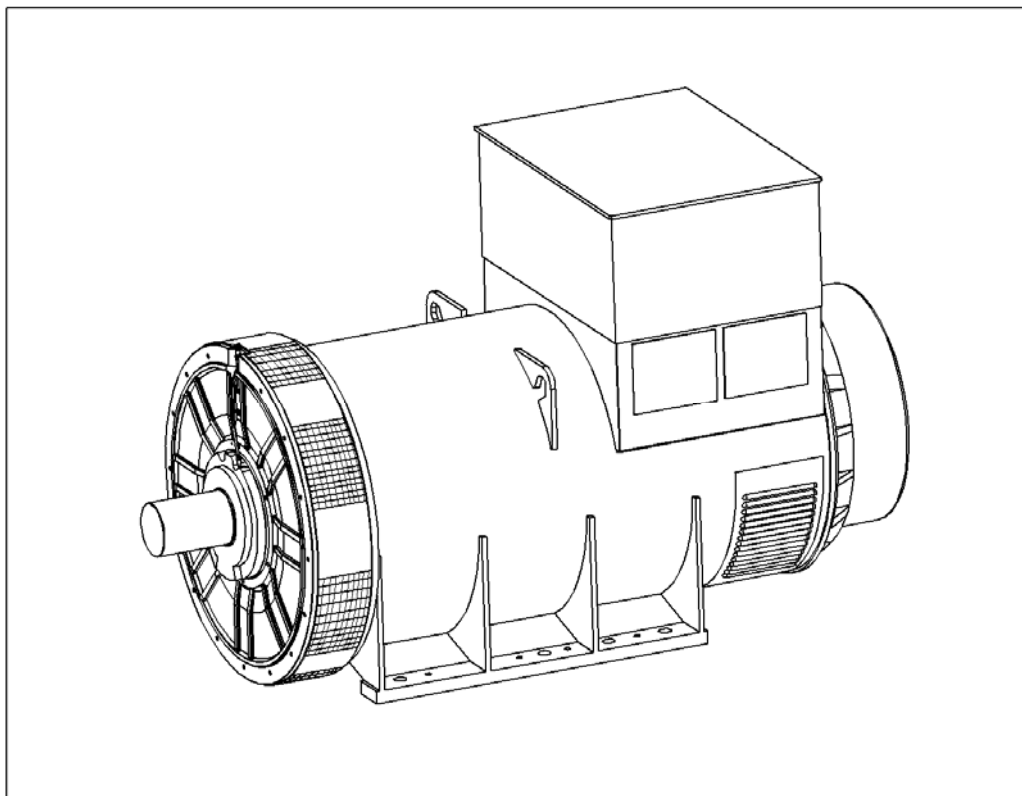

SAFETY PRECAUTIONS

Before operating the generating set, read the generating set operation manual and this generator manual and become familiar with it and the equipment.

SAFE AND EFFICIENT OPERATION CAN ONLY BE ACHIEVED IF THE EQUIPMENT IS CORRECTLY OPERATED AND MAINTAINED.

Many accidents occur because of failure to follow fundamental rules and precautions.

ELECTRICAL SHOCK CAN CAUSE SEVERE PERSONAL INJURY OR DEATH.

- Ensure installation meets all applicable safety and local electrical codes. Have all installations performed by a qualified electrician.
- Do not operate the generator with protective covers, access covers or terminal box covers removed.
- Disable engine starting circuits before carrying out maintenance.
- Disable closing circuits and/or place warning notices on any circuit breakers normally used for connection to the mains or other generators, to avoid accidental closure.

Observe all **IMPORTANT, CAUTION, WARNING, and DANGER** notices, defined as:

Important ! Important refers to hazard or unsafe method or practice which can result in product damage or related equipment damage.

Caution ! Caution refers to hazard or unsafe method or practice which can result in product damage or personal injury.



Warning !

Warning refers to a hazard or unsafe method or practice which CAN result in severe personal injury or possible death.




Danger !

Danger refers to immediate hazards which will result in severe personal injury or death.

FOREWORD

The function of this book is to provide the user of the Stamford generator with an understanding of the principles of operation, the criteria for which the generator has been designed, and the installation and maintenance procedures. Specific areas where the lack of care or use of incorrect procedures could lead to equipment damage and/or personal injury are highlighted, with WARNING and/or CAUTION notes, and it is IMPORTANT that the contents of this book are read and understood before proceeding to fit or use the generator.

Our Service, Sales and Technical staff of are always ready to assist and reference to the company for advice is welcomed.



Warning ! **Incorrect installation, operation, servicing or replacement of parts can result in severe personal injury or death, and/or equipment damage.** **Service personnel must be qualified to perform electrical and mechanical service.**

EC DECLARATION OF INCORPORATION

All Stamford generators are supplied with a declaration of incorporation for the relevant EC legislation, typically in the form of a label as below.

EC Declaration of Incorporation

In accordance with the EC's Machinery Directive 98/37/EEC (as amended)

This STAMFORD a.c. synchronous generator is manufactured in accordance with the above directive the generator is defined as 'component machinery'. When the generator is incorporated into a Generating-set the resultant 'machinery' must not be put into service until the machinery into which it is being incorporated has been declared in conformity with the provisions of the directive.

The manufacturer's authorised responsible person or as the manufacturer's representative in the Community is:

Signed . . . *K.W. Marsh*

Mr. K. W. Marsh, Engineering Director,
Barnack Road
Stamford
Lincolnshire
PE9 2NB
United Kingdom

This component machinery carries the CE Mark for compliance with the statutory requirements for the implementation of the following additional directives.

1) The EMC Directive 89/336/EEC as amended.
(This component machinery shall not be used in the Residential, Commercial and Light Industrial environment unless it also conforms to the relevant standard
(EN 61000-6-3). Refer to Factory for details).

2) The Low Voltage Directive 73/23/EEC as amended.

DRAWING REF: 2450-15319

Under the EC Machinery Directive section 1.7.4. It is the responsibility of the generator set builder to ensure the generator serial and identity numbers are clearly displayed in the white box provided on the front cover of this book.

ELECTROMAGNETIC COMPATIBILITY

Additional Information

European Union

Council Directive 89/336/EEC

For installations within the European Union, electrical products must meet the requirements of the above directive, and this company supplies ac generators on the basis that:

- They are to be used for power-generation or related function.
- They are to be applied in one of the following environments:
 - Portable (open construction - temporary site supply)
 - Portable (enclosed - temporary site supply)
 - Containerised (temporary or permanent site supply)
 - Ship-borne below decks (marine auxiliary power)
 - Commercial vehicle (road transport / refrigeration etc)
 - Rail transport (auxiliary power)
 - Industrial vehicle (earthmoving, cranes etc)
 - Fixed installation (industrial - factory / process plant)
 - Fixed installation (residential, commercial and light industrial - home / office / health)
 - Energy management (Combined heat and power and/or peak lopping)
 - Alternative energy schemes
- The standard generators are designed to meet the 'industrial' emissions and immunity standards. Where the generator is required to meet the residential, commercial and light industrial emissions and immunity standards reference should be made to document reference N4/X/011, as additional equipment may be required.
- The installation earthing scheme involves connection of the generator frame to the site protective earth conductor using a minimum practical lead length.
- Maintenance and servicing with anything other than factory supplied or authorised parts will invalidate our liability for EMC compliance.
- Installation, maintenance and servicing is carried out by adequately trained personnel fully aware of the requirements of the relevant EC directives.

CONTENTS

SAFETY PRECAUTIONS			IFC
FOREWORD			1
CONTENTS			2
SECTION 1		INTRODUCTION	4
	1.1	INTRODUCTION	4
	1.2	DESIGNATION	4
SECTION 2		PRINCIPLE OF OPERATION	5
SECTION 3		APPLICATION OF THE GENERATOR	6
SECTION 4		INSTALLATION - PART 1	8
	4.1	LIFTING	8
	4.2	ENGINE TO GENERATOR COUPLING ASSEMBLY	8
	4.2.1	TWO BEARING MACHINES	8
	4.2.2	SINGLE BEARING MACHINES	8
	4.3	EARTHING	9
	4.4	PRE-RUNNING CHECKS	9
	4.4.1	INSULATION CHECK	9
	4.4.2	DIRECTION OF ROTATION	9
	4.4.3	VOLTAGE AND FREQUENCY	9
	4.4.4	AVR SETTINGS	9
	4.5	GENERATOR SET TESTING	9
	4.5.1	TEST METERING/CABLING	10
	4.6	INITIAL START-UP	10
	4.7	LOAD TESTING	10
	4.7.1	AVR ADJUSTMENTS	10
	4.7.2	UFRO (Under Frequency Roll Off)	11
	4.7.3	OVER/V (Over Voltage)	11
	4.7.4	EXC TRIP (Excitation Trip)	11
	4.7.5	TRANSIENT LOAD SWITCHING ADJUSTMENTS	11
	4.7.5.1	DIP	11
	4.7.5.2	DWELL	11
	4.8	ACCESSORIES	11
SECTION 5		INSTALLATION - PART 2	12
	5.1	GENERAL	12
	5.2	GLANDING	12
	5.3	EARTHING	12
	5.4	PROTECTION	12
	5.5	COMMISSIONING	13
SECTION 6		ACCESSORIES	14
	6.1	GENERAL	14
	6.2	DROOP	14
	6.2.1	SETTING PROCEDURE	15
	6.2.2	ASTATIC CONTROL	15
	6.3	OVERVOLTAGE DE-EXCITATION BREAKER SX421 AND MX321 AVR	15
	6.3.1	RESETTING THE BREAKER	15
	6.4	FAULT CURRENT LIMIT - TRANSFORMERS	15
	6.4.1	SETTING PROCEDURE	16
	6.5	POWER FACTOR CONTROLLER (PFC3)	16
SECTION 7		SERVICE AND MAINTENANCE	17
	7.1	WINDING CONDITION	17
	7.2	BEARINGS	17
	7.3	AIR FILTERS	18
	7.3.1	CLEANING PROCEDURE	18
	7.3.2	RECHARGING (CHARGING)	18
	7.4	FAULT FINDING	18
	7.5	SEPARATE EXCITATION TEST PROCEDURE	19
	7.5.1	GENERATOR WINDINGS, SENSING TRANSFORMER, ROTATING DIODES AND PMG.	19
	7.5.1.1	BALANCED MAIN TERMINAL VOLTAGES	19
	7.5.1.2	UNBALANCED MAIN TERMINAL VOLTAGES	20
	7.5.2	AVR STATIC TEST	20
	7.5.3	REMOVAL AND REPLACEMENT OF COMPONENT ASSEMBLIES	20
	7.5.3.1	PERMANENT MAGNET GENERATOR	20
	7.5.3.2	REMOVAL OF BEARINGS	21
	7.5.3.3	MAIN ROTOR ASSEMBLY	21
SECTION 8		SPARES AND AFTER SALES SERVICE	23
	8.1	RECOMMENDED SPARES	23
	8.2	SPARES AND AFTER SALES SERVICE	23
SECTION 9		PARTS IDENTIFICATION 24,	26
	Fig. 10	TYPICAL SINGLE BEARING MACHINE	25
	Fig. 11	TYPICAL TWO BEARING MACHINE	27
	Fig. 12	ROTATING RECTIFIER ASSEMBLY	28
WARRANTY DETAILS I			BC
SUBSIDIARY COMPANIES			BC

SECTION 1

INTRODUCTION

1.1 INTRODUCTION


The MV range of generators is of brushless rotating field design, available up to 3.3kV/50Hz (1500 rpm, 4 pole and 4.16kV/60Hz (1800 rpm, 4 pole) and built to meet BS5000 Part 3 and international standards.

All MV generators use a permanent magnet generator (PMG) excitation system incorporating the MX321 AVR. Detailed specification sheets are available on request.

The surface in the area where a label is to be stuck must be flat, clean, and any paint finish be fully dry before attempting to attach label. Recommended method for attaching label is peel and fold back sufficient of the backing paper to expose some 20 mm of label adhesive along the edge which is to be located against the sheet metal protrusions. Once this first section of label has been carefully located and stuck into position the backing paper can be progressively removed, as the label is pressed down into position. The adhesive will achieve a permanent bond in 24 hours.

1.2 DESIGNATION

The generator frame size is designated by a code as follows:-

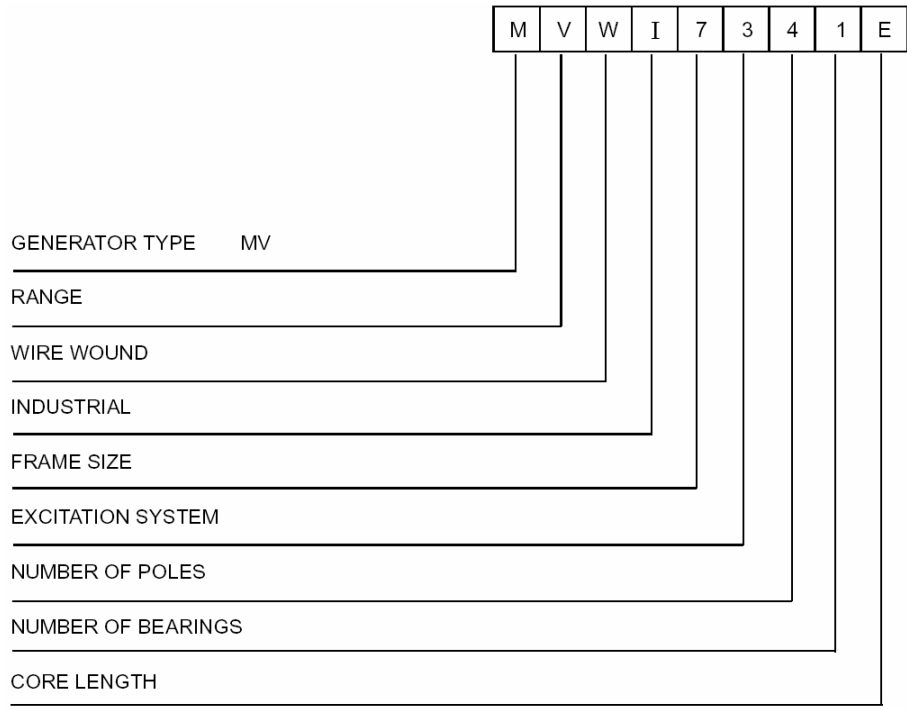

1.3 SERIAL NUMBER LOCATION

Each generator has its unique serial number stamped in to the upper section of the drive end frame end-ring. Inside the terminal box two adhesive rectangular labels have been fixed, each carrying the generators unique identity number. One label has been fixed to the inside of the terminal box sheet metal work, and the second label fixed to the main frame of the generator.

1.4 RATING PLATE

The generator has been supplied with a self adhesive rating plate label to enable fitting after final assembly and painting. It is intended that this label will be stuck to the outside of the non drive end of the terminal box.

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**